UNO-UPS/24DC/24DC/60W

Uninterruptible power supply

Data sheet 106855_en_01

© PHOENIX CONTACT 2015-10-23

1 Description

Uninterruptible power supply units continue to deliver power even in the event of mains breakdowns or failures.

The product described here is an uninterruptible power supply (UPS) with integrated battery module. In the event of mains breakdowns or failures, it switches to battery operation without interruption so that connected loads continue to be consistently supplied.

Features

- Easy, space-saving retrofitting
- Integrated battery modules
- Extensive signaling, LED indicators, switch outputs
- Maximum energy efficiency
- 95% efficiency in mains operation in the case of charged battery modules

Technical data (short form)

| Input voltage range | 22.5 V DC 29.5 V DC |
|--------------------------------------------------------------|----------------------------------------------------------------|
| Nominal output voltage U _{OUT} | 24 V DC (SELV) |
| Nominal output current I _N | 2.5 A |
| Buffer period | 45 min (0.5 A) 20 min (1 A) 8 min (2 A) 5 min (2.5 A) |
| MTBF (IEC 61709, SN 29500) | > 1900000 h (40°C) |
| Efficiency Mains operation, with charged power storage | > 95 % |
| Ambient temperature (operation) | -15 °C 50 °C |
| Weight | 1 kg |
| Dimensions W/H/D | 110 mm / 90 mm / 84 mm |



Make sure you always use the latest documentation. It can be downloaded from the product at <u>phoenixcontact.net/products</u>.



| 2 | | f contents | | | | |
|----|------------------------------------------------------------|----------------------------------|-------------|--|--|--|
| 1 | Description | on | 1 | | | |
| 2 | Table of contents2 | | | | | |
| 3 | Ordering | data | 3 | | | |
| 4 | Technica | ıl data | 4 | | | |
| 5 | Safety reg | gulations and installation notes | 8 | | | |
| 6 | 6.1 Bloc | ck diagram | 9 | | | |
| | 6.3 Conv | ction elements | 0 | | | |
| 7 | 7.1 Norr7.2 Mou7.3 Rem | g/removal | 2 2 2 | | | |
| 8 | Device co 8.1 Insta 8.2 DC i | onnection | 3 3 4 | | | |
| 9 | 9.1 Start 9.2 Batte | n | 4 5 | | | |
| 10 | 10.1 Activ |) indicators and signal outputs | 7 | | | |
| 11 | • | nperature-dependent derating 1 | | | | |

3 Ordering data

| Description | Туре | Order No. | Pcs./Pkt. |
|--------------------------------------------------------------------------------------------------------------|-----------------------|-----------|-----------|
| Uninterruptible power supply with integrated power storage, lead AGM, VRLA technology, 24 V DC, 0.8 Ah. | UNO-UPS/24DC/24DC/60W | 2905907 | 1 |
| Accessories | Туре | Order No. | Pcs./Pkt. |
| Primary-switched UNO POWER power supply for DIN rail mounting, input: 1-phase, output: 24 V DC/60 W | UNO-PS/1AC/24DC/ 60W | 2902992 | 1 |
| Primary-switched UNO POWER power supply for DIN rail mounting, input: 1-phase, output: 24 V DC/100 W | UNO-PS/1AC/24DC/100W | 2902993 | 1 |
| Our range of accessories is being continually extended, our current range can be found in the download area. | | | |

4 Technical data

| Input data | | |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------|--|
| Input voltage range | 22.5 V DC 29.5 V DC | |
| Max. current consumption $(I_{IN} = I_{CHARGE} + I_{BOOST})$ No load $(I_{CHARGE} = 0, I_{OUT} = 0)$ Charging process $(I_{CHARGE} = max., I_{OUT} = 0)$ | 2.8 A < 60 mA < 300 mA | |
| Input fuse, integrated | 5 A (electronic) | |
| General output data | | |
| Nominal output voltage | 24 V DC (SELV) | |
| Output current | 2.5 A | |
| Connection in parallel | yes, with redundancy module | |
| Connection in series | No | |
| Output data (mains operation) | | |
| Nominal output voltage U _{OUT} | 24 V DC | |
| Output voltage range | $U_{Out} = U_{In} - 0.5 \text{ V DC}$ | |
| Nominal output current I _N | 2.5 A | |
| Power Dissipation | 3 W | |
| Efficiency $(I_{CHARGE} = 0, I_{OUT} = I_N)$ | >95 % (Mains operation, with charged power storage) | |
| Output data (battery operation) | | |
| Nominal output voltage U _{OUT} | 24 V DC | |
| Output voltage range | 20 V DC 27.3 V DC | |
| Nominal output current I _N | 2.5 A | |
| Power Dissipation | 6 W | |
| Efficiency $(I_{CHARGE} = 0, I_{OUT} = I_N)$ | > 92 % (Battery operation) | |
| Battery module | | |
| Memory medium | Lead rechargeable battery module | |
| Nominal capacity | 2x 0.8 Ah | |
| Battery type | Yuasa NP0.8-12 | |
| Charge current | 200 mA | |
| Charging time | approx. 5 h | |
| Battery fuse | T 5 A 32 V | |
| Battery presence check (time interval) | 60 s | |
| Buffer period | 45 min (0.5 A) 20 min (1 A) 8 min (2 A) 5 min (2.5 A) | |
| Status and diagnostic indicator POWER IN OK | | |
| Status indication | LED (green) , Static to | |
| Status and diagnostic indicators/signal outputs Bat | tery Mode | |
| Switching output | Transistor (24 V DC/15 mA) | |
| Status indication | LED (green) , flashing | |
| Status and diagnostic indicators/signal outputs Battery Charge | | |
| Status indication | LED (green) , flashing | |

| Status and diagnostic indicators/signal of | outputs Alarm |
|--------------------------------------------|-------------------------------------------|
| | - |
| Switching output | Transistor (24 V DC/15 mA) |
| Status indication | LED (red) , Static to |
| Status and diagnostic indicator Service | |
| Status indication | LED (red) , flashing |
| Remote control | |
| Version 1 : Output R1 to input R2 | Plug-in bridge |
| Version 2 : Input R2 | + 24 V DC |
| Housing | |
| Housing material | PC (polycarbonate) |
| Foot latch material | POM (Polyoxymethylen) |
| Dimensions W/H/D | 110 mm / 90 mm / 84 mm |
| Mounting position | horizontal DIN rail NS 35, EN 60715 |
| Concerci data | |
| General data | 4 km |
| Weight | 1 kg |
| MTBF (IEC 61709, SN 29500) | > 1900000 h (40°C) |
| Security | |
| Degree of protection | IP20 |
| Protection class | III |
| Input connection data | |
| Connection method | Screw connection |
| Conductor cross section, solid | 0.2 mm ² 2.5 mm ² |
| Conductor cross section, flexible | 0.2 mm ² 2.5 mm ² |
| Conductor cross section AWG/kcmil | 24 14 |
| Stripping length | 7 mm |
| Screw thread | М3 |
| Tightening torque | 0.5 Nm 0.6 Nm |
| Output connection data | |
| Connection method | Screw connection |
| Conductor cross section, solid | 0.2 mm ² 2.5 mm ² |
| Conductor cross section, flexible | 0.2 mm ² 2.5 mm ² |
| Conductor cross section AWG/kcmil | 24 14 |
| Stripping length | 7 mm |
| Screw thread | М3 |
| Tightening torque | 0.5 Nm 0.6 Nm |
| Signal connection data | |
| Connection method | Screw connection |
| Conductor cross section, solid | 0.2 mm ² 2.5 mm ² |
| Conductor cross section, flexible | $0.2 \text{ mm}^2 \dots 2.5 \text{ mm}^2$ |
| Conductor cross section, include | 24 14 |
| Stripping length | 7 mm |
| Screw thread | M3 |
| Tightening torque | 0.5 Nm 0.6 Nm |

| Ambient conditions | | |
|--------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|--|
| Ambient temperature (operation) | -15 °C 50 °C | |
| Ambient temperature (storage/transport) | -20 °C 60 °C | |
| Max. permissible relative humidity (operation) | ≤ 95 % (at 25 °C, non-condensing) | |
| Vibration (operation) | < 13.2 Hz, amplitude ±1.0 mm (according to IEC 60068-2-6) 13.2 Hz 100 Hz, 0.7g | |
| Shock | 30g in each direction, according to IEC 60068-2-27 | |
| Pollution degree in acc. with EN 50178 | 2 | |
| Standards Electrical safety (of information technology equipment) | EN 60950-1/VDE 0805 (SELV) | |
| Electronic equipment for use in electrical power installations | EN 50178/VDE 0160 (PELV) | |
| Approvals | | |
| UL approvals | UL Listed UL 508 UL/C-UL Recognized UL 60950 | |
| Current approvals/permissions for the product can be found in the download area under phoenixcontact.net/products. | | |

| Conformance with EMC Directive 2004/108/EC | | |
|--------------------------------------------|-----------------------------------------------------------------------------|-------------------------------------------------------------------------|
| Noise immunity according to EN 61000-6-2 | | |
| | EN 61000-6-2 requirement | Tested |
| Electrostatic discharge EN 61000-4-2 | | |
| Housing contact discharge | 4 kV (Test Level 2) | 6 kV (Test Level 3) |
| Housing air discharge | 8 kV (Test Level 3) | 8 kV (Test Level 3) |
| Comments | Criterion B | Criterion A |
| Electromagnetic HF field EN 61000-4-3 | | |
| Frequency range | 80 MHz 3 GHz | 80 MHz 3 GHz |
| Test field strength | 10 V/m (Test Level 3) | 10 V/m (Test Level 3) |
| Comments | Criterion A | Criterion A |
| Fast transients (burst) EN 61000-4-4 | | |
| Input | 2 kV (Test Level 3 - asymmetrical) | 2 kV (Test Level 3 - asymmetrical) |
| Output | 2 kV (Test Level 3 - asymmetrical) | 2 kV (Test Level 3 - asymmetrical) |
| Signal | 1 kV (Test Level 3 - asymmetrical) | 2 kV (Test Level 4 - asymmetrical) |
| Comments | Criterion B | Criterion A |
| Surge current loads (surge) EN 61000-4-5 | | |
| Input | 0.5 kV (Test Level 1 - symmetrical) 0.5 kV (Test Level 1 - asymmetrical) | 1 kV (Test Level 3 - symmetrical) 2 kV (Test Level 3 - asymmetrical) |
| Output | 0.5 kV (Test Level 1 - symmetrical) 0.5 kV (Test Level 1 - asymmetrical) | 1 kV (Test Level 3 - symmetrical) 2 kV (Test Level 3 - asymmetrical) |
| Signal | 1 kV (Test Level 2 - asymmetrical) | 1 kV (Test Level 2 - asymmetrical) |
| Comments | Criterion B | Criterion A |
| Conducted interference EN 61000-4-6 | | |
| Input/Output/Signal | asymmetrical | asymmetrical |
| Frequency range | 0.15 MHz 80 MHz | 0.15 MHz 80 MHz |
| Voltage | 10 V (Test Level 3) | 10 V (Test Level 3) |
| Comments | Criterion A | Criterion A |
| | | |
| Criterion A | Normal operating behavior within the s | • |
| Criterion B | Temporary impairment to operational b self. | ehavior that is corrected by the device |
| | | |

Emitted interference in acc. with EN 61000-6-3

Emitted radio interference in acc. with EN 55011

EN 55011 (EN 55022) Class B, area of application: Industry and residential

1

All technical specifications are nominal values and refer to a room temperature of 25 °C and 70 % relative humidity at 2000 m above sea level.

5 Safety regulations and installation notes



EXPLOSION HAZARD!

Only remove equipment when it is disconnected and not in the potentially explosive area.

DANGER

Never carry out work on live parts! The housing can become very hot, depending on the ambient temperature and load!



CAUTION:

Before startup please ensure:

The connection must be carried out by a competent person and protection against electric shock guaranteed.

It must be possible to switch off power to device according to EN 60950.

All feed lines are sufficiently protected and dimensioned!

All output lines are dimensioned according to the maximum output current of the device or separately protected!

Sufficient convection must be guaranteed.

Observe mechanical and thermal limits.



CAUTION:

A battery can present a risk of electrical shock, burn from high shortcircuit current, fire or explosion from vented gases. Observe proper precautions.



CAUTION:

Keep flames, embers or sparks away from the UPS.



CAUTION: Risk of injury

Cover termination area after installation in order to avoid accidental contact with live parts (e. g., installation in control cabinet).



NOTE: Danger if used improperly

Uninterruptible power supplies are installable devices. Installation and startup may only be carried out by qualified personnel. The relevant country-specific regulations must be observed.

6 Structure

6.1 Block diagram



| Element | Meaning |
|----------|------------------------|
| - | Fuse |
| ₽ | Decoupling |
| \ \ | Switch |
| μC | Microprocessor |
| Į Į į į | LED |
| θ | Temperature sensor |
| | Selector switch |
| + | Battery module |
| = | DC/DC converter |
| | Electrolytic capacitor |
| | Fuse element (PTC) |

6.2 Function elements









| No. | Connection terminal blocks and function elements |
|-----|----------------------------------------------------------|
| 1 | UPS |
| 2 | Input terminal block 24 V DC |
| 3 | Output terminal block 24 V DC |
| 4 | LED: status indicator |
| 5 | Fuse holder |
| 6 | Rotary selector switch |
| 7 | Signal contacts |
| 8 | Storage/transport position of the fuse |
| 9 | Battery module connector plug (any slot can be selected) |
| 10 | Base latch |
| 11 | Battery modules |

6.3 Convection







i

NOTE: enable convection

The housing can become very hot, depending on the ambient temperature and module load. In order to ensure sufficient convection, we recommend a minimum vertical distance of 30 mm to the other devices.

The device can be snapped onto all DIN rails in accordance with EN 60715 and should be mounted in the normal mounting position.

6.4 Dimensions and mounting positions









Figure 5 Device dimensions

7 Mounting/removal

7.1 Normal mounting position



Figure 6 Normal mounting position

7.2 Mounting on a DIN rail

Position the module with the DIN rail guide on the upper edge of the DIN rail, and snap it in with a downward motion.



7.3 Removal from the DIN rail

Pull back the snap-on catch using a screwdriver and detach the module from the bottom edge of the DIN rail.



7.4 Notes on disposal



Do not dispose of the UPS and battery modules in household waste! They should be disposed of according to the currently applicable national regulations.



You can return old batteries and accumulators to Phoenix Contact.

8 Device connection

8.1 Installation of individual components



Figure 7 Schematic design

1

The image is a schematic representation of the design and does not contain all parts. Observe the installation instructions.

Power supply

Use a current-limited source (e.g., UNO POWER power supply) or connect a suitable fuse upstream.



It must be possible to disconnect the power supply unit connected upstream (e.g., UNO POWER) from the outside (e.g., by line protection on the primary side).



Use copper cables with an operating temperature > $75^{\circ}C$ (ambient temperature < $55^{\circ}C$) and > $90^{\circ}C$ (ambient temperature < $75^{\circ}C$).



To ensure symmetrical current distribution, all cable connections from the power supply unit to the busbar must be the same length and have the same conductor cross section.

UNO-UPS uninterruptible power supply

 Input DC: The input DC is connected to the output DC of the power supply (e.g. UNO POWER).

 Output DC: in the event of mains interruption or failure, the connected DC load is supplied with voltage without interruption.

 Signal R1, R2: activation/deactivation of the UPS functionality

8.2 DC input

The supply voltage is connected via "Input" connection terminal blocks.



Figure 8 Input

8.3 DC output

The output voltage is connected via the "Output" connection terminal blocks.



Figure 9 Output

9 Operation

9.1 Startup

1. Inserting the fuse

Remove the fuse from the storage/transport position and insert the fuse into the fuse holder.



Figure 10 Insert fuse into fuse holder

2. Connecting cables



Use copper cables with an operating temperature > 75° C (ambient temperature < 55° C) and > 90° C (ambient temperature < 75° C).



Figure 11 Connecting cables

- Connect the supply lines to the "Input" connection terminal blocks.
- Connect the output lines to the "Output" connection terminal blocks.

3. Setting the buffer time

You can set the time for exiting battery mode via the rotary selector switch on the front of the device. For this purpose use a screwdriver.



Figure 12 Buffer time selector switch



Figure 13 Setting the buffer time

| t _{max} [min] setting | Meaning |
|--------------------------------------|-------------------------------------------------|
| 1, 5, 10, 20 | The UPS switches off after the set buffer time. |
| ∞ (unlimited, delivery state) | Buffering with the total stored power |

Using the chart select the resulting values for the buffer time and discharge current.



Figure 14 Buffer time/discharge current diagram

9.2 Battery replacement



The batteries are maintenance free and may not be opened.

1

i

When replacing batteries, always use two new batteries from the same production batch.

When storing the battery modules, observe the latest startup date and recharge, if necessary. The batteries may only be recharged in an uninterruptible power supply.

1. Setting the Service mode

To change the battery modules, select service mode via the rotary selector switch on the front of the UPS.



The alarm signal output is activated if the batteries are not removed in service mode!



Figure 15 Buffer time selector switch

2. Opening the battery compartment

Unscrew the screw connection of the battery compartment on the front of the UPS. Use a suitable screwdriver to do this.



Figure 16 Loosen the screw connection

Open the battery compartment by folding the cover forward.



Figure 17 Open/close the cover

3. Remove the battery modules

Remove both connectors from the PCB and remove the batteries.





4. Insert the battery modules

Plug the connectors onto the PCB (the order is not important).

Then store the cables between the battery modules.

5. Closing the battery compartment

Close the cover of the battery compartment.

Fix the cover by tightening the screw using the screwdriver.

6. Setting the buffer time

Exit Service mode.

Set the buffer time (see Section 9.1).

9.3 Remote control (contact R1, R2)

Battery operation of the UPS can be switched on and off via a signal to contacts R1/R2. Shutdown can take place during mains operation or active battery operation.

Remote shutdown is deactivated

UPS in function (delivery state)

- The "R1" and "R2" terminal points are short circuited (delivery with plug-in bridge) OR 24 V DC is present at terminal point "R2".
- In the event of a voltage supply failure, the UPS switches over to battery mode.



NOTE:

In the event of a supply voltage failure, the UPS switches over to battery operation. The load connected to the DC output is supplied by the battery modules.

Remote shutdown is activated

- Terminal points "R1" and "R2" are not short circuited and 0 V is applied at terminal point "R2".
- In the event of a voltage supply failure, the UPS does not switch over to battery mode. The device switches off.



NOTE:

If the supply voltage fails, the UPS does not switch to battery operation. The load connected to the DC output is not supplied by the battery modules.

10 Signaling

Various LED indicators are available for visual function monitoring of uninterruptible power supplies. Moreover, active signal outputs can be used to forward this data to a higherlevel control system.



Figure 19 LED mode indicator



Figure 20 Alarm/service LED indicator

10.1 Active signal outputs

The 24 V DC signal is applied between the "Alarm" or "Bat.-Mode" and "Input" or "Output" connection terminal blocks and can carry up to 15 mA.



10.2 LED indicators and signal outputs

For UPS signaling and the corresponding states, please refer to the table.

| Status LED | | Switching output | | | |
|------------|-----------|------------------|-----------------------|--------------------------------------------------------------------------------|--|
| Green | Red | BatMode | Alarm (active low) | Note | |
| | 0 | OFF | ON | Mains operation | |
| | - D = 50% | OFF | ON | Mains operation, service mode for battery change | |
| | | OFF | OFF | Mains operation, battery failure | |
| | 0 | OFF | ON | Mains operation, battery charging in process | |
| - D = 50% | | OFF | OFF | System initialization (3 sec.) | |
| | | OFF | OFF | Mains operation, battery charging in process, battery failure | |
| | 0 | ON | ON | Battery mode | |
| - D = 10% | - D = 50% | ON | ON | Battery mode, service mode for battery change | |
| | • | ON | OFF | Battery mode, battery voltage low or battery failure | |
| | 0 | OFF | ON | Mains operation, remote contact (R1/R2) open | |
| | - D = 50% | OFF | ON | Mains operation, remote contact (R1/R2) open, service mode for battery change | |
| | • | OFF | OFF | Mains operation, remote contact (R1/R2) open, battery failure | |
| _ | 0 | OFF | OFF | Input voltage not present / invalid range | |
| 0 | | OFF | OFF | Undervoltage or overvoltage | |
| | | OFF | OFF | Input voltage not present / invalid range, output switched off in battery mode | |
| | | = 10% = 50% | - LED | flashing 🕒 LED on 🔿 LED off | |
| 100% | | = 90% | | | |

Figure 22 LED indicators and signal outputs

11 Derating

11.1 Temperature-dependent derating

In the ambient temperature range, the uninterruptible power supply supplies the nominal current (I $_{\rm N}).$



Figure 23 Temperature-dependent derating