

# Digital Controller for Isolated Power Supply with PMBus Interface

Data Sheet ADP1051

#### **FEATURES**

Versatile digital voltage mode controller
High speed input voltage feedforward control
6 pulse-width modulation (PWM) logic outputs with 625 ps
resolution

Switching frequency: 49 kHz to 625 kHz

Frequency synchronization as master and slave device

Multiple energy saving modes

Adaptive dead time compensation for efficiency optimization

Low device power consumption: 100 mW typical

Direct parallel control for power supplies without OR'ing devices

**Accurate droop current share** 

Pre-bias startup

**Reverse current protection** 

**Conditional overvoltage protection** 

**Extensive fault detection and protection** 

**PMBus compliant** 

Graphical user interface (GUI) for ease of programming

On-board EEPROM for programming and data storage

Available in a 24-lead, 4 mm  $\times$  4 mm LFCSP

-40°C to +125°C operating temperature

#### **APPLICATIONS**

High density isolated dc-to-dc power supplies Intermediate bus converters

High availability parallel power systems

Server, storage, industrial, networking, and communications infrastructure


#### **GENERAL DESCRIPTION**

The ADP1051 is an advanced digital controller with a PMBus<sup>TM</sup> interface targeting high density, high efficiency dc-to-dc power conversion. This controller implements voltage mode control with high speed, input line feedforward for enhanced transient and improved noise performance. The ADP1051 has six programmable pulse-width modulation (PWM) outputs capable of controlling most high efficiency power supply topologies, with added control of synchronous rectification (SR). The device includes adaptive dead time compensation to improve efficiency over the load range, and programmable light load mode operation, combined with low power consumption, to reduce system standby power losses.

The ADP1051 implements several features to enable a robust system of parallel and redundant operation for customers that require high availability or parallel connection. The device provides synchronization, reverse current protection, pre-bias startup, accurate current sharing between power supplies, and conditional overvoltage techniques to identify and safely shut down an erroneous power supply in parallel operation mode.

The ADP1051 is based on flexible state machine architecture and is programmed using an intuitive GUI. The easy to use interface reduces design cycle time and results in a robust, hardware coded system loaded into the built-in EEPROM. The small size (4 mm  $\times$  4 mm) LFCSP package makes the ADP1051 ideal for ultracompact, isolated dc-to-dc power module or embedded power designs.

#### TYPICAL APPLICATIONS CIRCUIT

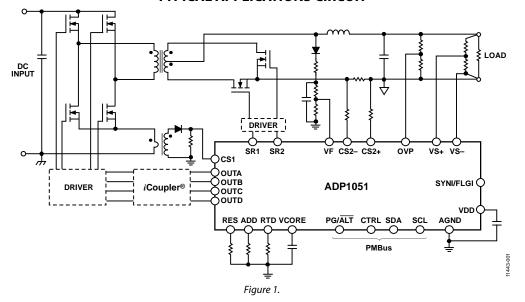

Rev. A

Document Feedback
Information furnished by Analog Devices is believed to be accurate and reliable. However, no
responsibility is assumed by Analog Devices for its use, nor for any infringements of patents or other
rights of third parties that may result from its use. Specifications subject to change without notice. No
license is granted by implication or otherwise under any patent or patent rights of Analog Devices.
Trademarks and registered trademarks are the property of their respective owners.

# ADP1051\* PRODUCT PAGE QUICK LINKS

Last Content Update: 02/23/2017

# COMPARABLE PARTS 🖳

View a parametric search of comparable parts.

### **EVALUATION KITS**

· ADP1051 Evaluation Board

### **DOCUMENTATION**

#### **Application Notes**

 AN-1306: ADP1050 and ADP1051 EEPROM Programming and Calibration in the Power Supply Manufacturing Environment

#### **Data Sheet**

 ADP1051: Digital Controller for Isolated Power Supply with PMBus Interface Data Sheet

#### **User Guides**

 UG-566: 240 W Evaluation Board Kit for the ADP1051, Digital Controller for Isolated Power Supply with PMBus Interface

### SOFTWARE AND SYSTEMS REQUIREMENTS $\Box$

ADP1050/ADP1051/ADP1052 Software

# REFERENCE MATERIALS 🖵

#### Press

 Analog Devices' Next Generation of Digital Power Controllers with PMBus Interface Targets Highest Density, Energy Efficient Isolated Power Converters

#### **Technical Articles**

• Designing Digital Power Supplies With A State Machine

### DESIGN RESOURCES 🖳

- · ADP1051 Material Declaration
- PCN-PDN Information
- · Quality And Reliability
- · Symbols and Footprints

# **DISCUSSIONS**

View all ADP1051 EngineerZone Discussions.

### SAMPLE AND BUY

Visit the product page to see pricing options.

# TECHNICAL SUPPORT 🖵

Submit a technical question or find your regional support number.

# DOCUMENT FEEDBACK 🖳

Submit feedback for this data sheet.

# ADP1051

# **TABLE OF CONTENTS**

Features	Duty Cycle Reading	33
Applications1	Switching Frequency Reading	33
General Description1	Temperature Reading	33
Typical Applications Circuit1	Temperature Linearization Scheme	34
Revision History	PMBus Protection Commands	34
Specifications4	Manufacturer Specific Protection Commands	36
Absolute Maximum Ratings9	Manufacturer Specific Protection Responses	39
Thermal Resistance9	Power Supply Calibration and Trim	40
Soldering9	I <sub>IN</sub> Trim (CS1 Trim)	40
ESD Caution9	I <sub>OUT</sub> Trim (CS2 Trim)	40
Pin Configuration and Function Descriptions 10	V <sub>OUT</sub> Trim (VS Trim)	40
Typical Performance Characteristics	V <sub>IN</sub> Trim (VF Gain Trim)	41
Theory of Operation14	RTD and OTP Trim	41
PWM Outputs (OUTA, OUTB, OUTC, OUTD, SR1, and	Applications Configurations	42
SR2)	Layout Guidelines	43
Synchronous Rectification	CS1 Pin	43
PWM Modulation Limit and 180° Phase Shift	CS2+ and CS2- Pins	43
Adaptive Dead Time Compensation (ADTC)	VS+ and VS- Pins	43
Light Load Mode and Deep Light Load Mode17	OUTA to OUTD, SR1 AND SR2 PWM Outputs	43
Frequency Synchronization17	VDD Pin	43
Output Voltage Sense and Adjustment19	VCORE Pin	43
Digital Compensator21	RES Pin	43
Closed-Loop Input Voltage Feedforward Control and	SDA and SCL Pin	43
VF Sense	Exposed Pad	43
Open-Loop Input Voltage Feedforward Operation22	RTD Pin	43
Open-Loop Operation	AGND Pin	43
Current Sense	PMBus/I <sup>2</sup> C Communication	44
Soft Start and Shutdown	PMBus Features	44
Volt-Second Balance Control	Overview	44
Constant Current Mode27	PMBus/I <sup>2</sup> C Address	44
Pulse Skipping27	Data Transfer	
Pre-Bias Startup27	General Call Support	46
Output Voltage Drooping Control28	10-Bit Addressing	
VDD and VCORE28	Fast Mode	
Chip Password	Fault Conditions	
Power Monitoring, Flags, and Fault Responses29	Timeout Conditions	
Flags	Data Transmission Faults	
Voltage Readings	Data Content Faults	
Current Readings	EEPROM	
Power Readings	EEPROM Features	

EEPROM Overview48
Page Erase Operation48
Read Operation (Byte Read and Block Read)48
Write Operation (Byte Write and Block Write)49
EEPROM Password49
Downloading EEPROM Settings to Internal Registers50
Saving Register Settings to the EEPROM50
EEPROM CRC Checksum50
GUI Software51
PMBus Command Set52
Manufacturer Specific Extended Command List55
PMBus Command Descriptions58
Basic PMBus Commands58
Manufacturer Specific Extended Commands Descriptions77
Flag Configuration Registers77
Soft Start and Software Reset Registers79
REVISION HISTORY
6/14—Rev. 0 to Rev. A
Changes to Table 14
Changes to Table 29
Changes to Pin 24, Table 411
Changes to Frequency Synchronization Section18
Changes to Figure 2824
Changes to VOUT_COMMAND Section60
Changes to Ordering Guide

7/13—Revision 0: Initial Version

	Blanking and PGOOD Setting Registers	80
	Switching Frequency and Synchronization Registers	82
	Current Sense and Limit Setting Registers	83
	Voltage Sense and Limit Setting Registers	88
	Temperature Sense and Protection Setting Registers	89
	Digital Compensator and Modulation Setting Registers	90
	PWM Outputs Timing Registers	93
	Volt-Second Balance Control Registers	95
	Duty Cycle Reading Setting Registers	96
	Adaptive Dead Time Compensation Registers	97
	Other Register Settings1	00
	Manufacturer Specific Fault Flag Registers1	04
	Manufacturer Specific Value Reading Registers1	06
О	utline Dimensions1	08
	Ordering Guide1	08

# **SPECIFICATIONS**

 $V_{DD}$  = 3.0 V to 3.6 V,  $T_J$  = -40°C to +125°C, unless otherwise noted. FSR = full-scale range.

Table 1.

Parameter	Symbol	Min	Тур	Max	Unit	Test Conditions/Comments
SUPPLY						
Supply Voltage	$V_{DD}$	3.0	3.3	3.6	٧	2.2 μF capacitor connected to AGND
Supply Current	I <sub>DD</sub>		28.5	33	mA	Normal operation; PWM pins unloaded
			$I_{DD} + 6$		mA	During EEPROM programming
			50	100	μΑ	Shutdown; V <sub>DD</sub> below undervoltage
						lockout (UVLO)
POWER-ON RESET						
Power-On Reset				3.0	V	V <sub>DD</sub> rising
UVLO Threshold		2.75	2.85	2.97	V	V <sub>DD</sub> falling
UVLO Hysteresis			35		mV	
OVLO Threshold		3.7	3.9	4.1	V	
OVLO Debounce			2		μs	VDD_OV flag debounce set to 2 μs
			500		μs	VDD_OV flag debounce set to 500 μs
VCORE PIN						
Output Voltage	V <sub>CORE</sub>	2.45	2.6	2.75	V	330 nF capacitor connected to AGND
OSCILLATOR AND PLL						
PLL Frequency		190	200	210	MHz	RES input = $10 \text{ k}\Omega \text{ (}\pm 0.1\%\text{)}$
Digital PWM Resolution			625		ps	
OUTA, OUTB, OUTC, OUTD, SR1, SR2 PINS						
Output Low Voltage	V <sub>OL</sub>			0.4	V	$I_{OH} = +10 \text{ mA}$
Output High Voltage	V <sub>OH</sub>	$V_{DD}-0.4$			V	$I_{OL} = -10 \text{ mA}$
Rise Time	t <sub>R</sub>		3.5		ns	$C_{LOAD} = 50 \text{ pF}$
Fall Time	t <sub>F</sub>		1.5		ns	$C_{LOAD} = 50 \text{ pF}$
Output Source Current	I <sub>OL</sub>	-10			mA	
Output Sink Current	I <sub>OH</sub>			10	mA	
Synchronization Signal Output (SYNO) Positive Pulse Width		600	640	680	ns	OUTC or OUTD programmed as SYNO
VS+, VS- VOLTAGE SENSE PINS						
Input Voltage Range	$V_{IN}$	0	1	1.6	٧	Differential voltage from VS+ to VS-
Leakage Current				1.0	μΑ	
VS Accurate ADC						
Valid Input Voltage Range		0		1.6	V	
ADC Clock Frequency			1.56		MHz	
Register Update Rate			10		ms	
Measurement Resolution			12		Bits	
Measurement Accuracy						Factory trimmed at 1.0 V
		-5		+5	% FSR	0% to 100% of input voltage range
		-80		+80	mV	
		-2		+2	% FSR	10% to 90% of input voltage range
		-32		+32	mV	
		-1.0		+1.0	% FSR	900 mV to 1.1 V
		-16		+16	mV	
Temperature Coefficient				70	ppm/°C	
Voltage Differential from VS- to AGND		-200		+200	mV	
VS High Speed ADC						
<b>Equivalent Sampling Frequency</b>	f <sub>SAMP</sub>		$f_{\text{SW}}$		kHz	
Equivalent Resolution			6		Bits	$f_{SW} = 390.5 \text{ kHz}$
Dynamic Range			±25		mV	Regulation voltage = $0 \text{ mV}$ to $1.6 \text{ V}$

Parameter	Symbol	Min	Тур	Max	Unit	Test Conditions/Comments
VS UVP Digital Comparator						Triggers VOUT_UV_FAULT flag
Threshold Accuracy		-2		+2	% FSR	10% to 90% of input voltage range
Comparator Update Speed			82		μs	
OVP PIN						Triggers VOUT_OV_FAULT flag
Leakage Current				1.0	μΑ	
OVP Comparator						
Voltage Range		0.75		1.5	V	Differential voltage from OVP to VS-
Threshold Accuracy		-1.6	1	+1.6	%	0.75 V to 1.5 V voltage range
Propagation Delay (Latency)			61	85	ns	Debounce time not included
VF VOLTAGE SENSE PIN						
Input Voltage Range	V <sub>IN</sub>	0	1	1.6	٧	Voltage from VF to AGND
Leakage Current				1.0	μΑ	
General ADC						
Valid Input Voltage Range		0		1.6	V	
ADC Clock Frequency			1.56		MHz	
Register Update Rate			1.31		ms	
Measurement Resolution			11		Bits	
Measurement Accuracy		-2		+2	% FSR	10% to 90% of input voltage range
•		-32		+32	mV	
		-5		+5	% FSR	0% to 100% of input voltage range
		-80		+80	mV	
VF UVP Digital Comparator						Triggers VIN_LOW or VIN_UV_FAULT flag
Threshold Accuracy						Based on VF general ADC parameter
•						values
Comparator Update Speed			1.31		ms	
Feedforward ADC						
Input Voltage Range	V <sub>IN</sub>	0.5	1	1.6	V	
Resolution			11		Bits	
Sampling Period			10		μs	
CS1 CURRENT SENSE PIN						
Input Voltage Range	V <sub>IN</sub>	0	1	1.6	V	Voltage from CS1 to AGND
Source Current		-1.2		-0.35	μΑ	
CS1 ADC						
Valid Input Voltage Range		0		1.6	V	
ADC Clock Frequency			1.56		MHz	
Register Update Rate			10		ms	
Measurement Resolution			12		Bits	
Measurement Accuracy		-2		+2	% FSR	10% to 90% of input voltage range
		-32		+32	mV	
		-5		+5	% FSR	0% to 100% of input voltage range
		-80		+80	mV	
CS1 OCP Comparator					1	Triggers internal CS1_OCP flag
Reference Accuracy		1.185	1.2	1.215	V	When set to 1.2 V
		0.235	0.25	0.265	V	When set to 0.25 V
Propagation Delay (Latency)			65	105	ns	Debounce/blanking time not included
CS3 <sup>1</sup> Measurement and Digital						Triggers CS3_OC_FAULT flag
Comparator					1	
Register Update Rate			10		ms	
Comparator Speed			10		ms	

Parameter	Symbol	Min	Тур	Max	Unit	Test Conditions/Comments
CS2+, CS2– CURRENT SENSE PINS	<b>'</b>					
Input Voltage Range	V <sub>IN</sub>	0		120	mV	Differential voltage from CS2+ to CS2-
Common-Mode Voltage at CS2+ and CS2–		0.8	1.15	1.4	V	To achieve CS2 measurement accuracy
Current Sink (High Side)		1.87	1.915	1.96	mA	•
Current Source (Low Side)		195	225	255	μΑ	
Temperature Coefficient				95	ppm/°C	
CS2 ADC					' '	
Valid Input Voltage Range		0		120	mV	
ADC Clock Frequency			1.56		MHz	
Measurement Resolution			12		Bits	
Low-Side Mode Current Measurement Sense Accuracy						4.99 k $\Omega$ (0.01%) level shift resistors
Selise Accuracy		-1.9		+1.9	% FSR	From 0 mV to 110 mV
		-2.28		+2.28	mV	Trome my to from
		-6.1		+1.4	% FSR	From 110 mV to 120 mV
		-7.32		+1.68	mV	110111 110 1111 10 120 1111
High-Side Mode Current Measurement Sense Accuracy		7.52		11.00		CS2 high-side factory trim values loaded; 4.99 k $\Omega$ (0.01%) level shift resistors; $V_{OUT} = 11 \text{ V}$
		-1.6		+2.3	% FSR	From 0 mV to 110 mV
		-1.92		+2.76	mV	
		-5.3		+0.7	% FSR	From 110 mV to 120 mV
		-6.36		+0.84	mV	
CS2 OCP Digital Comparator						Triggers IOUT_OC_FAULT flag
Threshold Accuracy						Same as CS2 ADC low-side and high-side mode current measurement sense accuracy values
Comparator Update Speed			82		μs	When set to the 7-bit averaging speed
			328		μs	When set to the 9-bit averaging speed
CS2 Reverse Current Comparator						Triggers SR_RC_FAULT flag
Threshold Accuracy		-8.5	-3	+3	mV	SR_RC_FAULT_LIMIT set to -3 mV
		-11.5	-6	0	mV	SR_RC_FAULT_LIMIT set to -6 mV
		-14	-9	-3	mV	SR_RC_FAULT_LIMIT set to -9 mV
		-17	-12	-6	mV	SR_RC_FAULT_LIMIT set to -12 mV
		-21	-15	-9	mV	SR_RC_FAULT_LIMIT set to -15 mV
		-24	-18	-12	mV	SR_RC_FAULT_LIMIT set to -18 mV
		-27	-21	-15	mV	SR_RC_FAULT_LIMIT set to -21 mV
		-30	-24	-18	mV	SR_RC_FAULT_LIMIT set to -24 mV
Propagation Delay			110	150	ns	Debounce time = 40 ns
RTD TEMPERATURE SENSE PIN						
Input Voltage Range	$V_{IN}$	0		1.6	V	Voltage from RTD to AGND
Source Current		44.6	46	47.3	μΑ	Register 0xFE2D = 0xE6, factory default setting
		38.6	40	42	μΑ	Register 0xFE2D = 0xB0
		28.6	30	31.8	μΑ	Register $0xFE2D = 0x80$
		18.6	20	21.6	μΑ	Register 0xFE2D = 0x40
		9.1	10	11	μΑ	Register $0xFE2D = 0x00$
RTD ADC						
Valid Input Voltage Range		0		1.6	V	
ADC Clock Frequency			1.56		MHz	
Register Update Rate			10		ms	
Measurement Resolution			12		Bits	

Parameter	Symbol	Min	Тур	Max	Unit	Test Conditions/Comments
Measurement Accuracy		-0.3		+0.45	% FSR	2% to 20% of the input voltage range
·		-4.8		+7.2	mV	
		-2		+2	% FSR	0% to 100% of the input voltage range
		-80		+80	mV	
OTP Digital Comparator						Triggers OT_FAULT flag
Threshold Accuracy		-0.9		+0.25	% FSR	T = 85°C with 100 kΩ  16.5 kΩ
		-14.4		+4	mV	
		-0.5		+1.1	% FSR	T = 100°C with 100 kΩ  16.5 kΩ
		-8		+17.6	mV	
Comparator Update Speed			10		ms	
Temperature Readings According to						Source current is set to 46 μA
Internal Linearization Scheme						(Register 0xFE2D = 0xE6); NTC R25 = 100 k $\Omega$
				-	0.0	(1%); beta = 4250 (1%); R <sub>EXT</sub> = 16.5 kΩ (1%)
				7	°C	25°C to 100°C
25 (				5	°C	100°C to 125°C
PG/ALT (OPEN-DRAIN) PIN						
Output Low Level	V <sub>OL</sub>			0.4	V	Sink current = 10 mA
CTRL PIN						
Input Low Level	V <sub>IL</sub>			0.4	V	
Input High Level	V <sub>IH</sub>	$V_{DD} - 0.8$			V	
Leakage Current				1.0	μΑ	
SYNI/FLGI PINS						
Input Low Level	V <sub>IL</sub>			0.4	V	
Input High Level	V <sub>IH</sub>	$V_{DD} - 0.8$			V	
Synchronization Range % of Internal Clock Period	tsync	90		110	%	
SYNI Positive Pulse Width		360			ns	External clock applied on SYNI/FLGI pin
SYNI Negative Pulse Width		360			ns	External clock applied on SYNI/FLGI pin
SYNI Period Drift				280	ns	Period drift between two consecutive external clocks
Leakage Current				1.0	μΑ	
SDA, SCL PINS						
Input Voltage Low	V <sub>IL</sub>			0.8	V	
Input Voltage High	V <sub>IH</sub>	$V_{DD} - 0.8$			V	
Output Voltage Low	$V_{OL}$			0.4	V	Sink current = 3 mA
Leakage Current		-5		+5	μΑ	
SERIAL BUS TIMING						See Figure 2
Clock Operating Frequency		10	100	400	kHz	
Glitch Immunity				50	ns	
Bus Free Time	t <sub>BUF</sub>	1.3			μs	Between stop and start conditions
Start Setup Time	tsu;sta	0.6			μs	Repeated start condition setup time
Start Hold Time	t <sub>HD;STA</sub>	0.6			μs	Hold time after (repeated) start condition; after this period, the first clock is generated
Stop Setup Time	t <sub>SU;STO</sub>	0.6			μs	
SDA Setup Time	t <sub>SU;DAT</sub>	100			ns	
SDA Hold Time	t <sub>HD;DAT</sub>	125			ns	For readback
	. ,	300			ns	For write
SCL Low Timeout	<b>t</b> TIMEOUT	25		35	ms	
SCL Low Time	t <sub>LOW</sub>	0.6			μs	
SCL High Time	thigh	0.6			μs	
SCL Low Extend Time	t <sub>LOW;SEXT</sub>			25	ms	
SCL, SDA Rise Time	t <sub>R</sub>	20		300	ns	
SCL, SDA Fall Time	t <sub>F</sub>	20		300	ns	

Parameter	Symbol	Min	Тур	Max	Unit	Test Conditions/Comments
EEPROM						
EEPROM Update Time				40	ms	Time from the update command to completion of the EEPROM update
Reliability						
Endurance <sup>2</sup>		10,000			Cycles	T <sub>J</sub> = 85°C
		1000			Cycles	T <sub>J</sub> = 125°C
Data Retention <sup>3</sup>		20			Years	T <sub>J</sub> = 85°C
		15			Years	T <sub>J</sub> = 125°C

<sup>&</sup>lt;sup>1</sup> CS3 is an alternative output current reading that is calculated by the CS1 reading (representing input current), duty cycle, and main transformer turn ratio. <sup>2</sup> Endurance is qualified as per JEDEC Standard 22, Method A117, and is measured at –40°C, +25°C, +85°C, and +125°C. <sup>3</sup> Retention lifetime equivalent at junction temperature as per JEDEC Standard 22, Method A117.

### **Timing Diagram**

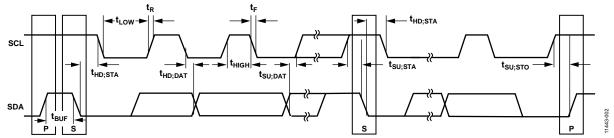


Figure 2. Serial Bus Timing Diagram

### **ABSOLUTE MAXIMUM RATINGS**

Table 2.

1 4010 21	
Parameter	Rating
Supply Voltage (Continuous) VDD to AGND	4.2 V
Digital Pins (OUTA, OUTB, OUTC, OUTD, SR1, SR2, PG/ALT, SDA, SCL) to AGND	$-0.3 \text{ V to V}_{DD} + 0.3 \text{ V}$
PG/ALT, SDA, SCL to AGND	-0.3 V to +3.9 V
VS-, VS+, VF, OVP, RTD, ADD, CS1, CS2+, CS2- to AGND	$-0.3 \text{ V to V}_{DD} + 0.3 \text{ V}$
SYNI/FLGI, CTRL to AGND	$-0.3 \text{ V to V}_{DD} + 0.3 \text{ V}$
Operating Temperature Range (T <sub>A</sub> )	−40°C to +125°C
Storage Temperature Range	−65°C to +150°C
Junction Temperature	150°C
Peak Solder Reflow Temperature	
SnPb Assemblies (10 sec to 30 sec)	240°C
RoHS-Compliant Assemblies (20 sec to 40 sec)	260°C
ESD Charged Device Model	1.25 kV
ESD Human Body Model	5.0 kV

Stresses above those listed under Absolute Maximum Ratings may cause permanent damage to the device. This is a stress rating only; functional operation of the device at these or any other conditions above those indicated in the operational section of this specification is not implied. Exposure to absolute maximum rating conditions for extended periods may affect device reliability.

#### THERMAL RESISTANCE

 $\theta_{JA}$  is specified for the worst-case conditions, that is, a device soldered in a circuit board for surface-mount packages.

**Table 3. Thermal Resistance** 

Package Type	θја	θις	Unit
24-Lead LFCSP	36.26	1.51	°C/W

#### **SOLDERING**

It is important to follow the correct guidelines when laying out the printed circuit board (PCB) footprint for the ADP1051 and for soldering the part onto the PCB. For detailed information about these guidelines, see the AN-772 Application Note, A Design and Manufacturing Guide for the Lead Frame Chip Scale Package (LFCSP).

#### **ESD CAUTION**



**ESD** (electrostatic discharge) sensitive device. Charged devices and circuit boards can discharge without detection. Although this product features patented or proprietary protection circuitry, damage may occur on devices subjected to high energy ESD. Therefore, proper ESD precautions should be taken to avoid performance degradation or loss of functionality.

# PIN CONFIGURATION AND FUNCTION DESCRIPTIONS

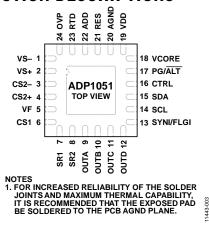


Figure 3. Pin Configuration

**Table 4. Pin Function Descriptions** 

Pin No.	Mnemonic	Description
1	VS-	Inverting Voltage Sense Input. This is the connection for the ground line of the power rail. Provide a low ohmic connection to AGND. To allow for trimming, it is recommended that the resistor divider on this input have a tolerance specification of $\leq 0.5\%$ .
2	VS+	Noninverting Voltage Sense Input. This signal is referred to VS $-$ . To allow for trimming, it is recommended that the resistor divider on this input have a tolerance specification of $\leq 0.5\%$ .
3	CS2-	Inverting Differential Current Sense Input. For best operation, use a nominal voltage of 1.12 V. When using low-side current sensing, place a 4.99 k $\Omega$ level shifting resistor between the sense resistor and this pin. When using high-side current sensing in a 12 V application, place a 5.62 k $\Omega$ resistor between the sense resistor and this pin. When using high-side current sensing, apply the formula R = $(V_{OUT} - 1.12 \text{ V})/1.915 \text{ mA}$ . A 0.1% resistor must be used to connect this circuit. If this pin is not used, connect it to AGND and set the CS2 current sense to high-side current sense mode (Register 0xFE19[7] = 1 binary).
4	CS2+	Noninverting Differential Current Sense Input. For best operation, use a nominal voltage of 1.12 V. When using low-side current sensing, place a 4.99 k $\Omega$ level shifting resistor between the sense resistor and this pin. When using high-side current sensing in a 12 V application, place a 5.62 k $\Omega$ resistor between the sense resistor and this pin. When using high-side current sensing, apply the formula R = (V <sub>OUT</sub> – 1.12 V)/1.915 mA. A 0.1% resistor must be used to connect this circuit. If this pin is not used, connect it to AGND and set the CS2 current sense to high-side current sense mode (Register 0xFE19[7] = 1 binary).
5	VF	Three optional functions can be implemented with this pin: feedforward, primary side input voltage sensing, and input voltage UVLO protection. The pin is connected upstream of the output inductor through a resistor divider network. The nominal voltage at this pin should be 1 V. This signal is referred to AGND.
6	CS1	Primary Side Current Sense Input. This pin is connected to the primary side current sensing ADC and to the cycle-by-cycle current-limit comparator. This signal is referred to AGND. The resistors on this input must have a tolerance specification of ≤0.5% to allow for trimming. Connect this pin to AGND if not in use.
7	SR1	PWM Logic Output Drive. This pin can be disabled when not in use. This signal is referred to AGND.
8	SR2	PWM Logic Output Drive. This pin can be disabled when not in use. This signal is referred to AGND.
9	OUTA	PWM Logic Output Drive. This pin can be disabled when not in use. This signal is referred to AGND.
10	OUTB	PWM Logic Output Drive. This pin can be disabled when not in use. This signal is referred to AGND.
11	OUTC	PWM Logic Output Drive. This pin can be disabled when not in use. This signal is referred to AGND. This pin can also be programmed as a synchronization signal output (SYNO).
12	OUTD	PWM Logic Output Drive. This pin can be disabled when not in use. This signal is referred to AGND. This pin can also be programmed as a synchronization signal output (SYNO).
13	SYNI/FLGI	Synchronization Signal Input (SYNI)/External Signal Input to Generate a Flag Condition (FLGI). Connect this pin to AGND if not in use.
14	SCL	I <sup>2</sup> C/PMBus Serial Clock Input and Output (Open Drain). This signal is referred to AGND.
15	SDA	I <sup>2</sup> C/PMBus Serial Data Input and Output (Open Drain). This signal is referred to AGND.
16	CTRL	PMBus Control Signal. It is recommended that a 1 nF capacitor be connected from the CTRL pin to AGND for noise debounce and decoupling. This signal is referred to AGND.

Pin No.	Mnemonic	Description
17	PG/ALT	Power Good Output (Open Drain). Connect this pin to VDD through a pull-up resistor (typically 2.2 k $\Omega$ ). This signal is referred to AGND. This pin is also used as an SMBus ALERT signal. (For information about the SMBus specification, see the PMBUS Features section.)
18	VCORE	Output of 2.6 V Regulator. Connect a decoupling capacitor of at least 330 nF from this pin to AGND, as close as possible to the ADP1051, minimizing the PCB trace length. It is recommended that this pin not be used as a reference or to generate other logic levels using resistive dividers.
19	VDD	Positive Supply Input. Voltage of 3.0 V to 3.6 V. This signal is referred to AGND. Connect a 2.2 $\mu$ F decoupling capacitor from this pin to the AGND, as close as possible to the ADP1051, minimizing the PCB trace length.
20	AGND	Common Analog Ground. The internal analog circuitry ground and digital circuitry ground is star connected to this pin through bonding wires.
21	RES	Resistor Input. This pin sets up the internal reference for the internal PLL frequency. Connect a 10 k $\Omega$ resistor ( $\pm 0.1\%$ ) from this pin to AGND. This signal is referred to AGND.
22	ADD	Address Select Input. This pin is used to program the I <sup>2</sup> C/PMBus address. Connect a resistor from ADD to AGND. This signal is referred to AGND.
23	RTD	Thermistor Input. Place a thermistor (R25 = 100 k $\Omega$ (1%), beta = 4250 (1%)) in parallel with a 16.5 k $\Omega$ (1%) resistor and a 1 nF filtering capacitor. This pin is referred to AGND. Connect this pin to AGND if not in use.
24	OVP	Overvoltage Protection. This signal is used as redundant overvoltage protection. This signal is referred to AGND.
	EP	Exposed Pad. The ADP1051 has an exposed thermal pad on the underside of the package. For increased reliability of the solder joints and maximum thermal capability, it is recommended that the exposed pad be soldered to the PCB AGND plane.

# TYPICAL PERFORMANCE CHARACTERISTICS

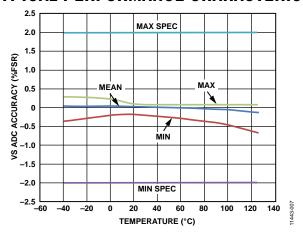


Figure 4. VS ADC Accuracy vs. Temperature (From 10% to 90% of FSR)

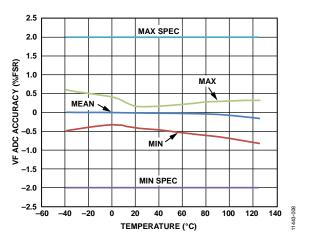


Figure 5. VF ADC Accuracy vs. Temperature (From 10% to 90% of FSR)

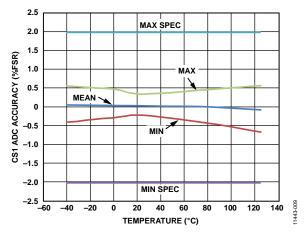


Figure 6. CS1 ADC Accuracy vs. Temperature (From 10% to 90% of FSR)

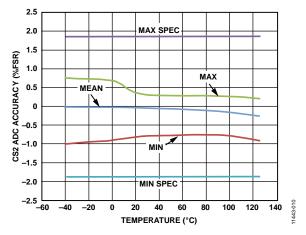


Figure 7. CS2 ADC Accuracy vs. Temperature (From 0 mV to 120 mV)

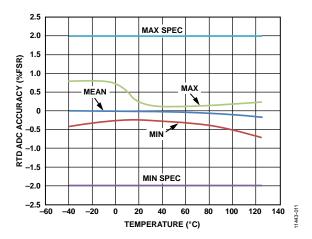


Figure 8. RTD ADC Accuracy vs. Temperature (From 10% to 90% of FSR)

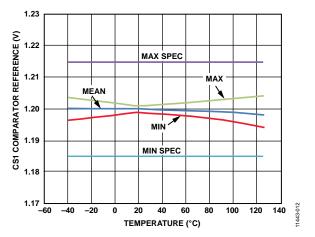


Figure 9. CS1 OCP Comparator Reference vs. Temperature (1.2 V Reference)

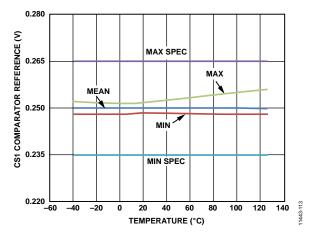


Figure 10. CS1 OCP Comparator Reference vs. Temperature (0.25 V Reference)

### THEORY OF OPERATION

The ADP1051 is designed as a flexible, easy to use, digital power supply controller. The ADP1051 integrates the typical functions that are needed to control a power supply, such as

Output voltage sense and feedback Voltage feedforward control Digital loop filter compensation PWM generation Current, voltage, and temperature sense Housekeeping and I<sup>2</sup>C/PMBus interface Calibration and trimming

The main function of controlling the output voltage is performed through use of the feedback ADCs, the digital loop compensator, and the digital PWM engine.

The feedback ADCs feature a patented multipath architecture, with a high speed, low resolution (fast and coarse) ADC and a low speed, high resolution (slow and accurate) ADC. The ADC outputs are combined to form a high speed and high resolution feedback path. Loop compensation is implemented using the digital compensator. This proportional, integral, derivative (PID) compensator is implemented in the digital domain to allow easy programming of filter characteristics, which is of great value in customizing and debugging designs. The PWM engine generates

up to six programmable PWM outputs for control of primary side FET drivers and synchronous rectification FET drivers. This programmability allows many generic and specific switching power supply topologies to be realized.

Conventional power supply housekeeping features, such as input voltage sense, output voltage sense, primary side current sense and secondary side current sense, are included. An extensive set of protections is offered, including overvoltage protection (OVP), overcurrent protection (OCP), overtemperature protection (OTP), undervoltage protection (UVP), and SR reverse current protection (RCP).

All of these features are programmable through the I<sup>2</sup>C/PMBus digital bus interface. This interface is also used for calibrations. Other information, such as input current, output current, and fault flags, is also available through this digital bus interface.

The internal EEPROM can store all programmed values and allows standalone control without a microcontroller. A free, downloadable GUI is available that provides all the necessary software to program the ADP1051. To obtain the latest GUI software and a user guide, visit <a href="http://www.analog.com/digitalpower">http://www.analog.com/digitalpower</a>.

The ADP1051 operates from a single 3.3 V power supply and is specified from  $-40^{\circ}$ C to  $+125^{\circ}$ C.

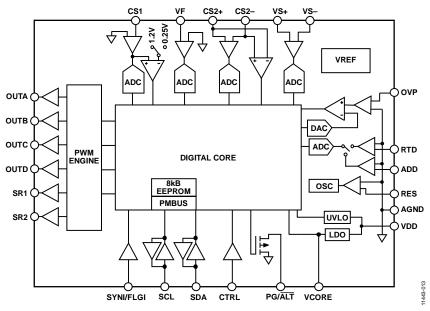


Figure 11. Functional Block Diagram

# PWM OUTPUTS (OUTA, OUTB, OUTC, OUTD, SR1, AND SR2)

The PWM outputs are used for control of the primary side drivers and the synchronous rectifier drivers. They can be used for several topologies, such as hard-switched full bridge, zero-voltage-switched full bridge, phase shifted full bridge, half bridge, push pull, two-switch forward, active clamp forward, interleaved buck, and others. Delays between rising and falling edges can be individually programmed. Special care must be taken to avoid shootthrough and cross conduction. It is recommended that the ADP1051 GUI software be used to program these outputs. Figure 12 shows an example configuration to drive a zero-voltage-switched full bridge topology with synchronous rectification. The QA, QB, QC, QD, QSR1, and QSR2 switches are driven separately by the PWM outputs (OUTA, OUTB, OUTC, OUTD, SR1, and SR2). Figure 13 shows an example of PWM settings for the power stage shown in Figure 12.

The PWM and SRx outputs are all synchronized with each other. Therefore, when reprogramming more than one of these outputs, it is important to first update all of the registers and then latch the information into the shadow registers at one time. During the reprogramming operation, the outputs are temporarily disabled. To ensure that new PWM timings and the switching frequency setting are programmed simultaneously, a special instruction is sent to the ADP1051 by setting Register 0xFE61[2:1] (the GO commands). It is recommended that the PWM outputs not in use be disabled via Register 0xFE53[5:0].

See the PWM Outputs Timing Registers section for additional information about the PWM timings.

#### SYNCHRONOUS RECTIFICATION

SR1 and SR2 are recommended for use as the PWM control signals when synchronous rectification is in use. These PWM signals can be configured much like the other PWM outputs.

An optional soft start can be applied to the synchronous rectifier (SR) PWM outputs. The SR soft start can be programmed using Register 0xFE08[4:0].

When the SR soft start is disabled (Register 0xFE08[1:0] = 00), the SR signals are immediately turned on to their modulated PWM duty cycle values.

When the SR soft start is enabled (Register 0xFE08[1:0] = 11), the SR1 and SR2 rising edges move left from the  $t_{Rx} + t_{MODU\_LIMIT}$  position to the  $t_{Rx} + t_{MODU\_LIMIT}$  position in steps that are set in Register 0xFE08[3:2].  $t_{Rx}$  represents the rising edge timing of SR1 ( $t_{R5}$ ) and the rising edge timing of SR2 ( $t_{R6}$ ) (see Figure 68);  $t_{MODU\_LIMIT}$  represents the modulation limit defined in Register 0xFE3C (see Figure 67);  $t_{MODU\_LIMIT}$  represents the real-time modulation value. The SR soft start is still applicable even if the SR1 and SR2 are not programmed to be modulated. When the SR soft start is enabled, the SR1 and SR2 rising edges move left from the  $t_{Rx} + t_{MODU\_LIMIT}$  position to the  $t_{Rx}$  position in steps that are set in Register 0xFE08[3:2].

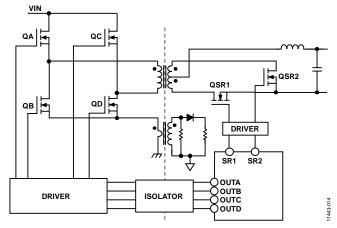


Figure 12. PWM Assignment for Zero-Voltage-Switched Full Bridge Topology with Synchronous Rectification

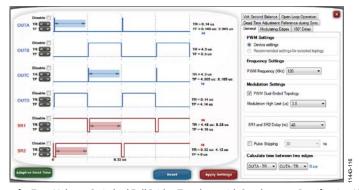


Figure 13. PWM Settings for Zero-Voltage-Switched Full Bridge Topology with Synchronous Rectification Using the ADP1051 GUI Rev. A | Page 15 of 108

The advantage of the SR soft start is that it minimizes the output voltage undershoot that occurs when the SR FETs are turned on without a soft start. The advantage of turning the SRx signals completely on immediately is that they can help minimize the voltage transient caused during a load step.

Using Register 0xFE08[4], the SR soft start can be programmed to occur only once (the first time that the SRx signals are enabled) or every time that the SRx signals are enabled (for example, when the system enters or exits deep light load mode).

When programming the ADP1051 to use the SR soft start, ensure the correct operation of this function by setting the falling edge of SR1 ( $t_{F5}$ ) to a lower value than the rising edge of SR1 ( $t_{R5}$ ) and setting the falling edge of SR2 ( $t_{R6}$ ) to a lower value than the rising edge of SR2 ( $t_{R6}$ ). During the SR soft start, the rising edges of SRx move gradually from the right side (the  $t_{Rx} + t_{MODU\_LIMIT}$  position) to the left side to increase the duty cycle.

The ADP1051 is well suited for dc-to-dc converters in isolated topologies. Every time a PWM signal crosses the isolation barrier, a propagation delay is added because of the isolating components. Using Register 0xFE3A[5:0], an adjustable delay (0 ns to 315 ns in steps of 5 ns) can be programmed to move both SR1 and SR2 later in time to compensate for the added propagation delay. In this way, all the PWM edges can be aligned (see Figure 68).

#### **PWM MODULATION LIMIT AND 180° PHASE SHIFT**

The modulation limit register (Register 0xFE3C) can be programmed to apply a maximum modulation limit to any PWM signal, thus limiting the modulation range of any PWM output. If modulation is enabled, the maximum modulation limit is applied to all PWM outputs collectively. This limit, t<sub>MODU\_LIMIT</sub>, is the maximum time variation for the modulated edges from the default timing, following the configured modulation direction (see Figure 14). There is no setting for the minimum duty cycle limit. Therefore, the user must set the rising edges and falling edges based on the case with the least modulation.

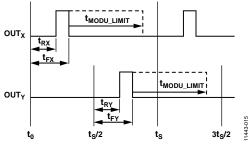


Figure 14. Setting Modulation Limits

Each least significant bit (LSB) in Register 0xFE3C corresponds to a different time step size, depending on the switching frequency (see Table 152). If the ADP1051 is to control a dual-ended topology (such as full bridge, half bridge, or push pull), enable the dual-ended topology mode using Register 0xFE13[6]. Then the modulation limit in each half cycle is one half of the modulation value programmed by Register 0xFE3C.

The modulated edges cannot go beyond one switching cycle. To extend the modulation range for some applications, the  $180^{\circ}$  phase shift can be enabled, using Register 0xFE3B[5:0]. When the  $180^{\circ}$  phase shift is disabled, the rising edge timing and the falling edge timing are referred to the start of the switching cycle (see  $t_{Rx}$  and  $t_{Fx}$  in Figure 14). When the  $180^{\circ}$  phase shift is enabled, the rising edge timing and the falling edge timing are referred to half of the switching cycle (see  $t_{RY}$  and  $t_{FY}$  in Figure 14, which are referred to  $t_{S}/2$ ). Therefore, when the  $180^{\circ}$  phase shift is disabled, the edges are always located between  $t_{0}$  and  $t_{S}$ . When the  $180^{\circ}$  phase shift is enabled, the edges are located between  $t_{S}/2$  and  $3t_{S}/2$ .

The 180° phase shift function can be used to extend the maximum duty cycle in a multiphase, interleaved converter. Figure 15 shows a dual-phase, interleaved buck converter. The OUTC and OUTD PWM outputs can be programmed as a 180° phase shift with the OUTA and OUTB PWM outputs.

The phase shedding function can be used for light load efficiency improvement. See the Light Load Mode and Deep Light Load Mode section for more information.

The ADP1051 GUI is recommended for evaluating this feature.

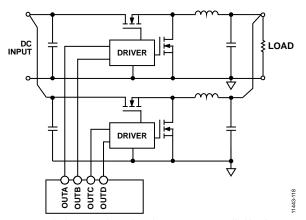


Figure 15. Dual-Phase Interleaved Buck Converter Controlled by the ADP1051

#### ADAPTIVE DEAD TIME COMPENSATION (ADTC)

The ADTC registers (Register 0xFE5A to Register 0xFE60 and Register 0xFE66) allow the dead time between the PWM edges to be adapted on the fly. The ADP1051 uses the ADTC function only when the CS1 current value (which represents the input current) falls below the ADTC threshold (programmed in Register 0xFE5A). The ADP1051 GUI allows the user to easily program the dead time values, and it is recommended that the GUI be used for this purpose.

Before the ADTC is configured, its threshold must be programmed. Each individual PWM rising and falling edge ( $t_{Rx}$  and  $t_{Fx}$ ) can then be programmed (Register 0xFE5B to Register 0xFE60) to have a specific dead time offset at a CS1 current of 0 A.

This offset can be positive or negative and is relative to the nominal edge position. When the CS1 current is between 0 A and the ADTC threshold, the amount of dead time is linearly adjusted in steps of 5 ns.

The averaging period of the CS1 current and the speed of the dead time adjustment can also be programmed in Register 0xFE66 to accommodate faster or slower adjustment.

For example, if the ADTC threshold is set to 0.8 A,  $t_{R1}$  has a nominal rising edge of 100 ns. If the ADTC offset setting for  $t_{R1}$  is 100 ns at a CS1 current of 0 A,  $t_{R1}$  moves to 200 ns when the CS1 current is 0 A and to 150 ns when the CS1 current is 0.4 A. Similarly, the ADTC can be applied in the negative direction.

#### LIGHT LOAD MODE AND DEEP LIGHT LOAD MODE

To facilitate efficiency over the load range, the following three operation modes can be configured in the ADP1051, according to the programmed CS2 current thresholds:

Normal mode. In normal mode, the SR PWM outputs are in complement with the primary PWM outputs.

Light load mode. The SR PWM outputs still work, but they are in phase with the primary PWMs.

Deep light load mode. All PWM outputs can be disabled.

Figure 16 shows the operation timing of a hard-switched full bridge converter. When the CS2 current (output current) drops across the light load mode threshold programmed by Register 0xFE19[3:0], the SR1 and SR2 PWM signals switch from complementary mode (normal mode) to in-phase mode (light load mode), as shown in Figure 16.

To achieve normal operation of light load mode, keep in mind the following:

In a hard-switched full bridge topology having the same power stage shown in Figure 12, if QA to QD are driven by OUTA to OUTD separately, program the SR1 output in complement with OUTB and OUTC in normal mode, and program the SR2 output in complement with OUTA and OUTD, as shown in Figure 16. In this case, the OUTA to OUTD outputs are all modulated. In a zero-voltage-switched full bridge topology having the same power stage shown in Figure 12 and the PWM settings shown in Figure 13, SR1 is in complement with OUTC and SR2 is in complement with OUTA in normal mode. In light load mode, SR1 is in phase with OUTA, and SR2 is in phase with OUTC. If the hard-switched full bridge, half bridge, and push pull topologies are used and the primary switches are controlled by OUTA and OUTB only, SR1 is in complement with OUTB, and SR2 is in complement with OUTA in normal mode. Then, in the light load mode, SR1 is in phase with OUTA, and SR2 is in phase with OUTB.

When the CS2 current drops across the deep light load mode threshold programmed by Register 0xFE1B[3:0], all PWM channels can be disabled by Register 0xFE1C[5:0]. This allows the ADP1051 to be used in interleaved topologies, incorporating the automatic phase shedding function in light load mode.

In both light load mode and deep light load mode, the CS2 averaging speed for the threshold can be set from 41  $\mu s$  to 328  $\mu s$  in four discrete steps, using Register 0xFE1E[5:4]. The hysteresis can be set by Register 0xFE1E[3:2].

The light load mode digital compensator is also used during light load mode and deep light load mode.

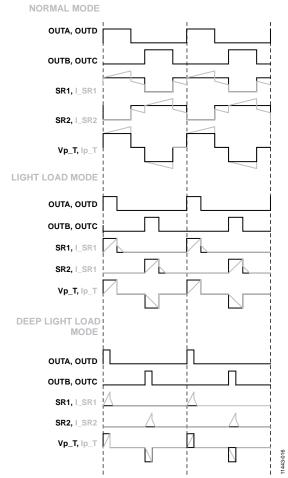


Figure 16. Light Load Mode and Deep Light Load Mode

#### FREQUENCY SYNCHRONIZATION

The frequency synchronizing function of the ADP1051 includes the synchronization input (SYNI) as a slave device and the synchronization output (SYNO, using the OUTC or OUTD pin) as a master device.

#### Synchronization as a Slave Device

The ADP1051 can be programmed to take the SYNI/FLGI pin signal as the reference to synchronize the internal programmed PWM clock with an external clock.

The frequency capture range requirement is for the period of the external clock that is applied at the SYNI pin to be 90% to 110% of the period of the internal programmed PWM clock. The minimum pulse width of the SYNI signal is 360 ns. From the rising edge of the SYNI signal to the start of the internal clock cycle, there is a 760 ns propagation delay. Additional delay time is programmed, using Register 0xFE11, to realize interleaving control with different controllers.

To achieve a smooth synchronization transition between asynchronous operation and synchronous operation, there is a phase capture range bit for synchronization in Register 0xFE12[6] for capturing

the phase of the external clock signal. The ADP1051 detects the phase shift between the external clock signal and the internal clock signal when synchronization is enabled. When the phase shift falls within the phase capture range, synchronization begins.

The ADP1051 synchronizes to the external clock frequency as follows:

- 1. The synchronization function is enabled by Register 0xFE12[3] and Register 0xFE12[0], and the ADP1051 starts to detect the period of the external clock signal applied at the SYNI/FLGI pin.
- 2. If all the periods of the consecutive 64 most recent cycles of the external clocks fall within 90% to 110% of the internal switching clock period, the ADP1051 uses the latest current cycle as the synchronization reference, and the period of the external clock is identified. This interval is t<sub>2</sub> or t<sub>4</sub>, as shown in Figure 17. Otherwise, the ADP1051 discards this cycle and looks for the next cycle (frequency capture mode).
- 3. After the external clock period is determined, the ADP1051 detects the phase shift between the external clock (plus the delay time set by Register 0xFE11) and the internal PWM signal. If the phase shift is within the phase capture range, the internal and external clocks are synchronized (phase capture mode).
- 4. At this point, the PWM clock is synchronized with the external clock. Cycle-by-cycle synchronization starts.
- 5. If the external clock signal is lost at any time, or if the period exceeds the minimum limit (89% of the internal programmed frequency) or the maximum limit (114% of the internal programmed frequency), the ADP1051 takes the last valid external clock signal as the synchronization reference source.

- At the same time, the phase shift between the synchronization reference and the internal clock is detected. When the phase shift falls within the phase capture range, the PWM clock returns to the internal clock set by the internal oscillator. This interval is t<sub>1</sub> or t<sub>3</sub>, as shown in Figure 17.

  This is the first synchronization unlock condition, called Synchronization Unlocked Mode 1, in which the switching frequency is out of range (range is 89% to approximately 114% of the internal programmed frequency).
- 6. If the period of the external SYNI signal changes significantly (for example, if the period difference between contiguous cycles exceeds 280 ns), the ADP1051 takes the last valid external clock signal as the synchronization reference source. At the same time, the phase shift between the synchronization reference and the internal clock is detected. When the phase shift falls within the phase capture range, the PWM clock returns to the internal clock set by the internal oscillator. This is the second synchronization unlock condition, called Synchronization Unlocked Mode 2, in which the phase shift exceeds 280 ns.

Figure 17 shows the synchronous operation diagram. The internal frequency, f<sub>SW\_INT</sub>, is the internal free-running frequency of the ADP1051. Before the synchronization is locked, the ADP1051 runs at f<sub>SW\_INT</sub>. The external frequency, f<sub>SW\_EXT</sub>, is the frequency of the external clock that the ADP1051 needs to synchronize. After synchronization is locked, the ADP1051 runs at f<sub>SW\_EXT</sub>.

The ADP1051 does not allow the switching frequency to run across the boundaries of 97.5 kHz, 195.5 kHz, or 390.5 kHz on the fly. Ensure that the external clock does not run across these boundaries. Otherwise, the internal switching frequency cannot be set within  $\pm 10\%$  of these boundaries.

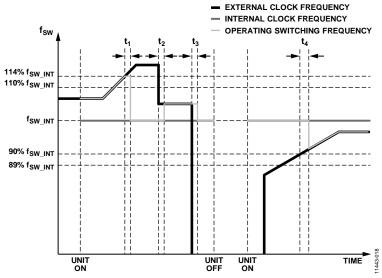


Figure 17. Synchronization Operation

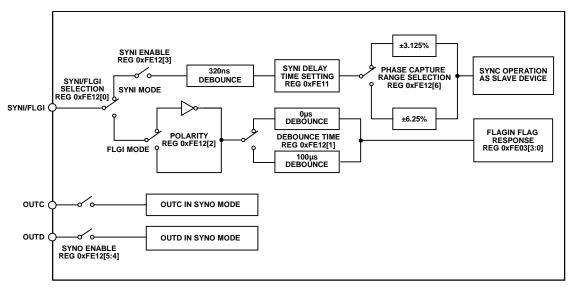


Figure 18. Synchronization Configuration

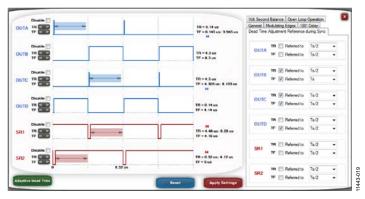


Figure 19. Edge Adjustment Reference During Synchronization

To ensure a constant dead time before and after synchronization, Register 0xFE6D to Register 0xFE6F can be set for edge adjustment referred to  $t_s/2$  or  $t_s$ . For example, the falling edge of OUTA ( $t_{F1}$ ) is referred to the  $\frac{1}{2} \times t_s$  position, which means that the time difference between  $t_{F1}$  and  $\frac{1}{2} \times t_s$  is a constant during synchronization transition. Figure 19 shows an example of the edge adjustment reference settings in a full bridge topology.

#### Synchronization as a Master Device

Register 0xFE12[5:4] can be used to program the synchronization output (SYNO) function, in which the OUTC pin (Pin 11) or the OUTD pin (Pin 12) generates a synchronization reference clock output. When Bit 4 is set, OUTC generates a 640 ns pulse width clock signal that represents the internal switching frequency. When Bit 5 is set, OUTD generates a 640 ns pulse width clock signal that also represents the internal switching frequency.

To compensate the propagation delays in the synchronization scheme of the ADP1051, the synchronization output signal has a 760 ns lead time before the start of the internal switching cycle.

The synchronization output signal is always available when VDD is applied. The VDD\_OV fault is the only fault condition that suspends the synchronization output signal.

#### **OUTPUT VOLTAGE SENSE AND ADJUSTMENT**

The output voltage sense and adjustment function is used for control, monitoring, and undervoltage protection of the remote output voltage. VS- (Pin 1) and VS+ (Pin 2) are fully differential inputs. The voltage sense point can be calibrated digitally to remove any errors due to external components. This calibration can be performed in the production environment, and the settings can be stored in the EEPROM of the ADP1051 (see the Power Supply Calibration and Trim section for more information).

For voltage monitoring, the READ\_VOUT output voltage command (Register 0x8B) is updated every 10 ms. The ADP1051 stores every ADC sample for 10 ms and then calculates the average value at the end of the 10 ms period. Therefore, if Register 0x8B is read at least every 10 ms, a true average value is obtained. The voltage information is available through the  $I^2C/PMBus$  interface.

The control loop of the ADP1051 features a patented multipath architecture. The output voltage is converted simultaneously by two ADCs: a high accuracy ADC and a high speed ADC. The complete signal is reconstructed and processed in the digital compensator to provide a high performance and cost competitive solution.

#### Voltage Feedback Sensing (VS+, VS- Pins)

The VS sense point on the power rail requires an external resistor divider (R1 and R2 in Figure 20) to bring the nominal differential mode signal to 1 V between the VS+ and VS- pins (see Figure 20). This external resistor divider is necessary because the VS ADC input range of the ADP1051 is 0 V to 1.6 V. When R1 and R2 are known, the VOUT\_SCALE\_LOOP parameter can be calculated using the following equation:

 $VOUT\_SCALE\_LOOP = R2/(R1 + R2)$ 

In a 12 V system with resistor dividers of 11 k $\Omega$  and 1 k $\Omega$ , the VOUT\_SCALE\_LOOP can be calculated as follows:

 $VOUT\_SCALE\_LOOP = 1 \text{ k}\Omega/(11 \text{ k}\Omega + 1 \text{ k}\Omega) = 0.08333$ 

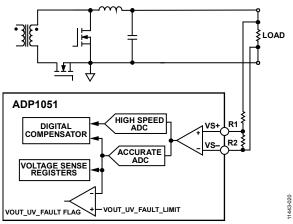


Figure 20. Voltage Sense Configuration

#### **Voltage Sense ADCs**

Two kinds of sigma-delta ( $\Sigma$ - $\Delta$ ) ADCs are used in the ADP1051 feedback loop, as follows:

Low frequency (LF) ADC, running at 1.56 MHz High frequency (HF) ADC, running at 25 MHz

The  $\Sigma$ - $\Delta$  ADCs have a resolution of one bit and operate differently from traditional flash ADCs. The equivalent resolution that is obtained depends on how long the output bit stream of the  $\Sigma$ - $\Delta$  ADC is filtered.

The  $\Sigma$ - $\Delta$  ADCs also differ from Nyquist rate ADCs in that the quantization noise is not uniform across the frequency spectrum. At lower frequencies, the noise decreases. At higher frequencies, the noise increases (see Figure 21).

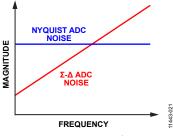


Figure 21. ADC Noise Performance

The low frequency ADC runs at approximately 1.56 MHz. For a specified bandwidth, the equivalent resolution is calculated as

$$ln(1.56 \text{ MHz/}BW)/ln(2) = N \text{ bits}$$

For example, at a bandwidth of 95 Hz, the equivalent resolution/noise is

$$ln(1.56 \text{ MHz/95 Hz})/ln(2) = 14 \text{ bits}$$

At a bandwidth of 1.5 kHz, the equivalent resolution/noise is

$$ln(1.56 \text{ MHz}/1.5 \text{ kHz})/ln(2) = 10 \text{ bits}$$

The high frequency ADC has a 25 MHz clock. It is comb filtered and outputs at the switching frequency into the digital compensator. See Table 5 for equivalent resolution at selected sampling frequencies.

Table 5. Equivalent Resolutions for High Frequency ADC at Selected Switching Frequencies

f <sub>sw</sub> (kHz)	High Frequency ADC Resolution (Bits)				
49 to 87	9				
97.5 to 184	8				
195.5 to 379	7				
390.5 to 625	6				

The high frequency ADC has a range of  $\pm 25$  mV. Using a base switching frequency of 97.5 kHz at an 8-bit HF ADC resolution, the quantization noise is 0.195 mV (1 LSB =  $2 \times 25$  mV/ $2^8$  = 0.195 mV). When the switching frequency increases to 195.5 kHz at a 7-bit HF ADC resolution, the quantization noise is 0.391 mV (1 LSB =  $2 \times 25$  mV/ $2^7$  = 0.391 mV). Increasing the switching frequency to 390.5 kHz increases the quantization noise to 0.781 mV (1 LSB =  $2 \times 25$  mV/ $2^6$  = 0.781 mV).

#### **Output Voltage Adjustment Commands**

In the ADP1051, the voltage data for commanding or reading the output voltage or related parameters is in linear data format. The linear format exponent is fixed at -10 decimal (see the VOUT\_MODE command, Register 0x20, in Table 21).

The following three basic commands are used for setting the output voltage:

VOUT\_COMMAND command (Register 0x21, Table 22) VOUT\_MARGIN\_HIGH command (Register 0x25, Table 26) VOUT\_MARGIN\_LOW command (Register 0x26, Table 27)

One of these three values is selected by the OPERATION command (Register 0x01, Table 13).

The VOUT\_MAX command (Register 0x24, Table 25) sets an upper limit on the output voltage that the ADP1051 can command, regardless of any other commands or combinations.

During output voltage adjustment, use the VOUT\_TRANSITION\_ RATE command (Register 0x27, Table 28) to set the rate (in mV/ $\mu$ s) at which the VS $\pm$  pins change voltage.

#### **DIGITAL COMPENSATOR**

Use the internal programmable digital compensator to change the control loop of the power supply. A Type III digital compensator architecture has been implemented. This Type III compensator is reconstructed by a low frequency filter, with input from the low frequency ADC, and a high frequency filter, with input from the high frequency ADC. From the voltage sense ADC outputs to the digital compensator output, the transfer function of the digital compensator in z-domain is as follows:

$$H(z) = \frac{d}{204.8 \times m} \times \frac{z}{z-1} + \frac{c}{12.8} \times \frac{z-b}{z-a}$$

where:

a= HF filter pole register values/256 (Register 0xFE32/256 for normal mode or Register 0xFE36/256 for light load mode). b= HF filter zero registers values/256 (Register 0xFE31/256 for normal mode or Register 0xFE35/256 for light load mode).. c= HF filter gain register values (Register 0xFE33 for normal mode or Register 0xFE37 for light load mode). d= LF filter gain register values (Register 0xFE30 for normal mode or Register 0xFE34 for light load mode). m is the scale factor, as follows:

m = 1 when 49 kHz  $\leq f_{SW} < 97.5$  kHz m = 2 when 97.5 kHz  $\leq f_{SW} < 195.5$  kHz m = 4 when 195.5 kHz  $\leq f_{SW} < 390.5$  kHz m = 8 when 390.5 kHz  $\leq f_{SW}$ 

To tailor the loop response to the specific application, the low frequency gain (represented by d), the zero location of HF filter (represented by b), the pole location of HF the filter (represented by a), and the high frequency gain (represented by c) can all be set up individually (see the Digital Compensator and Modulation Setting Registers section).

It is recommended that the ADP1051 GUI be used to program the compensator. The GUI displays the filter response, using a Bode plot in the s-domain, and calculates all stability criteria for the power supply.

To transfer the z-domain value to the s-domain, plug the following bilinear transformation equation into the H(z) equation:

$$z(s) = \frac{2f_{SW} + s}{2f_{SW} - s}$$

The filter introduces an extra phase delay element into the control loop. The digital compensator circuit sends the information about the duty cycle to the digital PWM engine at the beginning of each switching cycle (unlike an analog controller, which makes decisions on the duty cycle information continuously). There is an additional delay for ADC sampling and decimation filtering. This extra phase delay for phase margin  $(\Phi)$  is expressed as follows:

$$\Phi = 360 \times f_C/f_{SW}$$

where  $f_C$  is the crossover frequency and  $f_{SW}$  is the switching frequency.

At one-tenth of the switching frequency, the phase delay is 36°. The GUI incorporates this phase delay into its calculations. Note that the ADP1051 GUI does not account for other delays, such as gate driver and propagation delay.

Two sets of registers allow for two distinct compensator responses. The main compensator, called the normal mode compensator, is controlled by programming Register 0xFE30 to Register 0xFE33. The light load mode compensator is controlled by programming Register 0xFE34 to Register 0xFE37. The ADP1051 uses the light load mode compensator only when it operates in light load mode or deep light load mode.

In addition, a dedicated filter is used during soft start. The filter is disabled at the end of the soft start routine, after which the voltage loop digital compensator is used. The soft start filter gain is a programmable value of 1, 2, 4, or 8, using Register 0xFE3D[1:0].

# CLOSED-LOOP INPUT VOLTAGE FEEDFORWARD CONTROL AND VF SENSE

The ADP1051 supports closed-loop input voltage feedforward control to improve input transient performance. The VF value is sensed by the feedforward ADC and is used to divide the output of the digital compensator. The result is fed into the digital PWM engine. The input voltage signal can be sensed at the center tap in the secondary windings of the isolation transformer and must be filtered by an RCD circuit network to eliminate the voltage spike at the switching node. Alternatively, the input voltage signal can be sensed from a winding of the auxiliary power transformer.

The VF pin voltage (Pin 5) must be set to 1 V when the nominal input voltage is applied. The feedforward ADC sampling period is  $10~\mu s$ . Therefore, the decision to modify the PWM outputs, based on the input voltage, is performed at this rate.

As shown in Figure 22, the feedforward scheme modifies the modulation value, based on the VF voltage. When the VF input is 1 V, the line voltage feedforward has no effect. For example, if the digital compensator output remains unchanged and the VF voltage changes to 50% of its original value (still greater than 0.5 V), the modulation of the edges of OUTx (that are configured for modulation) doubles.

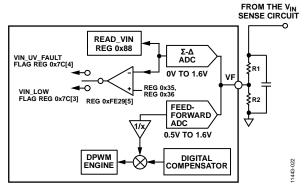


Figure 22. Closed-Loop Input Voltage Feedforward Configuration

If the digital compensator output remains unchanged and the VF voltage changes to 200% of its original value (still smaller than 1.6 V), the modulation of the OUTx edges that are configured for modulation is divided by 2 (see Figure 23). Register 0xFE3D[3:2] is used to program the optional input voltage feedforward function.

The VF pin also has a low speed, high resolution  $\Sigma$ - $\Delta$  ADC. The ADC has an update rate of 800 Hz with 11-bit resolution. The ADC output value is stored in Register 0xFEAC and converted to the READ\_VIN command (Register 0x88). This value provides information for the input voltage monitoring and flag functions.

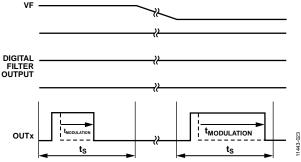


Figure 23. Closed-Loop Input Voltage Feedforward Changes Modulation
Values

# OPEN-LOOP INPUT VOLTAGE FEEDFORWARD OPERATION

The ADP1051 can run in open-loop input voltage feedforward operation mode. In this mode, the input voltage is sensed as the feedforward signal for generation of the PWM outputs.

As shown in Figure 24, the digital compensator output is modified by a programmable modulation reference. The VF value, which represents the input voltage, is fed into the feedforward ADC to divide the modulation reference. The result of this division is then fed into the PWM engine. The duty cycle value is in inverse proportion to the input voltage.

Using the following equations:

$$D = \frac{V_{IN\_NOM}}{V_{IN}} \times (t_{REF} \times f_{SW})$$

and

$$V_{OUT} = \frac{V_{IN} \times D}{n}$$

the output voltage can be derived by

$$V_{OUT} = \frac{V_{IN\_NOM} \times (t_{REF} \times f_{SW})}{n}$$

where:

*D* is the duty cycle value.

 $V_{IN\_NOM}$  is the nominal input voltage.

 $V_{IN}$  is the input voltage.

 $t_{REF}$  is the modulation reference, which is set by Register 0xFE63 and Register 0xFE64.

*f*<sub>SW</sub> is the switching frequency.

 $V_{OUT}$  is the output voltage.

n is the turn ratio of the main transformer.

In the equation to derive  $V_{\text{OUT}}$ , the input voltage,  $V_{\text{IN}}$ , is cancelled out. Therefore, the output voltage does not change when the input voltage changes.

Register 0xFE63 and Register 0xFE64 set the modulation reference, based on the target output voltage and the nominal input voltage at which the VF pin voltage is 1 V (see Figure 24).

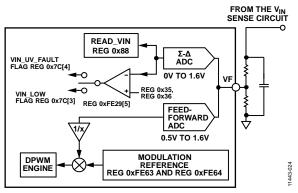


Figure 24. Open-Loop Feedforward Operation

The PWM settings of open-loop input voltage feedforward operation are similar to those of general closed-loop operation. The falling edge timings, rising edge timings, and modulation are set in the same manner as for closed-loop operation, by using Register 0xFE3E to Register 0xFE52. Register 0xFE09[4:3] sets the soft start speed of the modulation edges. Register 0xFE3D[6] enables open-loop feedforward operation. Register 0xFE3D[7] is used to enable the soft start procedure of open-loop feedforward operation.

The flag settings of open-loop feedforward operation are also similar to those of general closed-loop operation.

Because the output voltage is not regulated in the same manner as closed-loop operation, some settings, such as the  $V_{\text{OUT}}$  setting, the digital compensator settings, and the constant current mode setting, are not functional. Other settings can be programmed in a manner that is similar to general closed-loop operation.

#### **OPEN-LOOP OPERATION**

The ADP1051 can also run in open-loop operation mode. In this mode, the rising edges and falling edges of the PWM outputs are fixed during normal operation. Therefore, the output voltage varies with the input voltage. The topologies include full bridge, half bridge, and push pull converters.

The PWM settings of open-loop operation are different from those of general closed-loop operation.

- Set the rising edge timings and falling edge timings by using Register 0xFE3E to Register 0xFE4F. Typically, a duty cycle setting of ~50% is recommended for ease of zero-voltageswitching operation. A phase shift function of 180° is preferred to guarantee balanced PWM outputs.
- 2. Program Register 0xFE3C to a value of 0x00, which sets the modulation limit to  $0 \mu s$ .
- 3. Apply negative modulation to the falling edges of all PWM outputs, OUTA to OUTD (or just one pair of them), for soft start. The soft start of SR1 and SR2 is not recommended.
- 4. Write 111111 binary to Register 0xFE67[5:0] to set all PWM channels to follow open-loop operation. Set Register 0xFE09[7] to enable the soft start procedure. The soft start speed is specified by Register 0xFE09[4:3].
- 5. Always set Register 0xFE09[2] = 1. The soft start ramp time is determined by  $t_{F2} t_{R2}$ .

Because the output voltage is not regulated, some of the settings, such as the  $V_{\text{OUT}}$  setting, digital compensator settings, and constant current control, are not functional. Other settings can be programmed to be similar to those of general closed-loop operation.

#### **CURRENT SENSE**

The ADP1051 has two current sense inputs: CS1 (Pin 6) and CS2–/CS2+ (Pin 3 and Pin 4, respectively). These inputs sense, protect, and control the primary side input current and the secondary side output current. They can be calibrated to reduce errors due to the external components.

#### **CS1 Operation (CS1 Pin)**

Current Sense 1 (CS1) is typically used for the monitoring and protection of the primary side current, which is commonly sensed using a current transformer (CT). The input signal at the CS1 pin is fed into an ADC for current monitoring. The range of the ADC is 0 V to 1.60 V. The input signal is also fed into an analog comparator for cycle-by-cycle current limiting and  $I_{\rm IN}$  overcurrent fast protection, with a reference of 0.25 V or 1.2 V set by Register 0xFE1B[6]. The typical configuration for the CS1 current sense is shown in Figure 25.

The CS1 ADC is used to measure the average value of the primary side current. The ADC samples at a frequency of 1.56 MHz and reports a CS1 reading (12 bits) in the READ\_IIN command (Register 0x89), with an asynchronously averaged rate of 10 ms, 52 ms, 105 ms, or 210 ms set by Register 0xFE65[1:0].

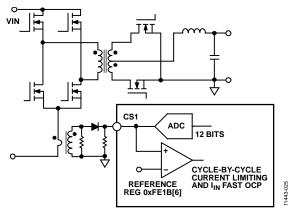


Figure 25. Current Sense 1 (CS1) Operation

Various  $I_{\rm IN}$  overcurrent fast fault limits and response actions can be set for CS1. These are described in the Current Sense and Limit Setting Registers section.

#### CS2 Operation (CS2-, CS2+ Pins)

Current Sense 2 (CS2) is typically used for the monitoring and protection of the output current. The full-scale range of the CS2 ADC is 120 mV. The differential inputs are fed into an ADC through a pair of external resistors that provide the necessary level shifting. The CS2+ and CS2- device pins are regulated to approximately 1.12 V by internal current sources.

Depending on the configuration of the current sense resistor, the ADP1051 must be programmed in low-side mode or high-side mode, using Register 0xFE19[7]. Typical configurations are shown in Figure 26 and Figure 27.

When using low-side current sensing, as shown in Figure 26, the current sources are 225  $\mu A$ . Therefore, the required resistor value is 1.12 V/225  $\mu A=4.98$  k $\Omega$ , and 4.99 k $\Omega$  resistors are preferred.

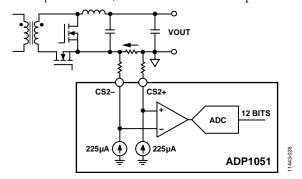


Figure 26. CS2 Low-Side Resistive Current Sense

When using high-side current sensing, as shown in Figure 27, the current sources are 1.915 mA. Therefore, the required resistor value is  $(V_{\rm OUT}-1.12~V)/1.915$  mA. If  $V_{\rm OUT}=12~V$ , 5.62 k $\Omega$  resistors are required.

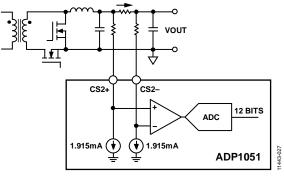


Figure 27. CS2 High-Side Resistive Current Sense

The ADC samples at a frequency of 1.56 MHz, and the reading is averaged in an asynchronous fashion. This reading is used to determine actions on faults, such as the IOUT OC fault, with an average rate of 82  $\mu$ s (seven bits) or 328  $\mu$ s (nine bits), which is set by Register 0xFE1B[4]. The ADP1051 also reports an output current reading in the READ\_IOUT command (Register 0x8C), with an average rate of 10 ms, 52 ms, 105 ms, or 210 ms, as set by Register 0xFE65[1:0].

Various limits and response actions can be set for CS2, such as the IOUT\_OC\_FAULT\_LIMIT command (Register 0x46) and the IOUT\_OC\_FAULT\_RESPONSE (Register 0x47) command. These

limits and responses are described in the PMBUS Command Set and Current Sense and Limit Setting Registers section.

#### **SOFT START AND SHUTDOWN**

#### **On/Off Control**

The OPERATION command (Regsiter 0x01) and the ON\_OFF\_CONFIG command (Register 0x02) control the power-on and power-off behavior of the ADP1051. The OPERATION command turns the ADP1051 on and off in conjunction with input from the CTRL pin (Pin 16). The combination of the CTRL pin input and serial bus commands required to turn the ADP1051 on and off is configured by the ON\_OFF\_CONFIG command. When the ADP1051 is commanded to turn on, the power supply on (PSON) signal is enabled, and the ADP1051 follows the soft start procedure to begin the power conversion.

#### Soft Start

After VDD power-up and initialization, the PSON signal is enabled when the ADP1051 is commanded to turn on. The controller waits for a user specified turn-on delay (TON\_DELAY, Register 0x60) before initiating this output voltage soft start ramp. The soft start is then performed by actively regulating the output voltage and digitally ramping up the target voltage to the commanded voltage setpoint. The rise time of the voltage ramp is programmed, using the TON\_RISE command (Register 0x61), to minimize the inrush currents associated with the start-up voltage ramp. A nonzero pre-biased voltage results in a longer turn-on delay and shorter rise time.

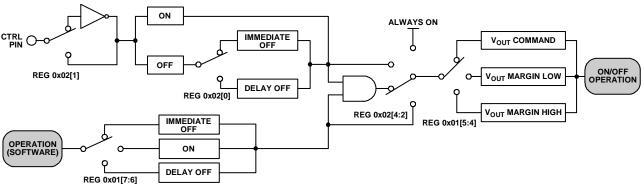


Figure 28. On/Off Control Diagram

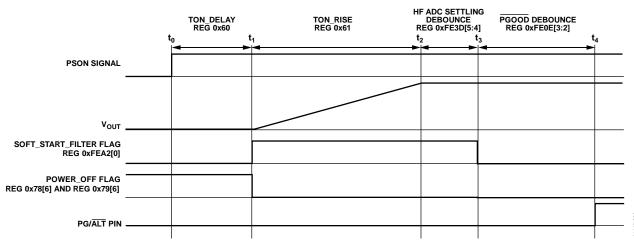


Figure 29. Soft Start Timing Diagram

When the user turns on the power supply, the following soft start procedure is initiated (see Figure 29):

- 1. At  $t = t_0$ , the PSON signal is enabled by a combination of the OPERATION command, the ON\_OFF\_CONFIG command, and/or the CTRL pin. The ADP1051 verifies that the initial flags indicate no abnormalities.
- 2. The ADP1051 waits for the programmed TON\_DELAY time to ramp up the power stage voltage at t<sub>1</sub>. The soft start filter gain (set by Register 0xFE3D[1:0]) is used for closed-loop control.
- The soft start begins to ramp up the internal reference. The soft start ramp time is programmed using the TON\_RISE command.
- 4. At t<sub>2</sub>, the soft start ramp reaches the output voltage setpoint. The high frequency ADC starts to settle.
- 5. Additional high frequency ADC settling debounce time can be programmed using Register 0xFE3D[5:4]. If the debounce time is used, the high frequency ADC is activated at t<sub>3</sub>. The period between t<sub>2</sub> and t<sub>3</sub> is the high frequency ADC settling debounce time. At t<sub>3</sub>, the control loop is switched from the soft start filter to the normal filter.

If no faults are present, the  $\overline{PGOOD}$  signal waits for the programmed debounce time (Register 0xFE0E[3:2]) before the PG/ $\overline{ALT}$  pin is pulled high at t<sub>4</sub>.

If a fault condition occurs during the soft start ramp (the time set by the TON\_RISE command,  $t_1$  to  $t_2$ ), the ADP1051 responds as programmed, unless the flag is blanked during soft start. The user can program which flags are active during the soft start. All flags are active at the end of the soft start ramp ( $t_2$ ). See the Flag Blanking During Soft Start section for more information.

The SR1 and SR2 outputs and volt-second balance functions can also be disabled during the soft start ramp. For more information, see the Synchronous Rectification section and Volt-Second Balance Control section, respectively.

#### **Digital Filters During Soft Start**

A dedicated soft start filter is used during soft start. The soft start filter is a pure low frequency filter with a programmable gain. The filter is disabled at the end of the soft start routine (t<sub>2</sub>), and then the general digital compensator is used. The soft start filter gain is programmed using Register 0xFE3D[1:0]. The soft start filter is used during the ramp time of the voltage reference, until the VS high frequency ADC is settled. The user can program (using Register 0xFE3D[4]) whether a high frequency ADC debounce time is added. The high frequency ADC debounce time is the interval from when the high frequency ADC is settled to when the frequency filter takes action. The debounce time can be programmed at 5 ms or 10 ms using Register 0xFE3D[5]. During the time when the soft start filter is in use, the SOFT\_START\_ FILTER flag is set. It is recommended that a high frequency ADC debounce time not be used if the fast load transient occurs during soft start.

#### **Software Reset**

The software reset command allows the user to perform a software reset of the ADP1051. When a 1 is written to Register 0xFE06[0], the power supply is immediately turned off and then restarted with a soft start following a restart delay. The restart delay time can be programmed as 0 ms, 500 ms, 1 sec, or 2 sec (Register 0xFE07[1:0]). If both TON\_DELAY and the restart delay are programmed with 0 ms, a write to this bit does nothing.

#### Shutdown

When the ADP1051 is commanded to turn off, the PSON signal is cleared. Depending on the setting of the OPERATION command, the ADP1051 shuts down immediately or waits for a user specified turn-off delay (TOFF\_DELAY) prior to the shutdown action.

If the ADP1051 is turned off because a fault condition occurs, the shut-down actions are programmed by the specific fault flag responses. See the Power Monitoring, Flags, and Fault Responses section for more information. The  $\overline{PGOOD}$  flag setting debounce time can be programmed in Register 0xFE0E[1:0]). This debounce time is from when the  $\overline{PGOOD}$  setting condition is met to when the  $\overline{PGOOD}$  flag is set and the  $\overline{PGOOD}$  flag is set and the PG/ALT pin is pulled low.

#### **Power Good Signals**

The ADP1051 has an open-drain, power good pin, PG (PG/ALT, Pin 17). When the pin is logic high, the power is good. In addition, the ADP1051 has a power good flag, PGOOD, which is a negation of power good. When this flag is set, it indicates that the power is not good. The PG/ALT pin and the PGOOD flag can be programmed to respond to the flags from the following list:

VIN\_UV\_FAULT
IIN\_OC\_FAST\_FAULT
IOUT\_OC\_FAULT
VOUT\_OV\_FAULT
VOUT\_UV\_FAULT
OT\_FAULT
OT\_WARNING
SR\_RC\_FAULT

Register 0xFE0D is used to program the masking of these flags, which prevents them from setting the  $\overline{PGOOD}$  flag and driving the  $\overline{PGOAD}$  pin low. Register  $\overline{0xFE0E}[1:0]$  is used to set the debounce time to drive the  $\overline{PGOOD}$  flag (see Figure 30).

If the ADP1051 is configured to enter constant <u>current</u> mode after the IOUT\_OC\_FAULT flag is triggered, the PGOOD flag and the PG/ALT pin do not respond to the IOUT\_OC\_FAULT flag.

The POWER\_GOOD\_ON command (Register 0x5E) sets the voltage limit that the output voltage must exceed before the POWER\_GOOD flag (Register 0x79[11]) can be cleared. Simi-larly, the output voltage must fall below the POWER\_GOOD\_OFF limit (Register 0x5F) for the POWER\_GOOD flag to be set.

The PG/ALT pin is always driven low and the PGOOD flag is always set when one of the POWER\_OFF, SOFT\_START\_FILTER, CRC\_FAULT, or POWER\_GOOD flags is set.

The debounce timings for setting and clearing the PGOOD flag can be programmed to 0 ms, 200 ms, 320 ms, or 600 ms in Register 0xFE0E[3:0].

#### **VOLT-SECOND BALANCE CONTROL**

The ADP1051 has a dedicated circuit to maintain volt-second balance in the main transformer when operating in full bridge topology. This circuit eliminates the need for a dc blocking capacitor. In interleaved topologies, volt-second balance can also be used for current balancing to ensure that each interleaved phase contributes equal power.

The circuit monitors the current flowing in both legs of the full bridge topology and stores this information. It compensates the selected PWM signals to ensure equal current flow in the two legs of the full bridge topology. The CS1 pin is used as the input for this function.

Several switching cycles are required for the circuit to operate effectively. The maximum amount of modulation applied to each edge of the selected PWM outputs is programmable to  $\pm 80$  ns or  $\pm 160$  ns, using Register 0xFE54[2]. The balance control gains are programmable via Register 0xFE54[1:0].

The compensation of the PWM drive signals is performed on the edges of two selected outputs, using Register 0xFE55, Register 0xFE56, and Register 0xFE57. The direction of the modulation is also programmable in these registers.

The volt-second balance control can be disabled during soft start with Register 0xFE0C[1].

There are also leading edge blanking functions at the sensed CS1 signal for more accurate control results. The blanking time follows the CS1 cycle-by-cycle current-limit blanking time (see the Current Sense section).

To avoid the wrong compensation in light load mode, there is a CS1 threshold in Register 0xFE38 to enable volt-second balance. Below this threshold, volt-second balance is not enabled.

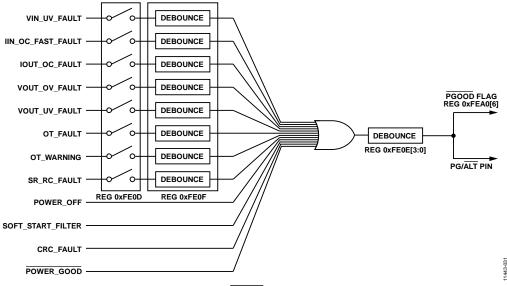


Figure 30. PGOOD Programming

#### **CONSTANT CURRENT MODE**

Constant current mode is part of the PMBus output current fault response function. When the output current reaches the IOUT\_OC\_FAULT\_LIMIT value, the ADP1051 can be configured to operate in constant current mode, using the output current as the feedback signal for closed-loop operation (see Figure 31). To ensure that the output current remains constant, the output voltage is ramped down linearly as the load resistance decreases.

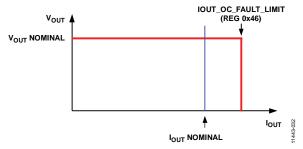


Figure 31. Constant Current Mode (Vout vs. Iout)

Two CS2 output current averaging speeds can be selected via Register 0xFE1B[4]: a 9-bit CS2 current averaging speed and a 7-bit CS2 current averaging speed. The 9-bit CS2 current averaging speed has a VS basic voltage change rate of 1.18 mV/ms.

The 7-bit CS2 current averaging speed has a VS basic voltage change rate of 4.72 mV/ms. In addition, the output voltage change rate can be set by Register 0xFE3A[7:6] to  $1\times$ ,  $2\times$ ,  $4\times$ , or  $8\times$  the VS± basic voltage change rate.

#### **PULSE SKIPPING**

The pulse skipping function can reduce the switching loss under very light load current conditions while keeping the output voltage stable. Register 0xFE67[6] can be set to activate this function.

When light load mode or deep light load mode is enabled, as the output current drops, the supply enters discontinuous conduction mode (DCM). In DCM, the modulation value is a function of the load current. If a very light load current requires a modulation value (duty cycle) of less than the threshold set by Register 0xFE69, pulse skipping mode is enabled. In pulse skipping mode, the PWM output appears intermittently. If the digital compensator signals an error requiring a modulation value that is less than the threshold set by Register 0xFE69, no PWM pulses are generated. If the digital compensator signals an error requiring a modulation value that is greater than the threshold set by Register 0xFE69, PWM pulses are generated.

The pulse skipping mode is always blanked during soft start.

#### PRE-BIAS STARTUP

The pre-bias start-up function provides the capability to start up with a pre-biased voltage on the output. It protects the power supply against existing external voltage on the output during startup and ensures a monotonic startup before the power supply reaches full regulation (see Figure 32).

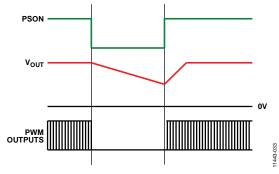


Figure 32. Pre-Bias Startup

The pre-bias start-up function is enabled by Register 0xFE25[7]. During pre-bias startup, the ADP1051 soft start ramp starts at the existing voltage value sensed on the VS± pins, and the soft start ramp time is reduced proportionally. The initial PWM modulation value does not begin with zero but, instead, with a value that builds a balanced relationship between the input voltage and the output voltage. This balance avoids the sudden charging or discharging of the output capacitor and achieves a monotonic and smooth startup. The initial modulation value is calculated by the following equation:

$$t_{MODU\_INI} = t_{MODU\_NOM} \times \frac{V_{OUT}}{V_{OUT-NOM}} \times \frac{V_{IN\_NOM}}{V_{IN}}$$

where:

 $t_{MODU\_INI}$  is the initial modulation value when the controller begins to generate PWM pulses during startup.

 $t_{MODU\_NOM}$  is the modulation value set by Register 0xFE39. It emulates the modulation value when the input voltage and the output voltage are in the nominal condition.

 $V_{OUT}$  is the sensed output voltage.

 $V_{OUT\_NOM}$  is the nominal output voltage set by VOUT\_COMMAND (Register 0x21).

 $V_{IN\_NOM}$  is the nominal input voltage when the VF pin voltage = 1 V.  $V_{IN}$  is the sensed input voltage.

In addition, Register 0xFE6C[1] is set for correct operation. To sense the input voltage (represented by VF) when the power supply is off, use additional circuitry, such as an auxiliary power circuit, to sense the input voltage.

If the input voltage signal is not available when the power is off, the  $t_{\text{MODU\_NNI}}$  value is calculated based on the  $t_{\text{MODU\_NOM}}$  and the output voltage information. In this case, Register 0xFE6C[1] is cleared to 0.

The initial modulation value is calculated as

$$t_{MODU\_INI} = t_{MODU\_NOM} \times \frac{V_{OUT}}{V_{OUT\_NOM}}$$

where:

 $t_{MODU\_INI}$  is the initial modulation value when the controller begins to generate PWM pulses during startup.

 $t_{MODU\_NOM}$  is the modulation value set by Register 0xFE39. It emulates the modulation value when the input voltage and the output voltage are in the nominal condition.

 $V_{OUT}$  is the sensed output voltage.

 $V_{OUT\_NOM}$  is the nominal output voltage set by VOUT\_COMMAND (Register 0x21).

If the closed-loop line voltage feedforward function is selected, the input voltage is introduced from the feedforward loop, and the  $V_{\rm IN}$  value is always included for calculation of the initial modulation value.

SR reverse current protection can be used in pre-bias start-up mode. See the SR Reverse Current Protection section for details. SR soft start can also be enabled in this mode to achieve a smooth transition. See the Synchronous Rectification section for details.

#### **OUTPUT VOLTAGE DROOPING CONTROL**

Output voltage drooping control can be used in the ADP1051. This feature is used for current sharing applications. Output voltage drooping is introduced digitally by modifying the value of the digital output voltage reference, based on the output current value. Two parameters can be configured independently: the drooping resistor and the output current averaging speed.

The drooping resistor follows the PMBus specifications. The VOUT\_DROOP command (Register 0x28) specifies the drooping resistor in the range of 0 m $\Omega$  to 255 m $\Omega$ .

The CS2 (output current) averaging speed dictates how quickly the output current is sensed for generating the digital voltage reference. Register 0xFE1E[7:6] can be set to change the output current update speed from 82  $\mu$ s to 656  $\mu$ s. An output current update of 82  $\mu$ s is recommended.

#### **VDD AND VCORE**

When the voltage of the VDD pin is applied ( $V_{\rm DD}$ ), there is a delay before the part can regulate the power supply. When  $V_{\rm DD}$  rises above the power-on reset and UVLO levels, it takes ~20  $\mu$ s for the VCORE pin (Pin 18) to reach its operational point of 2.6 V. The EEPROM contents are then downloaded to the registers. The download takes approximately an additional 120  $\mu$ s. After the EEPROM contents are downloaded, the ADP1051 is ready for operation; however, it takes a maximum of 52 ms for the ADP1051 to complete initialization of the address after a power-on reset. Therefore, it is recommended that the master device access the ADP1051 at least 52 ms after power-on reset.

If the ADP1051 is programmed to power up at this time, the soft start ramp begins. Otherwise, the part waits for a PSON signal, as programmed in Register 0x01 and Register 0x02.

To minimize trace length, the proper amount of decoupling capacitance must be placed between the VDD pin (Pin 19) and the AGND pin (Pin 20), as close as possible to the device. The same requirement applies to the VCORE pin (Pin 18). It is recommended that the VCORE pin not be used as a reference or to generate other logic levels using resistive dividers.

#### **CHIP PASSWORD**

On power-up, some registers in the ADP1051 are locked and protected from being written to or read from. When the chip is locked, the following commands and all read only registers are accessible:

OPERATION
ON\_OFF\_CONFIG
CLEAR\_FAULTS
WRITE\_PROTECT
RESTORE\_DEFAULT\_ALL
VOUT\_COMMAND
VOUT\_TRIM
VOUT\_CAL\_OFFSET

#### Unlock the Chip Password

To unlock the chip password, perform two consecutive writes with the correct password (default value = 0xFFFF) and using the CHIP\_PASSWORD command (Register 0xD7). Between the two write actions, any read or write action to another register in this device interrupts the unlocking of the chip password. The CHIP\_PASSWORD\_UNLOCKED flag (Register 0xFEA0[7]) is set to indicate that the chip password is unlocked for access.

#### Lock the Chip Password

To lock the chip password, use the CHIP\_PASSWORD command (Register 0xD7) to write any value other than the correct password. The CHIP\_PASSWORD\_UNLOCKED flag (Register 0xFEA0[7]) is then cleared to indicate that the chip password is locked from access.

#### Change the Chip Password

To change the chip password, first write the old password, using the CHIP\_PASSWORD command (Register 0xD7). Next, write the new password, using the same command. The chip password is changed to the new password. If the chip password is to be changed permanently, the register contents must be saved in the EEPROM after the chip password is changed. If the correct chip password is lost, the RESTORE\_DEFAULT\_ALL command (Register 0x12) restores the factory default settings. In this case, all the user settings are reset.

# POWER MONITORING, FLAGS, AND FAULT RESPONSES

The ADP1051 has extensive system and fault condition monitoring capabilities for the sensed signals. The system monitoring functions include current, voltage, power, and temperature readings. The fault conditions include out-of-limit values for current, voltage, power, and temperature. The limits for the fault conditions are programmable, and flags are set when the limits are exceeded.

#### **FLAGS**

The ADP1051 has an extensive set of flags, including the PMBus standard flags and manufacturer specific flags, that are set when certain limits, thresholds are exceeded or certain conditions are met. A setting of 1 indicates that a fault or warning event has occurred. A setting of 0 indicates that a fault or warning event has not occurred.

#### **PMBus Standard Flags**

Figure 33 shows a summary of the ADP1051 PMBus standard fault status registers. The CLEAR FAULTS command (Register 0x03)

is used to clear all bits in the PMBus status registers (Register 0x78 to Register 0x7E) simultaneously.

#### **Manufacturer Specific Flags**

Register 0xFEA0 to Register 0xFEA2 store the manufacturer specific flags. These flags include the following:

Housekeeping flags, such as CHIP\_PASSWORD\_ UNLOCKED, VDD\_OV, EEPROM\_UNLOCKED, and CRC\_FAULT.

Flags that can be programmed for protection responses, such as CS3\_OC\_FAULT, FLAGIN, and SR\_RC\_FAULT.
Status flags, such as PGOOD, CONSTANT\_CURRENT, LIGHT\_LOAD, SYNC\_LOCKED, CHIP\_ID, PULSE\_SKIPPING, ADAPTIVE\_DEAD\_TIME, DEEP\_LIGHT\_LOAD, modulation, and SOFT\_START\_FILTER.

For detailed descriptions of these flags, see the Manufacturer Specific Fault Flag Registers section.

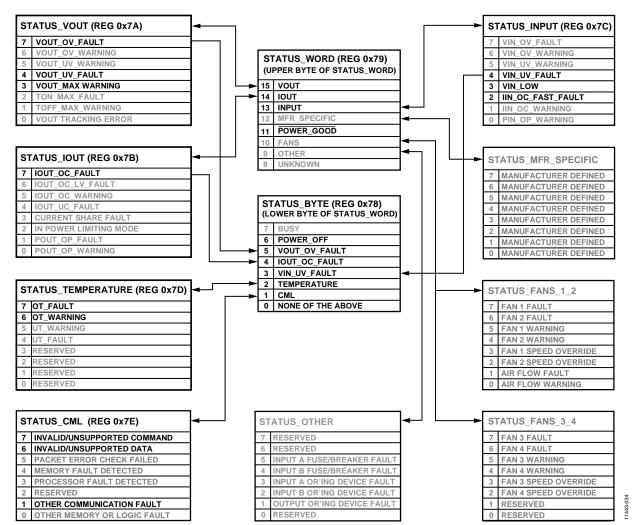


Figure 33. Summary of the Fault Status Registers (Only the commands in black are supported by the ADP1051; the commands in gray are not supported.)

#### **Manufacturer Specific Latched Flags**

The ADP1051 has a set of latched flag registers (Register 0xFEA3 to Register 0xFEA5). The latched flag registers have the same flags as Register 0xFEA0 to Register 0xFEA2, but the flags in the latched registers remain set so that intermittent faults can be detected. Reading a latched flag register resets all the flags in that register. A PSON signal can also reset the latched flags.

#### **Flags Debounce Time**

The debounce timing of the manufacturer specific flags and the PMBus standard flags is programmable (see Table 6). The debounce time is the time during which the fault condition must be continuously triggered before the flag is set. Refer to the corresponding register settings for more information.

The debounce time is used for flag setting. Only the PGOOD flag has a debounce time for flag clearing. For all other flags, the flag reenable delay, specified in Register 0xFE05[7:6] (see Table 106), functions as the debounce time for flag clearing. Refer to the Manufacturer Specific Protection Responses section for details.

#### Housekeeping Flags

The CHIP\_PASSWORD\_UNLOCKED flag (Register 0xFEA0[7]) indicates that the chip password is in the unlocked state, and all the registers can be accessed.

The VDD\_OV flag (Register 0xFEA0[0]) is set when the  $V_{\rm DD}$  voltage exceeds the  $V_{\rm DD}$  OVLO threshold. The debounce time is programmable as 2  $\mu s$  or 500  $\mu s$ , using Register 0xFE05[4]. When the flag is set, the ADP1051 shuts down. The flag is always cleared when Register 0xFE05[5] is set, regardless of the  $V_{\rm DD}$  voltage.

The EEPROM\_UNLOCKED flag (Register 0xFEA2[3]) indicates that the EEPROM is in the unlocked state and can be updated.

The CRC\_FAULT flag (Register 0xFEA2[2]) indicates that an error has occurred when downloading the EEPROM contents to the internal registers. The device shuts down and requires a PSON signal (programmed in Register 0x01 and Register 0x02) and/or the toggling of the CTRL pin (Pin 16) to restart.

#### Flag Blanking During Soft Start

Flag blanking means that when a fault condition is met, the corresponding flag is set, but there are no related actions.

The following flags are always blanked during soft start:

VOUT\_UV\_FAULT OT FAULT

The following flags can be programmed to be blanked during soft start, using Register 0xFE0B:

VOUT\_OV\_FAULT (Bit 0)
CS3\_OC\_FAULT (Bit 1)
IOUT\_OC\_FAULT (Bit 2)
IIN\_OC\_FAST\_FAULT (Bit 3)
VIN\_UV\_FAULT (Bit 4)
LIGHT\_LOAD (Bit 5)
DEEP\_LIGHT\_LOAD (Bit 5)
FLAGIN (Bit 6)
SR RC FAULT (Bit 7)

If a flag is blanked during soft start, it is also blanked during the TON\_DELAY time.

Table 6. Flag Debounce Time

Flag	Debounce Time	Register
VOUT_OV_FAULT	0 μs, 1 μs, 2 μs, 8 μs	0xFE26[7:6]
VOUT_UV_FAULT	0 ms, 20 ms, 40 ms, 80 ms, 160 ms, 320 ms, 640 ms, 1280 ms	0x45[2:0]
IOUT_OC_FAULT	0 ms, 20 ms, 40 ms, 80 ms, 160 ms, 320 ms, 640 ms, 1280 ms	0x47[2:0]
OT_FAULT	1 sec	0x50[2:0]
OT_WARNING	0 ms, 100 ms	0xFE2F[2]
CS3_OC_FAULT	0 ms, 10 ms, 20 ms, 200 ms	0xFE19[6:5]
VIN_UV_FAULT	0 ms, 2.5 ms, 10 ms, 100 ms	0xFE29[1:0]
FLAGIN	0 μs, 100 μs	0xFE12[1]
SR_RC_FAULT	40 ns, 200 ns	0xFE1A[3]
VDD_OV	2 μs, 500 μs	0xFE05[4]
PGOOD	0 ms, 200 ms, 320 ms, 600 ms	0xFE0E[3:0]

#### First Flag ID Recording

When the ADP1051 registers one or several fault conditions, it stores the first flag in a dedicated first flag ID register (Register 0xFEA6). The first flag ID represents the first flag that triggers a shutdown response. The following types of flags are not recorded in the first flag ID register:

Flags that are configured to be ignored

Flags that have a configured response causing the PWM outputs to be disabled, but that do not use a soft start to reenable the PWM outputs after the fault is resolved

Flags that have a configured response causing the synchronous rectifiers to be disabled

The first flag ID register gives the user more information for fault diagnosis than a simple flag. This register also stores the previous first fault ID.

The status of the first flag ID register can be saved to the EEPROM, as well, by setting Register 0xFE0C[3]. To limit the number of writes to the EEPROM, only the first flag after a VDD power reset can be saved to the EEPROM. During the next VDD power-on, the first flag ID is downloaded from the EEPROM and loaded to the first flag ID register (Register 0xFEA6).

Figure 34 shows the timing diagram for the first flag ID recording scheme. Table 7 describes the actions shown in Figure 34.

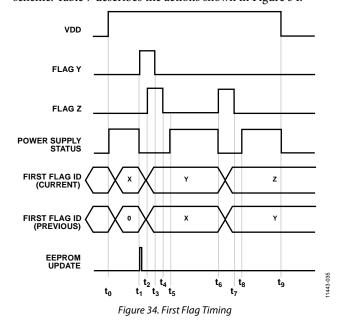


Table 7. First Flag ID Timing<sup>1</sup>

Step		Power	First Flag ID in Register		First Flag ID in EEPROM	
	Action		Previous ID	Current ID	Previous ID	Current ID
t <sub>0</sub>	As an example, the previous ID and the current ID in the EEPROM are 0 and Flag X, respectively. When the $V_{\rm DD}$ voltage is applied on the ADP1051, the first flag ID is downloaded from the EEPROM to the first flag ID register (Register 0xFEA6).	On	0	Flag X	0	Flag X
t <sub>1</sub>	A fault (Flag Y) shuts down the power supply. In the first flag ID register, Flag Y is now the current flag ID, and Flag X is the previous flag ID. The first flag ID register is updated accordingly. The EEPROM is then updated to save this information.	Off	Flag X	Flag Y	Flag X	Flag Y
t <sub>2</sub>	Another fault (Flag Z) occurs while the power supply is off. Because Flag Z is not the first flag that caused the shutdown, neither the first flag ID register nor the EEPROM is updated.	Off	Flag X	Flag Y	Flag X	Flag Y
t <sub>3</sub>	Flag Y is cleared, but Flag Z keeps the power supply off. The first flag ID register and the EEPROM are not updated.	Off	Flag X	Flag Y	Flag X	Flag Y
t <sub>4</sub>	Flag Z is cleared. The first flag ID register is not updated.	Off	Flag X	Flag Y	Flag X	Flag Y
<b>t</b> <sub>5</sub>	The power supply is turned on again after the flag reenable delay. The first flag ID register is not updated.	On	Flag X	Flag Y	Flag X	Flag Y
t <sub>6</sub>	The fault indicated by Flag Z shuts down the power supply. Flag Z is now the current first flag ID, and Flag Y is the previous flag ID. The first flag ID register is updated accordingly. The EEPROM is not updated to save the information.	Off	Flag Y	Flag Z	Flag X	Flag Y
t <sub>7</sub>	Flag Z is cleared. The first flag ID register is not updated.	Off	Flag Y	Flag Z	Flag X	Flag Y
t <sub>8</sub>	The power supply is turned on again after the flag reenable delay. The first flag ID register is not updated.	On	Flag Y	Flag Z	Flag X	Flag Y
t <sub>9</sub>	The V <sub>DD</sub> voltage is removed and the power supply is turned off.	Off	N/A	N/A	N/A	N/A

<sup>&</sup>lt;sup>1</sup> N/A means not applicable.

#### **VOLTAGE READINGS**

#### Input Voltage Reading

The input voltage, which is reported in the READ\_VIN command (Register 0x88), is updated every 10 ms. The VIN\_SCALE\_ MONITOR command (Register 0xD8) is set for correct input voltage reading.

The input voltage is sensed through the VF pin (Pin 5). The VF ADC has an input range of 1.6 V. The raw data is stored in Register 0xFEAC. The reading is 11 bits, meaning that the LSB size is  $1.6 \text{ V}/2048 = 781.25 \,\mu\text{V}$ .

Because the input voltage signal can be sensed through the switching node of the secondary windings, the voltage drop caused by the conduction current in the primary switches, transformer windings, and copper trace adds to the error to the input voltage sense. The following equation is used to compensate for the error:

$$Y_{COMP} = Y_{UNCOMP} \pm (N \times X \div 2^{11})$$

#### where:

 $Y_{COMP}$  is the compensated VF value in Register 0xFEAC[15:5].  $Y_{UNCOMP}$  is the uncompensated VF value in Register 0xFEAC[15:5]. N is the compensation coefficient set in Register 0xFE59[7:0], and the polarity is set in Register 0xFE58[0]. X is the CS1 current value in Register 0xFEA7[15:4].

The compensated VF value is used for conversion of the READ\_VIN value.

#### **Output Voltage Reading**

The output voltage is reported in the READ\_VOUT command (Register 0x8B) and updated every 10 ms. The VOUT\_SCALE\_MONITOR command (Register 0x2A) is programmed for correct output voltage reading.

The output voltage value register (Register 0xFEAA) is updated every 10 ms via the VS low frequency ADC.

The VS low frequency ADC has an input range of 1.6 V. The raw data is stored in Register 0xFEAA. The reading is 12 bits, which means that the LSB size is 1.6 V/4096 = 390.625  $\mu$ V.

#### **CURRENT READINGS**

By default, the current readings are updated every 10 ms; however, Register 0xFE65[1:0] can be used to change the update rate to 52 ms, 105 ms, or 210 ms.

#### **Input Current Reading**

The input current is reported in the READ\_IIN command (Register 0x89). The IIN\_SCALE\_MONITOR command (Register 0xD9) is set for correct input current reading.

The input current reading is derived from the CS1 ADC, which has an input range of 1.6 V. The raw data is stored in Register 0xFEA7. The reading is 12 bits, which means that the LSB size is 1.6 V/  $4096 = 390.625 \,\mu\text{V}$ .

#### **Output Current Reading**

The output current is reported in the READ\_IOUT command (Register 0x8C). The IOUT\_CAL\_GAIN command (Register 0x38) is programmed for correct output current reading.

The output current reading is derived from the CS2 ADC reading. The CS2 ADC has an input value range of 120 mV. The raw data is stored in Register 0xFEA8. The reading is 12 bits, which means that, within a 120 mV range, the LSB size is 120 mV/4096 = 29.297  $\mu$ V.

#### **CS3 Current Reading**

The CS3 reading is an alternative output current reading that is calculated using the CS1 reading and the duty cycle values. The CS3 reading can be used as an alternate output current reading and protection when the current sense resistor, which provides the output current signal to CS2, is not used. The output current reading is derived from the following equation:

$$I_{OUT} = I_{CS3} \times n$$

where  $I_{CS3}$  is read from Register 0xFEA9, and n is the turn ratio of the main transformer ( $n = N_{PRI}/N_{SEC}$ ).

Each LSB size in Register 0xFEA9 is  $4\times$  the LSB size of the CS1 reading in Register 0xFEA7. For example, if 1 LSB = 0.1 A in Register 0xFEA7[15:4], 1 LSB in Register 0xFEA9[15:4] = 0.4 A.

#### **POWER READINGS**

#### **Input Power Reading**

The input power value (Register 0xFEAE) is the product of the VF voltage value in Register 0xFEAC[15:5] and the CS1 current value in Register 0xFEA7[15:4]. Therefore, a combination of both voltage and current formulas is used to calculate the power reading in watts (W). Register 0xFEAE is a 16-bit word. It multiplies two 12-bit numbers and then discards the eight LSBs.

Example: if 1 LSB in Register 0xFEAC[15:5] is 0.01 V and 1 LSB in Register 0xFEA7[15:4] is 0.01 A, 1 LSB in Register 0xFEAE[15:0] is 0.01 V  $\times$  0.01 A  $\times$  2<sup>8</sup> = 0.0256 W.

#### **Output Power Reading**

The output power value (Register 0xFEAF) is the product of the VS voltage value in Register 0xFEAA[15:4] and the CS2 current value in Register 0xFEA8[15:4]. Therefore, a combination of both voltage and current formulas is used to calculate the power reading in watts. Register 0xFEAF is a 16-bit word. It multiplies two 12-bit numbers and then discards the eight LSBs.

Example: if 1 LSB in Register 0xFEAA[15:4] is 0.01 V and 1 LSB in Register 0xFEA8[15:4] is 0.01 A, 1 LSB in Register 0xFEAF[15:0] is 0.01 V  $\times$  0.01 A  $\times$  2<sup>8</sup> = 0.0256 W.

#### **DUTY CYCLE READING**

The READ\_DUTY\_CYCLE command (Register 0x94, which gives the duty cycle of the PWM output value) is updated every 10 ms. Register 0xFE58[5:2] is set for correct reading of general PWM type topologies; these bits select the PWM channel (OUTA to OUTD) for which the duty cycle value is reported. When phase-shifted full bridge topology is used, Register 0xFE58[1] must be set to 1. The duty cycle value is calculated based on the overlapping of the timing of OUTA and OUTD.

#### **SWITCHING FREQUENCY READING**

The READ\_FREQUENCY command (Register 0x95) is used to report the switching frequency information in kHz.

#### **TEMPERATURE READING**

The RTD pin (Pin 23) is set up for use with an external negative temperature coefficient (NTC) thermistor. The RTD pin has an internal programmable current source. An ADC monitors the voltage on the RTD pin. The RTD ADC has an input range of 1.6 V. The raw data is stored in Register 0xFEAB. It is a 12-bit reading, which means that the LSB size is 1.6 V/4096 = 390.625  $\mu V$ .

Using Register 0xFE2D[7:6], an internal precision current source can be configured to generate a 10  $\mu A, 20~\mu A, 30~\mu A,$  or 40  $\mu A$  current. This current source can be trimmed, by means of an internal DAC, to compensate for thermistor accuracy. To set the current source to the factory default value of 46  $\mu A,$  write 0xE6 to Register 0xFE2D.

The output of the RTD ADC is linearly proportional to the voltage on the RTD pin; however, thermistors exhibit a nonlinear function of resistance vs. temperature. Therefore, it is necessary to perform postprocessing on the RTD ADC reading to accurately read the temperature.

By connecting an external resistor in parallel with the NTC thermistor, linearization is achieved. Figure 36 shows the RTD and OTP operation. Using the factory default value of 46  $\mu A$  and the linearization scheme, the temperature, expressed in degrees Celsius (°C), can be read directly via the READ\_TEMPERATURE command (Register 0x8D). The temperature reading is derived from the RTD ADC output, and it is updated every 10 ms. The ADP1051 implements a linearization scheme that is based on a preselected combination of external components and current selection (see the Temperature Linearization Scheme section).

Optionally, the user can process the RTD reading and perform postprocessing in the form of a lookup table or polynomial equation to match the specific NTC thermistor used.

In this case, the external resistor in parallel is not needed. With an internal current source of 46  $\mu A$ , the equation to calculate the ADC code at a certain NTC value (Rx) is given by the following formula:

$$ADC\ CODE = 46\ \mu\text{A} \times R_X/390.7\ \mu\text{V}$$

For example, at 60°C, the NTC thermistor connected to the RTD pin is 21.82 k $\Omega$ . Therefore,

$$RTD\ ADC\ CODE = 46\ \mu A \times 21.82\ k\Omega/390.7\ \mu V = 2570$$

For the overtemperature function, the RTD threshold (in volts) can be transferred through the OT\_FAULT\_LIMIT command in Register 0x4F, using the linearization equations shown in the Temperature Linearization Scheme section.

Alternatively, the temperature reading and overtemperature protection function can be implemented by applying an external analog temperature sensor, such as the STLM20. See Figure 35 for more information. Using this solution, the temperature sense range can be as low as  $-40^{\circ}$ C. To facilitate this approach, the internal current source should be disabled by writing 0x00 to Register 0xFE2D and setting Register 0xFE2B[2]. The temperature reading in °C can be derived by the following formula:

$$T = 159.65 - \frac{ADC\ CODE}{29.92} \times \frac{RI + R2}{R2}$$

where the *ADC CODE* is the reading in Register 0xFEAB[15:4]. The recommended values of R1 and R2 are 20 k $\Omega$  and 10 k $\Omega$ , respectively.

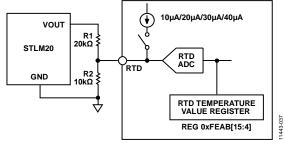


Figure 35. Temperature Sensing by an Analog Temperature Sensor

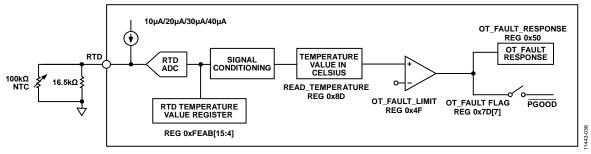


Figure 36. RTD and OTP Operation

#### **TEMPERATURE LINEARIZATION SCHEME**

The ADP1051 linearization scheme is based on a combination of a thermistor (R25 = 100 k $\Omega$ , 1%), an external resistor (16.5 k $\Omega$ , 1%), and the 46  $\mu$ A current source, preselected for best performance when linearizing measured temperatures in the industrial range.

The NTC thermistor that is required must have a resistance of R25 = 100 k $\Omega$ , 1%, such as the NCP15WF104F03RC (beta = 4250, 1%). It is recommended that 1% tolerance be used for both the resistor and beta values. The linearization equations show the relationship between the RTD voltage,  $V_{RTD}$  (in volts), and temperature reading, T (in degrees Celsius).

If T < 104°C,

$$V_{RTD} = (130 - T) \times \frac{1.6}{256}$$

If  $T \ge 104$ °C,

$$V_{RTD} = (156 - T) \times \frac{1.6}{512}$$

where T represents the temperature reading in Register 0x8D.

Figure 37 shows the temperature linearization curves.

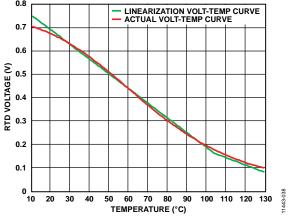


Figure 37. Temperature Linearization Scheme Curves

Using the internal linearization scheme, the READ\_TEMPERATURE command (Register 0x8D) returns the current temperature in degrees Celsius. For overtemperature protection, the user can directly set the OT\_FAULT\_LIMIT command (Register 0x4F) in degrees Celsius. See the OT\_FAULT and OT\_WARNING section for more information.

#### PMBUS PROTECTION COMMANDS

#### **V**<sub>OUT</sub> **Overvoltage Protection (OVP)**

The  $V_{\text{OUT}}$  overvoltage protection feature in the ADP1051 follows PMBus specifications. The limits are programmed in the VOUT\_OV\_FAULT\_LIMIT command (Register 0x40) to correspond to the voltage between 75% and 150% of the nominal output voltage. The responses are programmed using the VOUT\_OV\_FAULT\_RESPONSE command (Register 0x41). The VOUT\_OV\_FAULT flag (Register 0x78[5], Register 0x79[5], and Register 0x7A[7]) is set when the voltage reading exceeds the overvoltage limit.

In a direct parallel system, multiple power supply units are connected directly in parallel without any OR'ing device. An overvoltage condition in one power supply can raise the common bus voltage, causing the activation of overvoltage protection in the other power supplies connected to the common bus. As a result of this overvoltage protection action, the common bus may fail. The ADP1051 provides a highly flexible, conditional overvoltage protection function for redundant control in a direct parallel system. It consists of an overvoltage detection block, a modulation flag triggering block, and an overvoltage response block (see Figure 38).

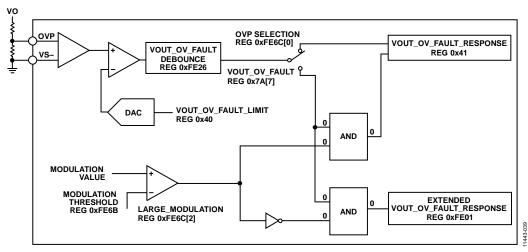


Figure 38. V<sub>OUT</sub> Overvoltage Protection Circuit Implementation

In the overvoltage detection block, there is an internal analog comparator to detect the output voltage and generate the VOUT\_OV\_FAULT flag when an overvoltage condition occurs. The overvoltage reference voltage is set in Register 0x40. The debounce time of the flag setting can be programmed for 0  $\mu$ s, 1  $\mu$ s, 2  $\mu$ s, or 8  $\mu$ s, using Register 0xFE26[7:6]. There is also a 40 ns propagation delay, which is measured from the time when the OVP voltage exceeds the threshold to the time when the comparator output status is changed.

In the modulation flag triggering block, the real-time modulation value is compared to the internal reference to generate the LARGE\_MODULATION flag. Register 0xFE6C[2] sets the LARGE\_MODULATION flag when the real-time modulation value exceeds the modulation threshold set by Register 0xFE6B.

In the overvoltage responses block, there are two groups of overvoltage protection responses: the VOUT\_OV\_FAULT\_RESPONSE PMBus command, set in Register 0x41, and the extended VOUT\_OV\_FAULT\_RESPONSE, set in Register 0xFE01[7:4].

There is a conditional OVP enable switch in Register 0xFE6C[0]. If the switch is cleared to 0, the conditional OVP function is disabled and the OVP response always follows the VOUT\_OV\_FAULT\_RESPONSE PMBus command (Register 0x41). If the switch is set to 1, the OVP response follows the VOUT\_OV\_FAULT\_RESPONSE command or the extended VOUT\_OV\_FAULT\_RESPONSE, depending on the status of the LARGE\_MODULATION flag.

For example, when using a direct parallel system, if the VS+ pin (Pin 2) and the VS- pin (Pin 1) in one power supply unit (PSU) are shorted and this PSU experiences overvoltage failure, all the PSUs detect the overvoltage signal. The LARGE\_MODULATION flag is used to identify the failed PSU. Typically, the failed PSU is shut down, and the other PSUs continue to operate normally.

The modulation threshold is typically set with a value that is slightly less than the modulation limit setting in Register 0xFE3C; however, the modulation limit can change when the ADP1051 unit acts as a slave device to synchronize with an external clock (see the Switching Frequency and Synchronization Registers section for more information).

For more information about extended overvoltage protection, see the Manufacturer Specific Protection Responses section and the related register settings.

#### **V**<sub>OUT</sub> **Undervoltage Protection (UVP)**

The  $V_{OUT}$  undervoltage protection feature follows PMBus specifications. The limits are programmed using the VOUT\_UV\_ FAULT\_LIMIT command (Register 0x44), and the responses are programmed in the VOUT\_UV\_FAULT\_RESPONSE command (Register 0x45). When the voltage reading in the READ\_VOUT command (Register 0x8B) falls below the VOUT\_UV\_FAULT\_LIMIT value, the VOUT\_UV\_FAULT flag in Register 0x7A[4] is set.

During the period of the soft start ramp, the turn-on delay time is specified by the TON\_DELAY command (Register 0x60), and the flag reenabled time is specified by Register 0xFE05[7:6]. The VOUT\_UV\_FAULT flag is always blanked. Under these conditions, the VOUT\_UV\_FAULT flag is never triggered by an undervoltage condition.

#### **I**<sub>OUT</sub> **Overcurrent Protection (OCP)**

The I<sub>OUT</sub> overcurrent protection feature in the ADP1051 follows PMBus specifications. The CS2 current sense information is used for I<sub>OUT</sub> overcurrent protection. The limits are programmed in the IOUT\_OC\_FAULT\_LIMIT command (Register 0x46), and the responses are programmed in the IOUT\_OC\_FAULT\_RESPONSE command (Register 0x47). The IOUT\_OC\_FAULT flag in Register 0x78[4], Register 0x79[4], and Register 0x7B[7] is set when the current reading in the READ\_IIN command exceeds the IOUT\_OC\_FAULT\_LIMIT value.

When the  $I_{\text{OUT}}$  overcurrent fault is triggered, the ADP1051 can be programmed to enter constant current mode. Refer to the Constant Current Mode section for more information.

#### OT FAULT and OT WARNING

The overtemperature protection feature in the ADP1051 follows PMBus specifications. With the default setting, the OTP limit is programmed using the OT\_FAULT\_LIMIT command in Register 0x4F, and the response is programmed using the OT\_FAULT\_RESPONSE command (Register 0x50).

There is an overtemperature warning flag, OT\_WARNING, in Register 0x7D[6]. The OT\_WARNING limit is less than the OT\_FAULT\_LIMIT, with an overtemperature hysteresis specified by Register 0xFE2F[1:0].

When the temperature sensed at the RTD pin (Pin 23) exceeds the OT\_WARNING limit, the OT\_WARNING flag (Register 0x7D[6]) is set. When the temperature sensed at RTD pin exceeds the OT\_FAULT\_LIMIT, the OT\_FAULT flag (Register 0x7D[7]) is set. The OT\_FAULT and OT\_WARNING flags are cleared when the temperature falls below the OT\_WARNING limit (see Figure 39).

The OT\_FAULT flag and the OT\_WARNING flag can each be separately set to trigger the PGOOD flag and drive the PG/ALT pin (Pin 17) low.

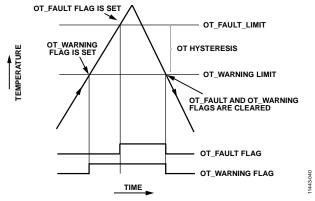


Figure 39. OT Protection and OT Warning Operation

Optionally, the user can process the RTD reading and use the linearization equation to determine the overtemperature protection setting. This allows the user to program the RTD threshold for greater overtemperature protection accuracy.

Alternatively, if an analog temperature sensor, such as the STLM20, is used, the OT\_FAULT limit can still be programmed using the OT\_FAULT\_LIMIT command (Register 0x4F), but a conversion equation is needed.

Using Figure 35 as an example, assume that R1 and R2 are  $20~k\Omega$  and  $10~k\Omega$ , respectively, and the value in Register 0x4F is  $T_{OT~SET~LIMIT}$ .

If Tot\_Set\_Limit < 104 decimal,

 $T_{OT\ ACTUAL\ LIMIT} = 1.6039 \times T_{OT\ SET\ LIMIT} - 48.8623$ 

If Tot set limit ≥ 104 decimal

 $T_{OT\_ACTUAL\_LIMIT} = 0.801967 \times T_{OT\_SET\_LIMIT} + 34.5423$ 

Table 8 shows some typical OTP threshold settings when using an analog temperature sensor, such as the STLM20.

Table 8. Typical OT Fault Limit Settings When Using an Analog Temperature Sensor

- Thurog Temperature Sensor	
T <sub>OT_SET_LIMIT</sub>	
OT Limit Programmed	T <sub>OT_ACTUAL_LIMIT</sub>
in Register 0x4F (In Decimal)	Actual OT Limit (°C)
55	39.35
60	47.37
65	55.39
70	63.41
75	71.43
80	79.45
85	87.47
90	95.49
95	103.51
100	111.53
105	118.75
110	122.76
115	126.77
120	130.78
125	134.79
130	138.80

If the STLM20 is used, the temperature hysteresis can be set using Register 0xFE2F[1:0], as follows:

00 = 3.21°C, 01 = 6.42°C, 10 = 9.62°C, or 11 = 12.83°C.

## VIN ON and VIN OFF

Two PMBus commands, VIN\_ON (Register 0x35) and VIN\_OFF (Register 0x36), allow the user to set the input voltage on and off limits independently.

The VIN\_LOW flag in Register 0x7C[3] is set at initialization. When the input voltage exceeds the VIN\_ON limit, the VIN\_LOW flag is cleared. If the PSON signal is asserted, the power conversion starts. When the input voltage drops below the VIN\_OFF limit, the VIN\_LOW flag is set and the power conversion stops. The delay time for the power conversion start and stop can be set separately by Register 0xFE29[3:2] and Register 0xFE29[4].

Alternatively, if the input voltage signal is not available before startup, the VIN\_ON and VIN\_OFF commands can be set for input voltage undervoltage protection using Register 0xFE29[5].

The VIN\_UV\_FAULT flag in Register 0x78[3], Register 0x79[3], and Register 0x7C[4] is set if the input voltage reading falls below the VIN\_OFF limit.

The debounce time of the VIN\_UV\_FAULT flag setting can be programmed at 0 ms, 2.5 ms, 10 ms, or 100 ms, using Register 0xFE29[1:0]. Because the  $V_{\rm IN}$  reading is averaged every 1 ms, there is an additional debounce time of up to 1 ms.

The response to the VIN\_UV\_FAULT flag is programmed via the VIN\_UV\_FAULT\_RESPONSE bits (Register 0xFE02[7:4]). Refer to the Manufacturer Specific Protection Responses section and the related register settings for details.

# MANUFACTURER SPECIFIC PROTECTION COMMANDS

#### CS1 Cycle-by-Cycle Current Limit

CS1 cycle-by-cycle current limit is implemented using an internal analog comparator (see Figure 25). When the voltage at the CS1 pin (Pin 6) exceeds the threshold set by Register 0xFE1B[6], the comparator output is triggered high and an internal flag (CS1\_OCP, which is not accessible by the user and, therefore, not listed in the register tables) is triggered. There is a 105 ns (maximum) propagation delay in the comparators.

A blanking time of 0 ns, 40 ns, 80 ns, 120 ns, 200 ns, 400 ns, 600 ns, or 800 ns can be set to ignore the current spike at the beginning of the current signal. The blanking time is set in Register 0xFE1F[6:4].

During this time, the comparator output is ignored. The blanking time of the CS1\_OCP flag can be referenced to the rising edges of OUTA, OUTB, OUTC, and OUTD, using Register 0xFE1D[3:0].

A debounce time of 0 ns, 40 ns, 80 ns, or 120 ns can also be added to improve the noise immunity of the CS1 OCP comparator output circuit. The debounce time is set using Register 0xFE1F[1:0]. This is the minimum time that the CS1 signal must be constantly above the threshold before it takes action.

Figure 40 shows an example of CS1 cycle-by-cycle current-limit timing, with the rising edge of OUTA as the blanking time reference. When the CS1\_OCP flag is set, it is not cleared until the beginning of the next switching cycle.

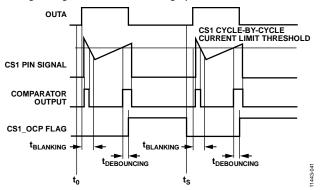


Figure 40. CS1 Cycle-by-Cycle Current-Limit Timing

When the CS1\_OCP flag is triggered, Register 0xFE08[6:5] and Register 0xFE0E[7:4] can be used to disable all PWM outputs for the remainder of the switching cycle. They are reenabled at the start of the next switching cycle. During one switching cycle, if the rising edge of a PWM output occurs after the CS1\_OCP flag is triggered, the PWM remains enabled for the switching cycle.

To avoid current overstress of the body diode of the synchronous rectifiers, the cycle-by-cycle current-limit actions of the SR1 and SR2 outputs can be further programmed by Register 0xFE1E[1:0].

They can be programmed in the same way as the other PWM outputs, or they can be programmed so that when the CS1\_OCP flag is triggered, the SR PWM output is turned on. There is a 145 ns to 180 ns delay (dead time) between the CS1\_OCP flag being triggered and the turning on of the SR PWM outputs. The falling edges continue to follow the programmed value.

The cycle-by-cycle current limit is always activated regardless of the  $I_{\rm IN}$  overcurrent fast protection settings. The comparator output can be completely ignored by setting Register 0xFE1F[7].

## IIN Overcurrent Fast Protection

There is an internal counter, N. N is a positive integer or zero, with an initial value of 0. The counters work as follows:

When the CS1\_OCP flag is triggered in one cycle (the CS1 OCP comparator is triggered high), N is counted as  $N_{\text{CURRENT}} = N_{\text{PREVIOUS}} + 2$ .

If the CS1\_OCP flag is not triggered in one cycle and the  $N_{PREVIOUS} > 0$ ,  $N_{CURRENT} = N_{PREVIOUS} - 1$ .

If the CS1\_OCP flag is not triggered in one cycle and the  $N_{PREVIOUS} = 0$ ,  $N_{CURRENT} = 0$ .

When the value of N reaches the limit specified by IIN\_OC\_FAST\_FAULT\_LIMIT, the IIN\_OC\_FAST\_FAULT flag is triggered (see Figure 41).

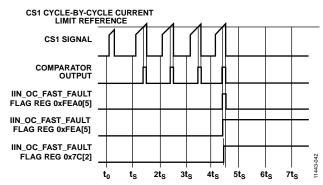


Figure 41. I<sub>IN</sub> Overcurrent Fast Fault Triggering

For the single-ended topologies, such as forward converter and buck converter, a switching cycle consists of one cycle. For the double-ended topologies, such as full bridge converter, half bridge converter, and push pull converter, there are two cycles in a switching cycle. The IIN\_OC\_FAST\_FAULT\_LIMIT bits are in Register 0xFE1A[6:4]. In Figure 41, the IIN\_OC\_FAST\_FAULT\_LIMIT value is set to 8.

The response of the IIN\_OC\_FAST\_FAULT flag can be programmed in the IIN\_OC\_FAST\_FAULT\_RESPONSE bits (Register 0xFE00[3:0]). See the Manufacturer Specific Protection Responses section and the register settings for the action details.

## Matched Cycle-by-Cycle Current Limit in a Half Bridge Converter

For the half bridge converter, the cycle-by-cycle current-limit feature, described previously, cannot guarantee the balance of duty cycles between two half cycles in one switching cycle.

The imbalances of each half cycle can cause the center point voltage of the capacitive divider to drift from  $V_{\rm IN}/2$  toward either the ground or the input voltage,  $V_{\rm IN}$ . This drift, in turn, can lead to output voltage regulation failure, transformer saturation, and doubling of the drain to source voltage  $(V_{\rm DS})$  stress of the synchronous rectifiers.

To compensate for these imbalances, matched cycle-by-cycle current limiting is implemented in the ADP1051 by forcing each cycle to be equalized, or matched, to the previous one.

When the matched cycle-by-cycle current limit is triggered, the duty cycle in the following half cycle exactly matches the actual duty cycle in the preceding half cycle. However, the cycle-by-cycle current limit is always the highest priority to terminate the PWM channels. For example, if one previous cycle has a duty cycle of 20% under a cycle-by-cycle current-limit condition, the following cycle should also be matched to a duty cycle of 20%. However, if the cycle-by-cycle current limit occurs in the following cycle and it must terminate the PWM with a smaller duty cycle, the cycle-by-cycle current limit takes higher priority and the duty cycle can be a value that is smaller than 20%.

The matched cycle-by-cycle current limit is enabled by Register 0xFE1D[6]. Register 0xFE1D[5:4] is used to set the PWM pairs for the matched cycle-by-cycle current limit.

#### **CS3 Overcurrent Protection**

CS3 overcurrent protection provides alternative output overcurrent protection if the CS2 current sense is not available. The reading is calculated from the CS1 and duty cycle readings.

The CS3\_OC\_FAULT flag (Register 0xFEA0[3]) is set when the CS3 current reading of the eight most significant bits (MSBs) in Register 0xFEA9 exceeds the CS3\_OC\_FAULT\_LIMIT that is programmed in Register 0xFE6A. The debounce time of the flag setting can be programmed at 0 ms, 10 ms, 20 ms, or 200 ms in Register 0xFE19[6:5]. The response of the CS3\_OC\_FAULT flag is programmed in the CS3\_OC\_FAULT\_RESPONSE bits (Register 0xFE01[3:0]). See the Manufacturer Specific Protection Responses section and the register settings for specific action information.

## **SR Reverse Current Protection**

In synchronous rectification applications, the reverse current may flow from  $V_{\text{OUT}}$  through the output inductor, synchronous rectifiers, and current sense resistor to ground. If the synchronous rectifiers are turned off during a large reverse current condition, the high voltage stress due to the large di/dt of current flowing into the output inductor may damage the synchronous rectifiers.

The SR reverse current detection is implemented by an analog comparator with programmable references. The reverse current protection limit, SR\_RC\_FAULT\_LIMIT, is programmed using Register 0xFE1A[2:0]. If the negative differential voltage between the CS2– pin (Pin 3) and CS2+ pin (Pin 4) falls below the value programmed in Register 0xFE1A[2:0], the SR\_RC\_FAULT flag is triggered. The debounce time for triggering the SR\_RC\_FAULT flag is 40 ns or 200 ns, set by Register 0xFE1A[3].

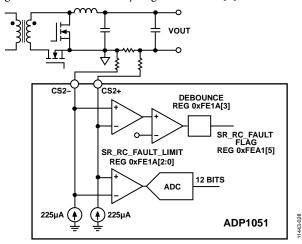


Figure 42. SR FET Reverse Current Protection

The SR\_RC\_FAULT flag response is set in the SR\_RC\_FAULT\_RESPONSE bits (Register 0xFE03[7:4]) to suppress the reverse current. Besides the three response options of continuing operation without interruption, disabling SR1 and SR2, and disabling all the PWM outputs, there is a fourth fault response mode: changing the rising edge position of SR1 and SR2.

Under this protection mode, the rising edges of SR1 and SR2 each maintain a fixed value, effective from the next switching cycle (typically SR1 and SR2 are set to 50% duty cycle for best performance). The fixed values of the rising edge timings for SR1 and SR2 can be determined as follows:

$$t_{Rx} + t_{MODU\_LIMIT} - t_{OFFSET}$$

#### where:

 $t_{Rx}$  is the timing of the rising edges of SR1 and SR2 (see Figure 68).  $t_{MODU\_LIMIT}$  is the modulation limit defined in Register 0xFE3C.  $t_{OFFSET}$  is the offset setting in Register 0xFE68.

After the fault flag is cleared, SR1 and SR2 can be set to return immediately to normal condition or follow the soft recovery process, as specified in Register 0xFE03[5:4]. For the best reverse current protection performance, use the previously defined settings to fine-tune the SR1 and SR2 PWM timing.

Using this protection mode to set the 50% duty cycle operation of the SR1 and SR2 signals, energy in the output is discharged back to the input, and the reverse current is suppressed. Accordingly, the drain to source voltage ( $V_{DS}$ ) stress of the synchronous rectifiers is suppressed. See the Manufacturer Specific Protection Responses section and the register settings for specific action information.

#### **FLAGIN Protection**

The SYNI/FLGI pin (Pin 13) can be configured in flag input mode (FLGI). An external signal can be sent to the ADP1051 to trigger an action. The polarity of the external signal is configured by the FLGI polarity bit (Register 0xFE12[2]). When the ADP1051 detects an external signal, the FLAGIN flag is set. The response to the FLAGIN flag is programmed in the FLAGIN\_RESPONSE bits (Register 0xFE03[3:0]). See the Manufacturer Specific Protection Responses section and the register settings for the more information about the actions that can be programmed.

## **V<sub>DD</sub> OVLO Protection**

The ADP1051 has built-in overvoltage protection (OVP) on its supply rail. The  $V_{\rm DD}$  overvoltage response bits (VDD\_OV\_RESPONSE), found in Register 0xFE05[5:4], are used to specify the response to a  $V_{\rm DD}$  overvoltage condition.

If Register 0xFE05[5] = 0, the VDD\_OV flag is set and the ADP1051 shuts down when the  $V_{DD}$  voltage rises above the OVLO threshold. When the  $V_{DD}$  overvoltage condition ends, the VDD\_OV flag is cleared and the ADP1051 downloads the EEPROM contents before restarting with a soft start process. The debounce time of the VDD\_OV flag can be programmed using Register 0xFE05[4].

If Register 0xFE05[5] = 1, the VDD\_OV flag is always cleared, regardless of  $V_{\rm DD}$  voltage conditions. The ADP1051 continues to operate without interruption.

It is recommended that the VDD\_OV flag response not be programmed as always cleared.

# MANUFACTURER SPECIFIC PROTECTION RESPONSES

For the VDD\_OV flag and protection action, see the  $V_{\rm DD}$  OVLO Protection section.

The following flags can be configured to trigger protection responses: IIN\_OC\_FAST\_FAULT, VOUT\_OV\_FAULT, CS3\_OC\_FAULT, VIN\_UV\_FAULT, FLAGIN, and SR\_RC\_FAULT. The VOUT\_OV\_FAULT flag, which triggers the manufacturer specific protection in Register 0xFE01[7:4], is used only for conditional overvoltage protection. See the V<sub>OUT</sub> Overvoltage Protection (OVP) section for details.

Each of the aforementioned flags can be individually programmed to trigger one of the following responses:

Continue operation without interruption (flag ignored) Disable SR1 and SR2 Disable all PWM outputs

After the condition that triggered the flag is resolved and the flag is cleared, the ADP1051 can be programmed to respond as follows:

After the flag reenable delay time elapses, reenable the disabled PWM outputs with a soft start sequence.

Reenable the disabled PWM outputs immediately without the soft start process.

Keep the PWM output disabled. A PSON reset signal must be used to reenable the PWM outputs with a soft start sequence.

For the SR\_RC\_FAULT flag, there is a fourth response option: The rising edges of SR1 and SR2 move to  $t_{Rx} + t_{MODU\_LIMIT} - t_{OFFSET}$ . After the flag is cleared, the ADP1051 can be programmed to respond as follows:

SR1 and SR2 return to normal with soft start. SR1 and SR2 return to normal without soft start.

For more information, see the SR Reverse Current Protection section.

The first flag that causes all PWM outputs to be disabled, and also requires a soft start if the PWM outputs are reenabled, is recorded as the first flag ID. For more information about use of the first flag ID, see the First Flag ID Recording section.

A flag reenable delay can be set for the listed manufacturer specific flags. This delay is used if the configured action for a flag is to reenable the PWM outputs after the flag reenable delay. This delay can be set to 250 ms, 500 ms, 1 sec, or 2 sec, using Register 0xFE05[7:6].

## POWER SUPPLY CALIBRATION AND TRIM

All the ADP1051 parts are factory trimmed. If the ADP1051 is not trimmed in the power supply production environment, it is recommended that components with a 0.1% tolerance be used for the inputs to the CS1, CS2±, VS±, VF, and OVP pins to meet data sheet specifications (see the Specifications section).

In the power supply production environment, the ADP1051 can calibrate items, such as output voltage and trim, for tolerance errors that are introduced by sense resistors and resistor dividers, as well as its own internal circuitry. The ADP1051 allows the user enough trim capability to trim for external components with a tolerance of  $\leq 0.5\%$ .

To unlock the trim registers for write access, the user must perform two consecutive write actions with the correct password (factory default value = 0xFF), using the TRIM\_PASSWORD command (Register 0xD6). Any read or write action to another register in this device, occurring between these two write actions, interrupts the unlocking of the chip password.

The trim registers are Register 0xFE14 through Register 0xFE17, Register 0xFE20, Register 0xFE28, and Register 0xFE2A through Register 0xFE2C. For complete information about these registers, see the Manufacturer Specific Extended Commands Descriptions section.

## I<sub>IN</sub> TRIM (CS1 TRIM)

## **Using a DC Signal**

A known dc voltage (Vx) is applied at the CS1 pin. The IIN\_SCALE\_MONITOR command (Register 0xD9) is set to 0x0001. The READ\_IIN input current reading command (Register 0x89) generates a digital code (representing the input current in amperes) that is equal to the Vx voltage value. The CS1 gain trim register (Register 0xFE14) is adjusted until the input current reading in Register 0x89 reads the correct digital code.

## **Using an AC Signal**

A known current (Ix) is applied to the PSU input. This current passes through a current transformer, a diode rectifier, and an external resistor ( $R_{CS1}$ ) to convert the current information to a voltage (Vx). This voltage is fed into the CS1 pin. The IIN\_SCALE\_MONITOR is calculated as follows:

$$IIN\_SCALE\_MONITOR = (N_{PRI}/N_{SEC}) \times R_{CS1}$$

where  $N_{PRI}$  and  $N_{SEC}$  are the turns of the primary side and secondary side windings, respectively, of the current transformer.

The READ\_IIN input current reading command generates a digital code, representing the input current, Ix. The CS1 gain trim register (Register 0xFE14) is adjusted until the input current reading in Register 0x89 reads the correct digital code.

## I<sub>OUT</sub> TRIM (CS2 TRIM)

#### **CS2 Offset Trim**

Offset errors are caused by the combined mismatch of the external level shifting resistors and the internal current sources. The level shift resistors must have a tolerance of  $\leq$ 0.1%. The offset trim has both an analog and a digital component. With 0 V at the CS2 $\pm$  inputs, the desired ADC reading is 0 LSB.

The analog offset trim is performed to achieve a differential input voltage of 0 V. The digital offset trim is performed to achieve an ADC reading of 0 LSB. It is important to perform the offset trim in the following order:

- 1. Select high-side or low-side current sensing, using Register 0xFE19[7].
- 2. Set the current sense resistor value, using the IOUT\_CAL\_GAIN command (Register 0x38). It is important to note that the real IOUT\_CAL\_GAIN value should be slightly greater than the current sense resistor value, due to possible copper trace and soldering resistance. The real IOUT\_CAL\_GAIN value must be determined for accurate reading of the output current.
- 3. Set the digital offset trim value to 0x00, using Register 0xFE16.
- 4. Adjust the CS2 analog offset trim value (Register 0xFE17) until the value in Register 0xFEA8 reads as close as possible to 100 decimal.
- 5. Increase the CS2 digital offset trim register value, using Register 0xFE16, until the value in Register 0x8C reads 0 A.

The offset trim is then complete. With 0 V at the CS2± inputs, the ADC code reads 0, and the READ\_IOUT reading is 0 A.

#### **CS2 Gain Trim**

After completing the offset trim, perform the gain trim to remove any mismatch that is introduced by the current sense resistor tolerance. The ADP1051 can trim for current sense resistors with a tolerance of  $\leq$ 1%.

- 1. Apply a known current (I<sub>OUT</sub>) across the sense resistor.
- 2. Adjust the CS2 gain trim value in Register 0xFE15 until the READ\_IOUT value in Register 0x8C reads the value.

The CS2 circuit is now trimmed. After the current sense trim is complete, the IOUT\_OC\_FAULT\_LIMIT and IOUT\_OC\_FAULT\_RESPONSE are configured.

## **V<sub>OUT</sub> TRIM (VS TRIM)**

The voltage sense input at the VS $\pm$  pins is optimized for sensing signals at 1 V and cannot sense a signal greater than 1.6 V. It is recommended that the nominal output voltage be reduced to 1 V for best performance. The resistor divider introduces errors that must be trimmed. The ADP1051 has enough trim range to trim errors that are introduced by resistors with a tolerance of  $\leq$ 0.5%.

To trim the errors introduced by the resistor divider, use the following procedure:

- Set the VOUT\_COMMAND (Register 0x21) with the nominal output voltage value. Set the VOUT\_SCALE\_ LOOP command (Register 0x29) and the VOUT\_SCALE\_ MONITOR command (Register 0x2A), based on the resistor divider information.
- 2. Enable the power supply with the no-load current. The voltage of the VS± pins is divided down by the VS resistor divider to give a target of 1 V at the VS± pins.
- 3. Adjust the VOUT\_CAL\_OFFSET trim (Register 0x23) to ensure that the output voltage is exactly the target output voltage.
- 4. Adjust the VS gain trim register (Register 0xFE20) when the READ\_VOUT reading in Register 0x8B is the exact output voltage reading.

## **VIN TRIM (VF GAIN TRIM)**

The voltage sense inputs are optimized for the VF pin signals at 1 V and cannot sense a signal greater than 1.6 V. A resistor divider is required to divide the sensed voltage signal into a voltage of less than 1.6 V. It is recommended that the VF voltage signal be reduced to 1 V for best performance. The resistor divider introduces errors, which need to be trimmed.

Use the following procedure:

 Set the VIN\_SCALE\_MONITOR command in Register 0xD8 based on the resistor divider information (see Figure 22) and the turn ratio information of the transformer:

IN\_SCALE\_MONITOR = 
$$\frac{R2}{RI + R2} \times \frac{N_{SEC}}{N_{PRI}}$$

where  $N_{PRI}$  and  $N_{SEC}$  are the turns of the primary side and secondary side windings, respectively, of the transformer.

- Apply the nominal input voltage at the no load condition to achieve a targeted voltage of approximately 1 V at the VF pin.
- 3. Adjust the VF gain trim register (Register 0xFE28) when the READ\_VIN reading in Register 0x88 is the exact nominal voltage reading.
- Adjust the input voltage compensation multiplier (Register 0xFE59) to make the READ\_VIN reading match the exact input voltage at full load condition.

#### RTD AND OTP TRIM

The RTD requires two trims, one for the ADC and one for the current source. To use the internal linearization scheme, additional trimming procedures are required.

## **Trimming the Current Source**

Register 0xFE2D[7:6] sets the value of the RTD current source to 10  $\mu$ A, 20  $\mu$ A, 30  $\mu$ A, or 40  $\mu$ A. Register 0xFE2D[5:0] can be used to fine-tune the current value. By fine-tuning the internal current source, component tolerance can be compensated and errors can be minimized. One LSB in Bits[5:0] = 160 nA.

A decimal value of 1 adds 160 nA to the current source set by Register 0xFE2D[7:6]; a decimal value of 63 adds  $63 \times 160$  nA =  $10.08 \mu$ A to the current source set by Register 0xFE2D[7:6].

Use Register 0xFE2D[7:6] to program a value for the current source, selecting the nearest possible option (10  $\mu$ A, 20  $\mu$ A, 30  $\mu$ A, or 40  $\mu$ A). Then use Register 0xFE2D[5:0] to achieve the finer step size.

For example, to use a value of 46  $\mu A$  as the current source, follow these steps:

- 1. Place a known resistor (Rx) from the RTD pin to AGND.
- 2. Set Register 0xFE2D[7:6] to 11 binary (40  $\mu$ A).
- 3. Increase the value of Register 0xFE2D[5:0], 1 LSB at a time, until the voltage at the RTD pin is  $V_{RTD} = 46 \mu A \times Rx$ .

The current source is now calibrated and set to the factory default value.

## **Trimming the ADC**

The first option for trimming the ADC uses the internal linearization scheme with 46  $\mu A$  RTD current, which provides an accurate reading, expressed in degrees Celsius, read in the READ\_TEMPERATURE command (Register 0x8D) in decimal format.

Use an R25 = 100 k $\Omega$ , 1% accuracy NTC thermistor with beta = 4250, 1% (such as the NCP15WF104F03RC) in parallel with an external resistor of 16.5 k $\Omega$ , 1%, with the ADP1051. With this NTC thermistor and resistor combination, the ADP1051 default current source trim is set to 46  $\mu$ A to achieve the best possible accuracy over temperatures ranging from 85°C to 125°C.

If an external microcontroller is used, the RTD ADC value in Register 0xFEAB can be fed into the microcontroller, and a different linearization scheme can be implemented in terms of a best-fit polynomial for the selected NTC characteristics.

## **APPLICATIONS CONFIGURATIONS**

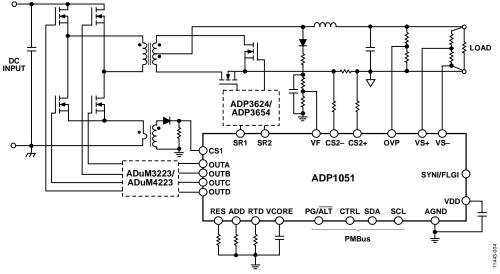


Figure 43. Full Bridge Converter

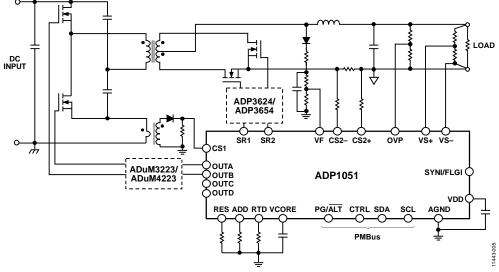


Figure 44. Half Bridge Converter

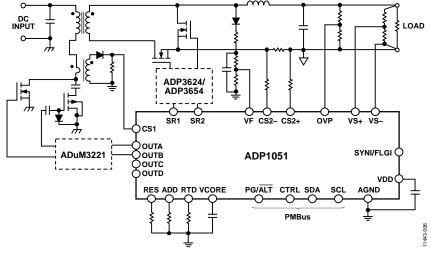


Figure 45. Active Clamp Forward Converter

## LAYOUT GUIDELINES

This section explains best practices to ensure optimal performance of the ADP1051. In general, place all components of the ADP1051 control circuit as close to the ADP1051 as possible. The OVP and VS+ signals are referred to VS-. All other signals are referred to the AGND plane.

## CS1 PIN

Route the traces from the current sense transformer to the ADP1051, parallel to each other. Keep the traces near each other, but far away from the switch nodes.

#### CS2+ AND CS2- PINS

Route the traces from the sense resistor to the ADP1051 parallel to each other. A Kelvin connection is recommended for the sense resistor. Keep the traces near each other, but far away from the switch nodes.

#### **VS+ AND VS- PINS**

Route the traces from the remote voltage sense point to the ADP1051 parallel to each other. Connect VS— to AGND, with a low ohmic connection. Keep the traces near each other, but far away from the switch nodes. Place a 100 nF capacitor from VS— to AGND to reduce the common-mode noise. If VS— is connected directly to AGND, the capacitor is not needed.

## **OUTA TO OUTD, SR1 AND SR2 PWM OUTPUTS**

Place  $10 \Omega$  resistors between the PWM outputs and isolators or drivers inputs, especially if the isolators and drivers are far from the ADP1051. Keep the traces far away from the switch nodes.

#### **VDD PIN**

Place decoupling capacitors as close as possible to the ADP1051. A 2.2  $\mu F$  capacitor connected from VDD to AGND is recommended.

#### **VCORE PIN**

Place a 330 nF decoupling capacitor from the VCORE pin to AGND, as close as possible to the ADP1051.

#### **RES PIN**

Place a 10 k $\Omega$ , 0.1% resistor from the RES pin to AGND, as close as possible to the ADP1051.

## **SDA AND SCL PIN**

Route the traces to the SDA and SCL pins parallel to each other. Keep the traces near each other, but far away from the switch nodes.

## **EXPOSED PAD**

Solder the exposed pad under the ADP1051 to the PCB AGND plane.

## **RTD PIN**

Route the traces (including the ground returning trace) from the thermistor to the ADP1051. Place the thermistor near the hotspot of the power supply, and keep the thermistor and the traces away from the switching node. Place the 1 nF filtering capacitor nearby, in parallel with the thermistor.

## **AGND PIN**

Create an AGND ground plane on the adjacent layer of the ADP1051 and make a single-point (star) connection to the power supply system ground.

## PMBus/I<sup>2</sup>C COMMUNICATION

The PMBus slave allows a device to interface with a PMBus-compliant master device, as specified by the *PMBus Power System Management Protocol Specification* (Revision 1.2, September 6, 2010). The PMBus slave is a 2-wire interface that can be used to communicate with other PMBus-compliant devices and is compatible in a multimaster, multislave bus configuration.

## **PMBus FEATURES**

The function of the PMBus slave is to decode the command that is sent from the master device and respond as requested. Communication is established using an I<sup>2</sup>C-like, 2-wire interface with a clock line (SCL) and data line (SDA). The PMBus slave is designed to externally move chunks of 8-bit data (bytes) while maintaining compliance with the PMBus protocol. The PMBus protocol is based on the *System Management Bus (SMBus) Specification*, Version 2.0, August 2000. The SMBus specification is, in turn, based on the Philips *I*<sup>2</sup>C *Bus Specification*, Version 2.1, dated January 2000. The PMBus incorporates the following features:

Slave operation on multiple device systems
7-bit addressing
100 kb/sec and 400 kb/sec data rates
General call address support
Support for clock low extension (clock stretching)
Separate multibyte receive and transmit FIFOs
Extensive fault monitoring

#### **OVERVIEW**

The PMBus slave module is a 2-wire interface that can be used to communicate with other PMBus-compliant devices. Its transfer protocol is based on the Philips I<sup>2</sup>C transfer mechanism. The ADP1051 is always configured as a slave device in the overall system. The ADP1051 communicates with the master device using one data pin (SDA, Pin 15) and one clock pin (SCL, Pin 14). Because the ADP1051 is a slave device, it cannot generate the clock signal; however, it is capable of stretching the SCL line to put the master device in a wait state when it is not ready to respond to the request of the master.

Communication is initiated when the master device sends a command to the PMBus slave device. Commands can be read or write commands, and data is transferred between the devices in a byte wide format. Commands can also be send commands; in that case, the command is executed by the slave device upon receiving the stop bit. The stop bit is the last bit in a complete data transfer, as defined in the PMBus/I²C communication protocol. During communication, the master and slave devices send acknowledge (A) or no acknowledge (A) bits as a method of handshaking between devices. See the PMBus specification for a more detailed description of the communication protocol.

When communicating with the master device, it is possible for illegal or corrupted data to be received by the PMBus slave.

In this case, the PMBus slave must respond to the invalid command or data, as defined by the PMBus specification, and indicate to the master device that an error or fault condition has occurred. This method of handshaking can be used as a first level of defense against inadvertent programming of the slave device that can potentially damage the chip or system.

The PMBus specification defines a set of generic PMBus commands that is recommended for a power management system; however, each PMBus device manufacturer can choose to implement and support certain commands that are deemed fit for the system. In addition, the PMBus device manufacturer can choose to implement manufacturer specific commands, the functions of which are not included in the generic PMBus command set. The list of standard PMBus and manufacturer specific commands can be found in the PMBUS Command Set and Manufacturer Specific Extended Command List sections.

## PMBUS/I<sup>2</sup>C ADDRESS

The PMBus address of the ADP1051 is set by connecting an external resistor from the ADD pin (Pin 22) to AGND. Table 9 lists the recommended resistor values and the associated PMBus addresses. Eight different addresses can be used.

Table 9. PMBus Address Settings and Resistor Values

PMBus Address	Resistor Value (kΩ)
0x70	10 (or connect the ADD pin directly to AGND)
0x71	31.6
0x72	51.1
0x73	71.5
0x74	90.9
0x75	110
0x76	130
0x77	150 (or connect the ADD pin directly to VDD)

The recommended resistor values in Table 9 can vary by  $\pm 2~k\Omega$ . Therefore, it is recommended that 1% tolerance resistors be used on the ADD pin.

The ADP1051 responds to the standard PMBus broadcast address (general call) of 0x00. However, when more than one ADP1051 device is connected to the master device, it is not recommended that the general call address be used because the data returned by multiple slave devices is corrupted.

For more information, see the General Call Support section.

#### **DATA TRANSFER**

#### **Format Overview**

The PMBus slave follows the transfer protocol of the SMBus specification, which is based on the fundamental transfer protocol format of the I<sup>2</sup>C bus specification. Data transfers are byte wide, lower byte first. Each byte is transmitted serially, most significant bit (MSB) first. A typical transfer is shown in Figure 46. See the SMBus and I<sup>2</sup>C specifications for in-depth discussions of the transfer protocols.

Figure 46 through Figure 53 use the abbreviations listed in Table 10.

Table 10. Abbreviations Used in Data Transfer Diagrams

Abbreviation	Description	Setting <sup>1</sup>
S	Start condition	N/A
Р	Stop condition	N/A
Sr	Repeated start condition	N/A
$\overline{W}$	Write bit	0
R	Read bit	1
Α	Acknowledge bit	0
Ā	No acknowledge bit	1

<sup>&</sup>lt;sup>1</sup> N/A means not applicable.

#### **Command Overview**

Data transfer using the PMBus slave is established using PMBus commands. The PMBus specification requires that all PMBus commands start with a slave address, with the R/W bit cleared to 0, followed by the command code. All PMBus commands that are supported by the ADP1051 follow one of the protocol types shown in Figure 47 through Figure 53.

The ADP1051 also supports manufacturer specific extended commands. These commands follow the same protocol as the standard PMBus commands; however, the command code consists of two bytes that range from 0xFF00 to 0xFFAF.

Using the manufacturer specific extended commands, the PMBus device manufacturer can add an additional 256 manufacturer specific commands to its PMBus command set.

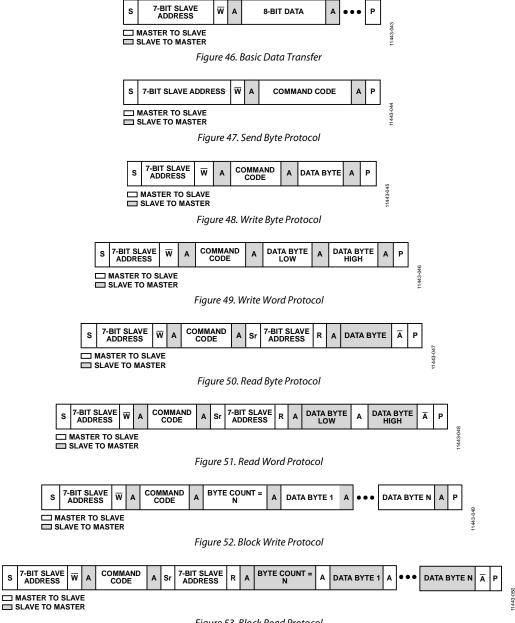


Figure 53. Block Read Protocol

#### **Clock Generation and Stretching**

The ADP1051 is always a PMBus slave device in the overall system; therefore, the device never needs to generate the clock, which is done by the master device in the system. However, the PMBus slave device is capable of clock stretching to put the master in a wait state. By stretching the SCL signal during the low period, the slave device communicates to the master device that it is not ready and the master device must wait.

Conditions in which the PMBus slave device stretches the SCL line low include the following:

The master device is transmitting at a higher baud rate than the slave device.

The receive buffer of the slave device is full and must be read before continuing. This prevents a data overflow condition. The slave device is not ready to send data that the master has requested.

Note that the PMBus slave device can stretch the SCL line only during the low period. Also, whereas the I<sup>2</sup>C specification allows indefinite stretching of the SCL line, the PMBus specification limits the maximum time that the SCL line can be stretched, or held low, to 25 ms. After this time period, the slave device must release the communication lines and reset its state machine.

#### **Start and Stop Conditions**

Start and stop conditions involve serial data transitions when the serial clock is at a logic high level. The PMBus slave device monitors the SDA and SCL lines to detect the start and stop conditions and transition its internal state machine accordingly. Typical start and stop conditions are shown in Figure 54.




Figure 54. Start and Stop Transitions

## **GENERAL CALL SUPPORT**

The PMBus slave is capable of decoding and acknowledging a general call address. The PMBus slave device responds to both its own address and the general call address (0x00). The general call address enables all devices on the PMBus to be written to simultaneously.

Note that all PMBus commands must start with a slave address, with the  $R/\overline{W}$  bit cleared to 0 and followed by the command code. This is also true when using the general call address to communicate with the PMBus slave device.

## 10-BIT ADDRESSING

The ADP1051 does not support 10-bit addressing as defined in the I<sup>2</sup>C specification.

#### **FAST MODE**

Fast mode, with a data rate of 400 kb/sec, uses essentially the same mechanics as the standard mode of operation; the electrical specifications and timing are most affected. The PMBus slave is capable of communicating with a master device operating in fast mode or in standard mode, which has a data rate of 100 kb/sec.

## **FAULT CONDITIONS**

The PMBus protocol provides a comprehensive set of fault conditions that must be monitored and reported. These fault conditions can be grouped into two major categories: communication faults and monitoring faults.

Communication faults are error conditions associated with the data transfer mechanism of the PMBus protocol. Monitoring faults are error conditions associated with the operation of the ADP1051, such as output overvoltage protection. These fault conditions are described in detail in the Power Monitoring, Flags, and Fault Responses section.

## **TIMEOUT CONDITIONS**

The SMBus specification includes three clock stretching specifications related to timeout conditions.

A timeout condition occurs if any single SCL clock pulse is held low for longer than the minimum  $t_{\text{TIMEOUT}}$  value of 25 ms. Upon detecting the timeout condition, the PMBus slave device has 10 ms to abort the transfer, release the bus lines, and be ready to accept a new start condition. The device initiating the timeout is required to hold the SCL clock line low for at least the maximum  $t_{\text{TIMEOUT}}$  value of 35 ms, guaranteeing that the slave device is given enough time to reset its communication protocol.

#### **DATA TRANSMISSION FAULTS**

Data transmission faults occur when two communicating devices violate the PMBus communication protocol, as specified in the PMBus specification. See the PMBus specification for more information about each fault condition.

## **Corrupted Data, Packet Error Checking (PEC)**

Packet error checking is not supported by the ADP1051.

#### Sending Too Few Bits

Transmission is interrupted by a start or stop condition before a complete byte (eight bits) has been sent. This function is not supported; any transmitted data is ignored.

## **Reading Too Few Bits**

Transmission is interrupted by a start or stop condition before a complete byte (eight bits) has been read. This function is not supported; any received data is ignored.

## Host Sends or Reads Too Few Bytes

If a host ends a packet with a stop condition before the required bytes are sent/received, it is assumed that the host intended to stop the transfer. Therefore, the PMBus does not consider this to be an error and takes no action, except to flush any remaining bytes in the transmit FIFO.

#### **Host Sends Too Many Bytes**

If a host sends more bytes than are expected for the corresponding command, the PMBus slave considers this a data transmission fault and responds as follows:

Issues a no acknowledge for all unexpected bytes as they are received

Flushes and ignores the received command and data Sets the CML bit in the STATUS\_BYTE command register (Register 0x78[1])

## **Host Reads Too Many Bytes**

If a host reads more bytes than are expected for the corresponding command, the PMBus slave considers this a data transmission fault and responds as follows:

Sends all 1s (0xFF) as long as the host continues to request data Sets the CML bit in the STATUS\_BYTE command register (Register 0x78[1])

#### **Device Busy**

The PMBus slave device is too busy to respond to a request from the master device. This condition is not supported in the ADP1051.

#### **DATA CONTENT FAULTS**

Data content faults may occur when the data transmission is successful, but the PMBus slave device cannot process the data that is received from the master device.

## Improperly Set Read Bit in the Address Byte

All PMBus commands start with a slave address with the  $R/\overline{W}$  bit cleared to 0, followed by the command code. If a host starts a PMBus transaction with  $R/\overline{W}$  set in the address phase (equivalent to an  $I^2C$  read), the PMBus slave considers this a data content fault and responds as follows:

Acknowledges (ACKs) the address byte Issues a no acknowledge for the command and data bytes Sends all 1s (0xFF) as long as the host continues to request data Sets the CML bit in the STATUS\_BYTE command register (Register 0x78[1])

## **Invalid or Unsupported Command Code**

If an invalid or unsupported command code is sent to the PMBus slave, the code is considered to be a data content fault, and the PMBus slave responds as follows:

Issues a no acknowledge for the illegal/unsupported command byte and data bytes

Flushes and ignores the received command and data Sets the CML bit in the STATUS\_BYTE command register (Register 0x78[1])

#### **Reserved Bits**

Accesses to reserved bits are not a fault. Writes to reserved bits are ignored, and reads from reserved bits return undefined data.

## Write to Read Only Commands

If a host performs a write to a read only command, the PMBus slave considers this a data content fault and responds as follows:

Issues a no acknowledge for all unexpected data bytes as they are received

Flushes and ignores the received command and data Sets the CML bit in the STATUS\_BYTE command register (Register 0x78[1])

Note that this is the same error described in the Host Sends Too Many Bytes section.

## **Read from Write Only Commands**

If a host performs a read from a write only command, the PMBus slave considers this a data content fault and responds as follows:

Sends all 1s (0xFF) as long as the host continues to request data Sets the CML bit in the STATUS\_BYTE command register (Register 0x78[1])

Note that this is the same error response that is described in the Host Reads Too Many Bytes section.

## **EEPROM**

The ADP1051 has a built-in EEPROM controller that is used to communicate with the embedded 8000-byte EEPROM. The EEPROM, also called Flash\*/EE, is partitioned into two major blocks: the information block and the main block. The information block contains 128 8-bit bytes (for internal use only), and the main block contains 8000 8-bit bytes. The main block is further partitioned into 16 pages, with each page containing 512 bytes.

#### **EEPROM FEATURES**

The function of the EEPROM controller is to decode the operation that is requested by the ADP1051 and to provide the necessary timing to the EEPROM interface. Data is written to or read from the EEPROM, as requested by the decoded command. Features of the EEPROM controller include

Separate page erase functions for each page in the EEPROM Single byte and multibyte (block) read of the information block with up to 128 bytes at a time

Single byte and multibyte (block) write and read of the main block with up to 256 bytes at a time

Automatic upload on startup, from the user settings to the internal registers

Separate commands to upload and download data, from the factory default or user settings to the internal registers

## **EEPROM OVERVIEW**

The EEPROM controller provides an interface between the ADP1051 core logic and the built-in EEPROM. The user can control data access to and from the EEPROM through this controller interface. Different PMBus commands are available for the read, write, and erase operations to the EEPROM.

Communication is initiated by the master device sending a command to the PMBus slave device to access data from or send data to the EEPROM. Read, write, and erase commands are supported. Data is transferred between devices in a byte wide format. Using a read command, data is received from the EEPROM and transmitted to the master device. Using a write command, data is received from the master device and stored in the EEPROM through the EEPROM controller.

#### **PAGE ERASE OPERATION**

The main block consists of 16 equivalent pages of 512 bytes each, numbered Page 0 to Page 15. Page 0 and Page 1 of the main block are reserved for storing the default settings and user settings, respectively. The user cannot perform a page erase operation on Page 0 or Page 1. Page 3 is reserved for storing the power board parameters for the GUI.

Only Page 4 to Page 15 of the main block can be used to store data. To erase any page from Page 4 to Page 15, the EEPROM must first be unlocked for access. For instructions on how to unlock the EEPROM, see the Unlock the EEPROM section.

Each page of the main block, from Page 4 to Page 15, can be individually erased using the EEPROM\_PAGE\_ERASE command (Register 0xD4). For example, to perform a page erase of Page 10, execute the following command as shown in Figure 55:




Figure 55. Example Erase Command

In this example, command code = 0xD4 and data byte = 0x0A.

Note that it is important to wait at least 35 ms for the page erase operation to complete before executing the next PMBus command.

The EEPROM allows erasing of whole pages only; therefore, to change the data of any single byte in a page, the entire page must first be erased (set to logic high) for that byte to be writeable. Subsequent writes to any bytes in that page are allowed as long as that byte has not been previously written to a logic low.

# READ OPERATION (BYTE READ AND BLOCK READ) Read from Main Block, Page 0 and Page 1

Page 0 and Page 1 of the main block are reserved for storing the default settings and the user settings, respectively, and are intended to prevent third party access to this data. To read from Page 0 or Page 1, the user must first unlock the EEPROM (see the Unlock the EEPROM section). After the EEPROM is unlocked, Page 0 and Page 1 are readable, using the EEPROM\_DATA\_xx commands as described in the Read from Main Block, Page 2 to Page 15 section. Note that when the EEPROM is locked, a read from Page 0 and Page 1 returns invalid data.

#### Read from Main Block, Page 2 to Page 15

Data in Page 2 to Page 15 of the main block is always readable, even with the EEPROM locked. The data in the EEPROM main block can be read one byte at a time or multiple bytes in series, using the EEPROM\_DATA\_xx commands (Register 0xB0 to Register 0xBF).

Before executing this command, the user must program the number of bytes to read, using the EEPROM\_NUM\_RD\_BYTES command (Register 0xD2). Also, the user can program the offset from the page boundary where the first read byte is returned, using the EEPROM\_ADDR\_OFFSET command (Register 0xD3).

In the following example, three bytes from Page 4 are read from the EEPROM, starting from the sixth byte of that page.

Set number of return bytes = 3.



Figure 56. Set the Return Bytes Number (= 3)

Set address offset = 5.




Figure 57. Set the Address Offset (= 5)

3. Read three bytes from Page 4.




Figure 58. Read Three Bytes from Page 4

Note that the block read command can read a maximum of 256 bytes for any single transaction.

# WRITE OPERATION (BYTE WRITE AND BLOCK WRITE)

The user cannot write directly to the information block; this block is used by the ADP1051 to store the first flag information (see the First Flag ID Recording section).

## Write to Main Block, Page 0 and Page 1

Page 0 and Page 1 of the main block are reserved for storing the default settings and the user settings, respectively. The user cannot perform a direct write operation to Page 0 or Page 1 using the EEPROM\_DATA\_xx commands. If the user writes to Page 0, Page 1 returns a no acknowledge. To program the register contents of Page 1 of the main block, it is recommended that the STORE\_USER\_ALL command be used (Register 0x15). See the Save Register Settings to the User Settings section.

## Write to Main Block, Page 2 to Page 15

Before performing a write to Page 2 through Page 15 of the main block, the user must first unlock the EEPROM (see the Unlock the EEPROM section).

Data in Page 2 to Page 15 of the EEPROM main block can be programmed (written to) one byte at a time or multiple bytes in series, using the EEPROM\_DATA\_xx commands (Register 0xB0 to Register 0xBF). Before executing this command, the user can program the offset from the page boundary where the first byte is written, using the EEPROM\_ADDR\_OFFSET command (Register 0xD3).

If the targeted page has not yet been erased, the user can erase the page, as described in the Page Erase Operation section.

In the following example, four bytes are written to Page 9, starting from the 257<sup>th</sup> byte of that page.

1. Set address offset = 256.




Figure 59. Set the Address Offset (= 256)

2. Write four bytes to Page 9.




Figure 60. Write Four Bytes to Page 9

Note that the block write command can write a maximum of 256 bytes for any single transaction.

## **EEPROM PASSWORD**

On ADP1051 VDD power-up, the EEPROM is locked and protected from accidental writes or erases. Only reads from Page 2 to Page 15 are allowed when the EEPROM is locked. Before any data can be written (programmed) to the EEPROM, the EEPROM must be unlocked for write access. After it is unlocked, the EEPROM is opened for reading, writing, and erasing.

On power-up, Page 0 and Page 1 are also protected from read access. The EEPROM must first be unlocked to read these pages.

#### Unlock the EEPROM

To unlock the EEPROM, perform two consecutive writes with the correct password (default = 0xFF), using the EEPROM\_PASSWORD command (Register 0xD5). The EEPROM\_UNLOCKED flag (Register 0xFEA2[3]) is set to indicate that the EEPROM is unlocked for write access.

## Lock the EEPROM

To lock the EEPROM, write any byte other than the correct password, using the EEPROM\_PASSWORD command (Register 0xD5). The EEPROM\_UNLOCKED flag is cleared to indicate that the EEPROM is locked from write access.

## Change the EEPROM Password

To change the EEPROM password, first write the correct password, using the EEPROM\_PASSWORD command (Register 0xD5). Immediately write the new password, using the same command. The password is now changed to the new password.

# DOWNLOADING EEPROM SETTINGS TO INTERNAL REGISTERS

## **Download User Settings to Registers**

The user settings are stored in Page 1 of the EEPROM main block. These settings are downloaded from the EEPROM into the registers under the following conditions:

On power-up. The user settings are automatically downloaded into the internal registers, powering the part up in a state previously saved by the user.

On execution of the RESTORE\_USER\_ALL command (Register 0x16). This command allows the user to force a download of the user settings from Page 1 of the EEPROM main block into the internal registers.

## **Download Factory Settings to Registers**

The factory default settings are stored in Page 0 of the EEPROM main block. The factory settings can be downloaded from the EEPROM into the internal registers, using the RESTORE\_ DEFAULT\_ALL command (Register 0x12).

When this command is executed, the EEPROM password is also reset to the factory default setting of 0xFF.

#### SAVING REGISTER SETTINGS TO THE EEPROM

The register settings cannot be saved to the factory scratch pad located in Page 0 of the EEPROM main block. This is to prevent the user from accidentally overriding the factory trim settings and the default register settings.

## Save Register Settings to the User Settings

The register settings can be saved to the user settings located in Page 1 of the EEPROM main block using the STORE\_USER\_ALL command (Register 0x15). Before this command can be executed, the EEPROM must first be unlocked for writing (see the Unlock the EEPROM section).

After the register settings are saved to the user settings, any subsequent power cycle automatically downloads the latest stored user information from the EEPROM into the internal registers.

Note that execution of the STORE\_USER\_ALL command automatically performs a page erase on Page 1 of the EEPROM main block, after which the registers are stored in the EEPROM. Therefore, it is important to wait at least 40 ms for the operation to complete before executing the next PMBus command.

## **EEPROM CRC CHECKSUM**

As a simple method of checking that the values downloaded from the EEPROM and the internal registers are consistent, a CRC checksum is implemented.

When the data from the internal registers is saved to the EEPROM (Page 1 of the main block), the total number of 1s from all the registers is counted and written into the EEPROM as the last byte of information. This is called the CRC checksum.

When the data is downloaded from the EEPROM into the internal registers, a similar counter is saved that sums all 1s from the values loaded into the registers. This value is compared with the CRC checksum from the previous upload operation.

If the values match, the download operation was successful. If the values differ, the EEPROM download operation failed, and the CRC\_FAULT flag is set (Register 0xFEA2[2]).

To read the EEPROM CRC checksum value, execute the EEPROM\_CRC\_CHKSUM command (Register 0xD1). This command returns the CRC checksum accumulated in the counter during the download operation.

Note that the CRC checksum is an 8-bit cyclical accumulator that wraps around to 0 when 255 is reached.

## **GUI SOFTWARE**

Free GUI software is available for programming and configuring the ADP1051. The ADP1051 GUI, which is intuitive by design, dramatically reduces power supply design and development time.

The software includes filter design and power supply PWM topology windows. The ADP1051 GUI is also an information center, displaying the status of all readings, monitoring, and flags on the ADP1051.

For more information about the ADP1051 GUI, contact Analog Devices, Inc., for the latest software and a user guide. Evaluation boards are also available by contacting Analog Devices or by visiting <a href="http://www.analog.com/digitalpower">http://www.analog.com/digitalpower</a>.

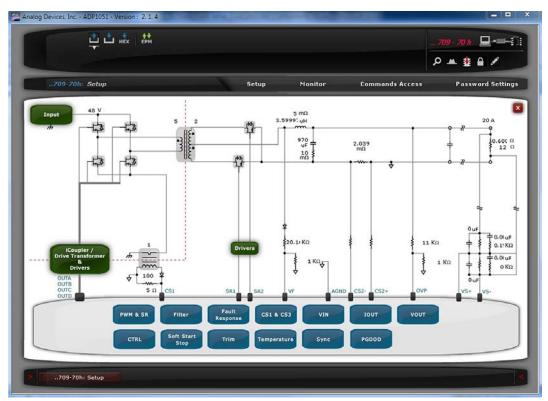


Figure 61. GUI Software

## **PMBus COMMAND SET**

Table 11. PMBus/SMBus Command List Overview

		PMBus/			
		SMBus	Number		
Command Code	Command Name	Transaction Type	of Data Bytes	Default Value <sup>1</sup>	Description
0x01	OPERATION	R/W	1	0x00	Turns the unit on and off in conjunction with the input
0.01				OXOO	from the CTRL pin.
0x02	ON_OFF_CONFIG	R/W	1	0x00	The combination of CTRL pin and serial bus commands needed to turn the unit on and off.
0x03	CLEAR_FAULTS	Send byte	0	N/A	Clears all bits in the PMBus status registers simultaneously.
0x10	WRITE_PROTECT	R/W	1	0x00	Protects against accidental writes to the PMBus device. Reads are allowed.
0x12	RESTORE_DEFAULT_ALL	Send byte	0	N/A	Downloads the factory default settings from EEPROM (Page 0) to registers.
0x15	STORE_USER_ALL	Send byte	0	N/A	Saves the user settings from the registers to the EEPROM (Page 1).
0x16	RESTORE_USER_ALL	Send byte	0	N/A	Downloads the user settings from the EEPROM (Page 1) to the registers.
0x19	CAPABILITY	R	1	0x20	Allows the host system to determine the capabilities of the PMBus device.
0x20	VOUT_MODE	R	1	0x16	Sets/reads the formats for the VOUT related commands.
0x21	VOUT_COMMAND	R/W	2	0x0000	Sets the VOUT to the commanded value.
0x22	VOUT_TRIM	R/W	2	0x0000	Applies a fixed offset voltage to the output voltage command value.
0x23	VOUT_CAL_OFFSET	R/W	2	0x0000	Applies a fixed offset voltage to the output voltage command value.
0x24	VOUT_MAX	R/W	2	0x0000	Sets an upper limit on the VOUT.
0x25	VOUT_MARGIN_HIGH	R/W	2	0x0000	Defines the voltage to which the output is set when the OPERATION command is set to margin high.
0x26	VOUT_MARGIN_LOW	R/W	2	0x0000	Defines the voltage to which the output is set when the OPERATION command is set to margin low.
0x27	VOUT_TRANSITION_RATE	R/W	2	0x7BFF	Sets the rate at which the output should change voltage.
0x28	VOUT_DROOP	R/W	2	0x0000	Sets the rate at which the output voltage changes with the output current.
0x29	VOUT_SCALE_LOOP	R/W	2	0x0001	The scale factor for setting the output voltage, which is related to the resistor divider.
0x2A	VOUT_SCALE_MONITOR	R/W	2	0x0001	The scale factor for the READ_VOUT command, which typically can be the same as the VOUT_SCALE_LOOP command.
0x33	FREQUENCY_SWITCH	R/W	2	0x0031	Sets the switching frequency of the output voltage.
0x35	VIN_ON	R/W	2	0x0000	Sets the input voltage at which the unit starts the power conversion.
0x36	VIN_OFF	R/W	2	0x0000	Sets the input voltage at which the unit stops the power conversion.
0x38	IOUT_CAL_GAIN	R/W	2	0x0000	The scale factor for the READ_IOUT command.
0x40	VOUT_OV_FAULT_LIMIT	R/W	2	0x0000	Sets the limit for triggering the OV_FAULT flag.
0x41	VOUT_OV_FAULT_RESPONSE	R/W	1	0x00	The fault response for the OV_FAULT flag.
0x44	VOUT_UV_FAULT_LIMIT	R/W	2	0x0000	Sets the limit for triggering the VOUT_UV_FAULT flag.
0x45	VOUT_UV_FAULT_RESPONSE	R/W	1	0x00	The fault response for the VOUT_UV_FAULT flag.
0x46	IOUT_OC_FAULT_LIMIT	R/W	2	0x0000	Sets the limit for triggering the OC_FAULT flag.
0x47	IOUT_OC_FAULT_RESPONSE	R/W	1	0x00	The fault response for the OC_FAULT flag.
0x48	IOUT_OC_LV_FAULT_LIMIT	R/W	2	0x0000	Sets the voltage threshold in cases for which the response to an overcurrent condition is to operate in a constant current mode unless the output voltage is pulled below the specified limit value.

Command Code         MRBus/SMBus Transaction of Data Type         Number Transaction of Data Type         Default Value Valu	
Code         Command Name         Type         Bytes         Value¹         Description           0x50         OT_FAULT_LIMIT         R/W         2         0x0000         Sets the limit for triggering the OT_FAULT flag.           0x5E         POWER_GOOD_ON         R/W         1         0x000         The fault response for the OT_FAULT flag.           0x5F         POWER_GOOD_OFF         R/W         2         0x0000         Sets the output voltage at which an optional POW signal is asserted.           0x60         TON_DELAY         R/W         2         0x0000         The time from when a start condition is received programmed by the ON_OFF_CONFIG comman output voltage starts to rise.           0x61         TON_RISE         R/W         2         0x0000         The time from when a start condition is received programmed by the ON_OFF_CONFIG comman output voltage starts to rise.           0x64         TOFF_DELAY         R/W         2         0x0000         The time from when a start condition is received programmed by the ON_OFF_CONFIG comman output voltage starts to rise.           0x76         TSTATUS_INDUT         R         1         0x000         The time from when a start condition is received programmed by the ON_OFF_CONFIG comman output voltage and command.           0x7B         STATUS_INDUT         R         1         0x000         Returns the low byte of the STATU_CONFIG comman out	
0x4F         OT_FAULT_LIMIT         R/W         2         0x0000         Sets the limit for triggering the OT_FAULT flag.           0x5E         OVERGOOD_ON         R/W         1         0x00         The fault response for the OT_FAULT flag.           0x5F         POWER_GOOD_OFF         R/W         2         0x0000         Sets the output voltage at which an optional POW signal is asserted.           0x60         TON_DELAY         R/W         2         0x0000         The time from when a start condition is received programmed by the ON_OFF_CONFIG comman output voltage starts to rise.           0x61         TON_RISE         R/W         2         0x0000         The time from when a start condition is received programmed by the ON_OFF_CONFIG comman output voltage starts to rise.           0x64         TOFF_DELAY         R/W         2         0x0000         The time from when a start condition is received programmed by the ON_OFF_CONFIG comman output voltage starts to rise untivoltage has entered the regulation band.           0x78         STATUS_BYTE         R         1         0x000         Returns the low byte of the STATU comman.           0x79         STATUS_WORD         R         2         0x0000         Returns the low byte of the STATU comman.           0x70         STATUS_IDUT         R         1         0x00         Returns the fault flag for the output voltage and high byte of the	
0x50         OT_FAULT_RESPONSE         R/W         1         0x00         The fault response for the OT_FAULT flag.           0x5E         POWER_GOOD_ON         R/W         2         0x0000         Sets the output voltage at which an optional POW signal is asserted.           0x60         TON_DELAY         R/W         2         0x0000         The time from when a start condition is received programmed by the ON_OFE_CONFIG comman output voltage starts to rise.           0x61         TON_RISE         R/W         2         0x0000         The time from when a start condition is received programmed by the ON_OFE_CONFIG comman output voltage starts to rise.           0x64         TOFF_DELAY         R/W         2         0x0000         The time from when a stop condition is received programmed by the ON_OFE_CONFIG comman output voltage has entered the regulation band.           0x78         STATUS_BYTE         R         1         0x000         Returns the low byte of the STATU.           0x79         STATUS_WORD         R         2         0x0000         Returns the low byte and high byte of the STATU.           0x7C         STATUS_INPUT         R         1         0x00         Returns the fault flag for the output voltage.           0x7E         STATUS_INPUT         R         1         0x00         Returns the fault flag for the Orthe output voltage value.           0	
0x5E         POWER_GOOD_ON         R/W         2         0x0000         Sets the output voltage at which an optional POW signal is asserted.           0x5F         POWER_GOOD_OFF         R/W         2         0x0000         Sets the output voltage at which an optional POW signal is negated.           0x60         TON_DELAY         R/W         2         0x0000         The time from when he a start condition is received programmed by the ON_OFF_CONFIG comman output voltage starts to rise.           0x61         TON_RISE         R/W         2         0x0000         The time from when he need the output starts to rise under voltage has entered the regulation band.           0x64         TOFF_DELAY         R/W         2         0x0000         The time from when he need the output starts to rise under voltage has entered the regulation band.           0x78         STATUS_BYTE         R         1         0x00         Returns the need the output condition is received programmed by the ON_OFF_CONFIG comman unit stops transferring energy to the output unit stops transferring energy to the output command.           0x79         STATUS_BYTE         R         1         0x00         Returns the low byte and high byte of the STATUS_WORD command.           0x70         STATUS_LINDUT         R         1         0x00         Returns the fault flag for the output voltage.           0x70         STATUS_LINDUT         R         <	
Signal is asserted.   South   Sets the output voltage at which an optional POW   Signal is negated.   Sets the output voltage at which an optional POW   Signal is negated.   Sets the output voltage at which an optional POW   Signal is negated.   Sets the output voltage starts to rise.   The time from when a start condition is received programmed by the ON_OFF_CONFIG comman output voltage starts to rise.   The time from when the output starts to rise under voltage starts to rise.   The time from when the output starts to rise under voltage has entered the regulation band.   The time from when a stop condition is received programmed by the ON_CFC_CONFIG comman unit stops transferring energy to the output.   StartUS_BYTE	
Ox60 TON_DELAY R/W 2 0x0000 The time from when a start condition is received programmed by the ON_OFF_CONFIG comman output voltage starts to rise.  Ox61 TON_RISE R/W 2 0x0000 The time from when a start condition is received programmed by the ON_OFF_CONFIG comman output voltage starts to rise.  Ox64 TOFF_DELAY R/W 2 0x0000 The time from when a stop condition is received programmed by the ON_OFF_CONFIG comman unit stops transferring energy to the output.  Ox78 STATUS_BYTE R 1 0x00 Returns the low byte of the STATUS_WORD command.  Ox79 STATUS_WORD R 2 0x0000 Returns the low byte and high byte of the STATUS_OX78 STATUS_INPUT R 1 0x00 Returns the fault flag for the output current.  Ox70 STATUS_INPUT R 1 0x00 Returns the fault flag for the output voltage and command.  Ox70 STATUS_TEMPERATURE R 1 0x00 Returns the fault flag for the output voltage and command.  Ox70 STATUS_TEMPERATURE R 1 0x00 Returns the fault flag for the OT fault and warning the fault flag for the communication melegic.  Ox88 READ_VIN R 2 0x0000 Returns the input voltage value.  Ox89 READ_INN R 2 0x0000 Returns the input voltage value.  Ox80 READ_INN R 2 0x0000 Returns the input voltage value.  Ox80 READ_INN R 2 0x0000 Returns the input voltage value.  Ox80 READ_INN R 2 0x0000 Returns the input voltage value.  Ox80 READ_INT R 2 0x0000 Returns the input voltage value.  Ox80 READ_INT R 2 0x0000 Returns the input current value.  Ox80 READ_INT R 2 0x0000 Returns the input current value.  Ox80 READ_INT R 2 0x0000 Returns the input current value.  Ox80 READ_INT R 2 0x0000 Returns the input voltage value.  Ox94 READ_INTY_CYCLE R 2 0x0000 Returns the output current value.  Ox95 READ_INTY_CYCLE R 2 0x0000 Returns the output current value.  Ox96 READ_INTY_CYCLE R 2 0x0000 Returns the output current value.  Ox97 READ_INTY_CYCLE R 2 0x0000 Returns the output current value.  Ox98 READ_PMBUS_REVISION R 1 0x00 Reads/writes the input current value.  Ox98 READ_PMBUS_REVISION R 1 0x00 Reads/writes the input current value.  Ox98 READ_FREQUENCY R 1 0x00 Reads/writes th	ver_good
0x60         TON_DELAY         R/W         2         0x00000         The time from when a start condition is received programmed by the ON_OFF_CONFIG comman output voltage starts to rise.           0x61         TON_RISE         R/W         2         0xC00D         The time from when the output starts to rise.           0x64         TOFF_DELAY         R/W         2         0x0000         The time from when a stop condition is received programmed by the ON_OFF_CONFIG comman unit stops transferred the regulation band.           0x78         STATUS_BYTE         R         1         0x00         Returns the low byte of the STATUS_WORD command.           0x79         STATUS_WORD         R         2         0x0000         Returns the low byte and high yte of the STATU command.           0x7A         STATUS_VOUT         R         1         0x00         Returns the fault flag for the output voltage.           0x7B         STATUS_INPUT         R         1         0x00         Returns the fault flag for the output voltage and or start.           0x7C         STATUS_EMPERATURE         R         1         0x00         Returns the fault flag for the OT fault and warning logic.           0x8B         READ_VIN         R         2         0x0000         Returns the input voltage value.           0x8B         READ_VENCEL         R         2	VER_GOOD
Ox64 TOFF_DELAY  R/W 2 0x0000 The time from when a stop condition is received programmed by the ON_OFF_CONFIG comman unit stops transferring energy to the output.  Ox78 STATUS_BYTE R 1 0x00 Returns the low byte of the STATUS_WORD command.  Ox79 STATUS_WORD R 2 0x0000 Returns the low byte and high byte of the STATUS_COMMAND.  Ox7A STATUS_OUT R 1 0x00 Returns the fault flag for the output voltage.  Ox7C STATUS_INPUT R 1 0x00 Returns the fault flag for the output current.  Ox7C STATUS_TEMPERATURE R 1 0x00 Returns the fault flag for the OT fault and warning.  Ox7E STATUS_CML R 1 0x00 Returns the fault flag for the OT fault and warning.  Ox88 READ_VIN R 2 0x0000 Returns the fault flag for the Command.  Ox88 READ_UND R 2 0x0000 Returns the fault flag for the OT fault and warning.  Ox88 READ_UND R 2 0x0000 Returns the input voltage value.  Ox80 READ_IND R 2 0x0000 Returns the output current value.  Ox80 READ_OUT R 2 0x0000 Returns the output voltage value.  Ox80 READ_TEMPERATURE R 2 0x0000 Returns the output current value.  Ox80 READ_TEMPERATURE R 2 0x0000 Returns the output current value.  Ox99 READ_TEMPERATURE R 2 0x0000 Returns the output current value.  Ox99 READ_TEMPERATURE R 2 0x0000 Returns the output current value.  Ox99 READ_FREQUENCY R 2 0x0000 Returns the output current value.  Ox99 READ_FREQUENCY R 2 0x0000 Returns the output current value.  Ox99 READ_FREQUENCY R 2 0x0000 Returns the output current value.  Ox99 READ_FREQUENCY R 2 0x0000 Returns the output current value.  Ox99 MFR.ID R/W 1 0x00 Reads/writes the Dof the manufacturer.  Ox99 MFR.ID R/W 1 0x00 Reads/writes the ID of the manufacturer.  Ox90 Reads/writes the MBus revision number of the manufacturer.  Ox90 Reads/writes free iD of the manufacturer.  Ox90 Reads/writes free proper or ox90 Reads/writes from Page 1. The EEPROM must first be Block reads/writes to Page 2. The EEPROM must unlocked for writes.  Ox80 EEPROM_DATA_00 Riblock Variable N/A Blocks reads/writes to Page 3. The EEPROM must unlocked for writes.  Ox80 EEPROM_DATA_04 R/W block Variabl	
0x64       TOFF_DELAY       R/W       2       0x0000       The time from when a stop condition is received programmed by the ON_OFF_CONFIG comman unit stops transferring energy to the output.         0x78       STATUS_BYTE       R       1       0x00       Returns the low byte of the STATUS_WORD com unit stops transferring energy to the output.         0x79       STATUS_WORD       R       2       0x0000       Returns the low byte and high byte of the STATUS_COMMAND.         0x7A       STATUS_VOUT       R       1       0x00       Returns the fault flag for the output voltage.         0x7B       STATUS_INPUT       R       1       0x00       Returns the fault flag for the output current.         0x7C       STATUS_INPUT       R       1       0x00       Returns the fault flag for the output current.         0x7E       STATUS_EMPERATURE       R       1       0x00       Returns the fault flag for the output current.         0x7E       STATUS_CML       R       1       0x00       Returns the fault flag for the output current.         0x7E       STATUS_MERATURE       R       1       0x00       Returns the fault flag for the output current value.         0x8B       READ_ININ       R       2       0x0000       Returns the input current value.         0x8B       READ_ININ       R<	ntil the
0x78         STATUS_BYTE         R         1         0x00         Returns the low byte of the STATUS_WORD com           0x79         STATUS_WORD         R         2         0x0000         Returns the low byte and high byte of the STATUS_COMMAND           0x7A         STATUS_VOUT         R         1         0x00         Returns the fault flag for the output voltage.           0x7B         STATUS_INPUT         R         1         0x00         Returns the fault flag for the output current.           0x7C         STATUS_INPUT         R         1         0x00         Returns the fault flag for the output current.           0x7E         STATUS_CML         R         1         0x00         Returns the fault flag for the OT fault and warnir           0x7E         STATUS_CML         R         1         0x00         Returns the fault flag for the Othe OT fault and warnir           0x8B         READ_VIN         R         2         0x0000         Returns the fault flag for the communication me logic.           0x8B         READ_IN         R         2         0x0000         Returns the input voltage value.           0x8B         READ_IN         R         2         0x0000         Returns the input voltage value.           0x8C         READ_INTEMPERATURE         R         2	
Command.    Command.   Command.   Returns the fault flag for the output voltage.	nmand.
0x7A         STATUS_VOUT         R         1         0x00         Returns the fault flag for the output voltage.           0x7B         STATUS_INPUT         R         1         0x00         Returns the fault flag for the output current.           0x7D         STATUS_TEMPERATURE         R         1         0x00         Returns the fault flag for the input voltage and or input voltage.           0x7E         STATUS_CML         R         1         0x00         Returns the fault flag for the communication me logic.           0x88         READ_VIN         R         2         0x0000         Returns the input voltage value.           0x89         READ_IIN         R         2         0x0000         Returns the input current value.           0x80         READ_IOUT         R         2         0x0000         Returns the output voltage value.           0x80         READ_IOUT         R         2         0x0000         Returns the output voltage value.           0x80         READ_TEMPERATURE         R         2         0x0000         Returns the output current value.           0x94         READ_TEMPERATURE         R         2         0x0000         Returns the output voltage value.           0x95         READ_TEMPERATURE         R         2         0x0000 <t< td=""><td>US_WORD</td></t<>	US_WORD
0x7BSTATUS_IOUTR10x00Returns the fault flag for the output current.0x7CSTATUS_INPUTR10x00Returns the fault flag for the input voltage and of the communication of the input voltage and of the communication of the input voltage and of the communication of the input voltage value.0x7ESTATUS_CMLR10x00Returns the fault flag for the OT fault and warning of the communication of the input voltage value.0x88READ_VINR20x0000Returns the input voltage value.0x89READ_IINR20x0000Returns the input current value.0x8BREAD_VOUTR20x0000Returns the output current value.0x8CREAD_IOUTR20x0000Returns the output current value.0x8DREAD_TEMPERATURER20x0000Returns the output current value.0x94READ_DUTY_CYCLER20x0000Returns the duty cycle of the power converter.0x98READ_PMBUS_REVISIONR10x22Reads the PMBus revision to which the device is one of the power converter.0x99MFR_IDR/W10x00Reads/writes the ID of the manufacturer.0x98MFR_MODELR/W10x00Reads/writes the ID of the manufacturer.0x98MFR_REVISIONR/W10x00Reads the IC device ID.0x4EIC_DEVICE_IDR20x4151Reads the IC device revision.0x80EEPROM_DATA_00R blockVariableN/A	
0x7C         STATUS_INPUT         R         1         0x00         Returns the fault flag for the input voltage and or Returns the fault flag for the OT fault and warning and or Returns the fault flag for the OT fault and warning and or Returns the fault flag for the COMMINION of Returns the fault flag for the OT fault and warning flag for the OXOD Returns the fault flag for the OT fault and warning flag for the OXOD Returns the fault flag for the OT fault and warning flag for the OXOD Returns the fault flag for the OT fault and warning flag for the OXOD Returns the fault flag for the OT fault and warning flag for the OXOD Returns the fault flag for the OT fault and warning flag for the OXOD Returns the fault flag for the OT fault and warning flag for the OXOD Returns the fault flag for the OT fault and warning flag for the OXOD Returns the fault flag for the OT fault and warning flag for the OXOD Returns the fault flag for the OXOD Returns the fault flag for the OXOD Returns the fault flag for the OXOD Returns the input voltage value.           0x81         READ_FREQUENCY         R         2         0x0000         Returns the fault fl	
0x7D     STATUS_TEMPERATURE     R     1     0x00     Returns the fault flag for the OT fault and warning of the Communication method of	current.
0x7ESTATUS_CMLR10x00Returns the fault flag for the communication melogic.0x88READ_VINR20x0000Returns the input voltage value.0x89READ_IINR20x0000Returns the input current value.0x8BREAD_VOUTR20x0000Returns the output voltage value.0x8CREAD_IOUTR20x0000Returns the output current value.0x8DREAD_TEMPERATURER20x0000Returns the output current value.0x94READ_DUTY_CYCLER20x0000Returns the duty cycle of the power converter.0x95READ_FREQUENCYR20x0000Returns the switching frequency of the power converter.0x98READ_PMBUS_REVISIONR10x20Reads/writes the ID of the manufacturer.0x99MFR_IDR/W10x00Reads/writes the ID of the manufacturer.0x9AMFR_MODELR/W10x00Reads/writes the model number of the manufacturer.0x9BMFR_REVISIONR/W10x00Reads/writes revision number of the manufacturer.0xADIC_DEVICE_IDR20x4151Reads the IC device ID.0xAEIC_DEVICE_REVR10x20Reads the IC device revision.0xB1EEPROM_DATA_01R blockVariableN/ABlock reads from Page 1. The EEPROM must first be0xB2EEPROM_DATA_02R/W blockVariableN/ABlocks reads/writes to Page 2. The EEPROM must	
0x88READ_VINR20x0000Returns the input voltage value.0x89READ_IINR20x0000Returns the input current value.0x8BREAD_VOUTR20x0000Returns the output voltage value.0x8CREAD_IOUTR20x0000Returns the output current value.0x8DREAD_TEMPERATURER20x0000Returns the output current value.0x94READ_DUTY_CYCLER20x0000Returns the duty cycle of the power converter.0x95READ_FREQUENCYR20x0000Returns the switching frequency of the power converter.0x98READ_PMBUS_REVISIONR10x22Reads the PMBus revision to which the device is converted.0x99MFR_IDR/W10x00Reads/writes the ID of the manufacturer.0x9AMFR_MODELR/W10x00Reads/writes the model number of the manufacturer.0x9BMFR_REVISIONR/W10x00Reads/writes revision number of the manufacturer.0xADIC_DEVICE_IDR20x4151Reads the IC device ID.0xAEIC_DEVICE_REVR10x20Reads the IC device revision.0xB0EEPROM_DATA_00R blockVariableN/ABlock reads from Page 0. The EEPROM must first be0xB2EEPROM_DATA_02R/W blockVariableN/ABlocks reads/writes to Page 2. The EEPROM must unlocked for writes.0xB4EEPROM_DATA_04R/W blockVariableN/A<	-
0x89READ_IINR20x0000Returns the input current value.0x8BREAD_VOUTR20x0000Returns the output voltage value.0x8CREAD_IOUTR20x0000Returns the output current value.0x8DREAD_TEMPERATURER20x0000Returns the output current value.0x94READ_DUTY_CYCLER20x0000Returns the duty cycle of the power converter.0x95READ_FREQUENCYR20x0000Returns the switching frequency of the power converter.0x98READ_PMBUS_REVISIONR10x22Reads the PMBus revision to which the device is one of the manufactor.0x99MFR_IDR/W10x00Reads/writes the ID of the manufactor.0x99MFR_MODELR/W10x00Reads/writes the model number of the manufactor.0x98MFR_REVISIONR/W10x00Reads/writes the model number of the manufactor.0x4DIC_DEVICE_IDR20x4151Reads the IC device ID.0x4BIC_DEVICE_REVR10x20Reads the IC device revision.0x80EEPROM_DATA_00R blockVariableN/ABlock reads from Page 0. The EEPROM must first be0x81EEPROM_DATA_02R/W blockVariableN/ABlocks reads/writes to Page 2. The EEPROM must unlocked for writes.0x84EEPROM_DATA_04R/W blockVariableN/ABlocks reads/writes to Page 4. The EEPROM must	
0x8BREAD_VOUTR20x0000Returns the output voltage value.0x8CREAD_IOUTR20x0000Returns the output current value.0x8DREAD_TEMPERATURER20x0000Returns the output current value.0x94READ_DUTY_CYCLER20x0000Returns the duty cycle of the power converter.0x95READ_FREQUENCYR20x0000Returns the switching frequency of the power converter.0x98READ_PMBUS_REVISIONR10x22Reads the PMBus revision to which the device is converted.0x99MFR_IDR/W10x00Reads/writes the ID of the manufacturer.0x9AMFR_MODELR/W10x00Reads/writes the model number of the manufacturer.0x9BMFR_REVISIONR/W10x00Reads/writes revision number of the manufacturer.0xADIC_DEVICE_IDR20x4151Reads the IC device ID.0xAEIC_DEVICE_REVR10x20Reads the IC device revision.0xB0EEPROM_DATA_00R blockVariableN/ABlock reads from Page 0. The EEPROM must first be allocked for writes.0xB2EEPROM_DATA_02R/W blockVariableN/ABlocks reads/writes to Page 2. The EEPROM must unlocked for writes.0xB3EEPROM_DATA_03R/W blockVariableN/ABlocks reads/writes to Page 3. The EEPROM must unlocked for writes.	
0x8CREAD_IOUTR20x0000Returns the output current value.0x8DREAD_TEMPERATURER20x0000Returns temperature reading in degrees Celsius.0x94READ_DUTY_CYCLER20x0000Returns the duty cycle of the power converter.0x95READ_FREQUENCYR20x0000Returns the switching frequency of the power converter.0x98READ_PMBUS_REVISIONR10x22Reads the PMBus revision to which the device is converted.0x99MFR_IDR/W10x00Reads/writes the ID of the manufacturer.0x9AMFR_MODELR/W10x00Reads/writes the model number of the manufacturer.0x9BMFR_REVISIONR/W10x00Reads/writes revision number of the manufacturer.0xADIC_DEVICE_IDR20x4151Reads the IC device ID.0xAEIC_DEVICE_REVR10x20Reads the IC device revision.0xB0EEPROM_DATA_00R blockVariableN/ABlock reads from Page 0. The EEPROM must first be0xB1EEPROM_DATA_01R blockVariableN/ABlocks reads/writes to Page 2. The EEPROM must unlocked for writes.0xB3EEPROM_DATA_03R/W blockVariableN/ABlocks reads/writes to Page 3. The EEPROM must unlocked for writes.0xB4EEPROM_DATA_04R/W blockVariableN/ABlocks reads/writes to Page 4. The EEPROM must unlocked for writes.	
0x8DREAD_TEMPERATURER20x0000Returns temperature reading in degrees Celsius.0x94READ_DUTY_CYCLER20x0000Returns the duty cycle of the power converter.0x95READ_FREQUENCYR20x0000Returns the switching frequency of the power converter.0x98READ_PMBUS_REVISIONR10x22Reads the PMBus revision to which the device is converted.0x99MFR_IDR/W10x00Reads/writes the ID of the manufacturer.0x9AMFR_MODELR/W10x00Reads/writes the model number of the manufacturer.0x9BMFR_REVISIONR/W10x00Reads/writes revision number of the manufacturer.0xADIC_DEVICE_IDR20x4151Reads the IC device ID.0xAEIC_DEVICE_REVR10x20Reads the IC device revision.0xB0EEPROM_DATA_00R blockVariableN/ABlock reads from Page 0. The EEPROM must first be0xB1EEPROM_DATA_01R blockVariableN/ABlocks reads/writes to Page 2. The EEPROM must unlocked for writes.0xB3EEPROM_DATA_03R/W blockVariableN/ABlocks reads/writes to Page 3. The EEPROM must unlocked for writes.0xB4EEPROM_DATA_04R/W blockVariableN/ABlocks reads/writes to Page 4. The EEPROM must unlocked for writes.	
0x94READ_DUTY_CYCLER20x0000Returns the duty cycle of the power converter.0x95READ_FREQUENCYR20x0000Returns the switching frequency of the power converter.0x98READ_PMBUS_REVISIONR10x22Reads the PMBus revision to which the device is converted.0x99MFR_IDR/W10x00Reads/writes the ID of the manufacturer.0x9AMFR_MODELR/W10x00Reads/writes the model number of the manufacturer.0x9BMFR_REVISIONR/W10x00Reads/writes revision number of the manufacturer.0xADIC_DEVICE_IDR20x4151Reads the IC device ID.0xAEIC_DEVICE_REVR10x20Reads the IC device revision.0xB0EEPROM_DATA_00R blockVariableN/ABlock reads from Page 0. The EEPROM must first be0xB1EEPROM_DATA_01R blockVariableN/ABlocks reads/writes to Page 1. The EEPROM must first be0xB2EEPROM_DATA_02R/W blockVariableN/ABlocks reads/writes to Page 2. The EEPROM must unlocked for writes.0xB3EEPROM_DATA_03R/W blockVariableN/ABlocks reads/writes to Page 3. The EEPROM must unlocked for writes.0xB4EEPROM_DATA_04R/W blockVariableN/ABlocks reads/writes to Page 4. The EEPROM must unlocked for writes.	S.
0x95READ_FREQUENCYR20x0000Returns the switching frequency of the power of	
0x98READ_PMBUS_REVISIONR10x22Reads the PMBus revision to which the device is of the part of the manufacturer.0x99MFR_IDR/W10x00Reads/writes the ID of the manufacturer.0x9AMFR_MODELR/W10x00Reads/writes the model number of the manufacturer.0x9BMFR_REVISIONR/W10x00Reads/writes revision number of the manufacturer.0xADIC_DEVICE_IDR20x4151Reads the IC device ID.0xAEIC_DEVICE_REVR10x20Reads the IC device revision.0xB0EEPROM_DATA_00R blockVariableN/ABlock reads from Page 0. The EEPROM must first be of the page 1. The EEPROM must first be of the page 2. The EEPROM must contain the page 2. The EEPROM must contain the page 3. The EEPROM m	converter.
0x99MFR_IDR/W10x00Reads/writes the ID of the manufacturer.0x9AMFR_MODELR/W10x00Reads/writes the model number of the manufacturer.0x9BMFR_REVISIONR/W10x00Reads/writes revision number of the manufacturer.0xADIC_DEVICE_IDR20x4151Reads the IC device ID.0xAEIC_DEVICE_REVR10x20Reads the IC device revision.0xB0EEPROM_DATA_00R blockVariableN/ABlock reads from Page 0. The EEPROM must first be0xB1EEPROM_DATA_01R blockVariableN/ABlocks reads/writes to Page 1. The EEPROM must first be0xB2EEPROM_DATA_02R/W blockVariableN/ABlocks reads/writes to Page 2. The EEPROM must unlocked for writes.0xB3EEPROM_DATA_03R/W blockVariableN/ABlocks reads/writes to Page 3. The EEPROM must unlocked for writes.0xB4EEPROM_DATA_04R/W blockVariableN/ABlocks reads/writes to Page 4. The EEPROM must unlocked for writes.	
0x9AMFR_MODELR/W10x00Reads/writes the model number of the manufact0x9BMFR_REVISIONR/W10x00Reads/writes revision number of the manufact0xADIC_DEVICE_IDR20x4151Reads the IC device ID.0xAEIC_DEVICE_REVR10x20Reads the IC device revision.0xB0EEPROM_DATA_00R blockVariableN/ABlock reads from Page 0. The EEPROM must first be0xB1EEPROM_DATA_01R blockVariableN/ABlock reads from Page 1. The EEPROM must first be0xB2EEPROM_DATA_02R/W blockVariableN/ABlocks reads/writes to Page 2. The EEPROM must unlocked for writes.0xB3EEPROM_DATA_03R/W blockVariableN/ABlocks reads/writes to Page 3. The EEPROM must unlocked for writes.0xB4EEPROM_DATA_04R/W blockVariableN/ABlocks reads/writes to Page 4. The EEPROM must unlocked for writes.	
0x9BMFR_REVISION 0xADR/W10x00Reads/writes revision number of the manufacture0xADIC_DEVICE_IDR20x4151Reads the IC device ID.0xAEIC_DEVICE_REVR10x20Reads the IC device revision.0xB0EEPROM_DATA_00R blockVariableN/ABlock reads from Page 0. The EEPROM must first be0xB1EEPROM_DATA_01R blockVariableN/ABlock reads from Page 1. The EEPROM must first be0xB2EEPROM_DATA_02R/W blockVariableN/ABlocks reads/writes to Page 2. The EEPROM must unlocked for writes.0xB3EEPROM_DATA_03R/W blockVariableN/ABlocks reads/writes to Page 3. The EEPROM must unlocked for writes.0xB4EEPROM_DATA_04R/W blockVariableN/ABlocks reads/writes to Page 4. The EEPROM must	cturer.
0xAEIC_DEVICE_REVR10x20Reads the IC device revision.0xB0EEPROM_DATA_00R blockVariableN/ABlock reads from Page 0. The EEPROM must first be0xB1EEPROM_DATA_01R blockVariableN/ABlock reads from Page 1. The EEPROM must first be0xB2EEPROM_DATA_02R/W blockVariableN/ABlocks reads/writes to Page 2. The EEPROM must unlocked for writes.0xB3EEPROM_DATA_03R/W blockVariableN/ABlocks reads/writes to Page 3. The EEPROM must unlocked for writes.0xB4EEPROM_DATA_04R/W blockVariableN/ABlocks reads/writes to Page 4. The EEPROM must	urer.
0xB0EEPROM_DATA_00R blockVariableN/ABlock reads from Page 0. The EEPROM must first be0xB1EEPROM_DATA_01R blockVariableN/ABlock reads from Page 1. The EEPROM must first be0xB2EEPROM_DATA_02R/W blockVariableN/ABlocks reads/writes to Page 2. The EEPROM must unlocked for writes.0xB3EEPROM_DATA_03R/W blockVariableN/ABlocks reads/writes to Page 3. The EEPROM must unlocked for writes.0xB4EEPROM_DATA_04R/W blockVariableN/ABlocks reads/writes to Page 4. The EEPROM must	
OxB1 EEPROM_DATA_01 R block Variable N/A Block reads from Page 1. The EEPROM must first be R/W block Variable N/A Blocks reads/writes to Page 2. The EEPROM must first be Blocks reads/writes to Page 2. The EEPROM must unlocked for writes.  OxB3 EEPROM_DATA_03 R/W block Variable N/A Blocks reads/writes to Page 3. The EEPROM must unlocked for writes.  OxB4 EEPROM_DATA_04 R/W block Variable N/A Blocks reads/writes to Page 4. The EEPROM must first be N/A Blocks reads/writes to Page 4. The EEPROM must first be N/A Blocks reads/writes to Page 4. The EEPROM must first be N/A Blocks reads/writes to Page 4. The EEPROM must first be N/A Blocks reads/writes to Page 4. The EEPROM must first be N/A Blocks reads/writes to Page 4. The EEPROM must first be N/A Blocks reads/writes to Page 4. The EEPROM must first be N/A Blocks reads/writes to Page 4. The EEPROM must first be N/A Blocks reads/writes to Page 4. The EEPROM must first be N/A Blocks reads/writes to Page 3. The EEPROM must first be N/A Blocks reads/writes to Page 3. The EEPROM must first be N/A Blocks reads/writes to Page 3. The EEPROM must first be N/A Blocks reads/writes to Page 3. The EEPROM must first be N/A Blocks reads/writes to Page 3. The EEPROM must first be N/A Blocks reads/writes to Page 3. The EEPROM must first be N/A Blocks reads/writes to Page 3. The EEPROM must first be N/A Blocks reads/writes to Page 3. The EEPROM must first be N/A Blocks reads/writes to Page 4. The EEPROM must first be N/A Blocks reads/writes to Page 4. The EEPROM must first be N/A Blocks reads/writes to Page 4. The EEPROM must first be N/A Blocks reads/writes to Page 4. The EEPROM must first be N/A Blocks reads/writes to Page 4. The EEPROM must first be N/A Blocks reads/writes to Page 4. The EEPROM must first be N/A Blocks reads/writes to Page 4. The EEPROM must first be N/A Blocks reads/writes to Page 4. The EEPROM must first be N/A Blocks reads/writes to Page 4. The EEPROM must first be N/A Blocks reads/writes to Page 4. The EEPROM must first be N/A Blocks reads/writes to Page 4. T	
0xB1EEPROM_DATA_01R blockVariableN/ABlock reads from Page 1. The EEPROM must first be0xB2EEPROM_DATA_02R/W blockVariableN/ABlocks reads/writes to Page 2. The EEPROM must unlocked for writes.0xB3EEPROM_DATA_03R/W blockVariableN/ABlocks reads/writes to Page 3. The EEPROM must unlocked for writes.0xB4EEPROM_DATA_04R/W blockVariableN/ABlocks reads/writes to Page 4. The EEPROM must unlocked for writes.	e unlocked.
0xB2     EEPROM_DATA_02     R/W block     Variable     N/A     Blocks reads/writes to Page 2. The EEPROM must unlocked for writes.       0xB3     EEPROM_DATA_03     R/W block     Variable     N/A     Blocks reads/writes to Page 3. The EEPROM must unlocked for writes.       0xB4     EEPROM_DATA_04     R/W block     Variable     N/A     Blocks reads/writes to Page 4. The EEPROM must unlocked for writes.	
0xB3	
0xB4 EEPROM_DATA_04 R/W block Variable N/A Blocks reads/writes to Page 4. The EEPROM must	st first be
LUHIOCKEU IOI WHICS.	st first be
0xB5	st first be
0xB6 EEPROM_DATA_06 R/W block Variable N/A Blocks reads/writes to Page 6. The EEPROM must unlocked for writes.	st first be
0xB7 EEPROM_DATA_07 R/W block Variable N/A Blocks reads/writes to Page 7. The EEPROM must unlocked for writes.	st first be
0xB8 EEPROM_DATA_08 R/W block Variable N/A Blocks reads/writes to Page 8. The EEPROM must unlocked for writes.	st first be

Command Code	Command Name	PMBus/ SMBus Transaction Type	Number of Data Bytes	Default Value <sup>1</sup>	Description
0xB9	EEPROM_DATA_09	R/W block	Variable	N/A	Blocks reads/writes to Page 9. The EEPROM must first be unlocked for writes.
0xBA	EEPROM_DATA_10	R/W block	Variable	N/A	Blocks reads/writes to Page 10. The EEPROM must first be unlocked for writes.
0xBB	EEPROM_DATA_11	R/W block	Variable	N/A	Blocks reads/writes to Page 11. The EEPROM must first be unlocked for writes.
0xBC	EEPROM_DATA_12	R/W block	Variable	N/A	Blocks reads/writes to Page 12. The EEPROM must first be unlocked for writes.
0xBD	EEPROM_DATA_13	R/W block	Variable	N/A	Blocks reads/writes to Page 13. The EEPROM must first be unlocked for writes.
0xBE	EEPROM_DATA_14	R/W block	Variable	N/A	Blocks reads/writes to Page 14. The EEPROM must first be unlocked for writes.
0xBF	EEPROM_DATA_15	R/W block	Variable	N/A	Blocks reads/writes to Page 15. The EEPROM must first be unlocked for writes.
0xD1	EEPROM_CRC_CHKSUM	R	1	N/A	Returns the CRC checksum value from the EEPROM download operation.
0xD2	EEPROM_NUM_RD_BYTES	R/W	1	N/A	Sets the number of return read bytes when using EEPROM_DATA_xx commands.
0xD3	EEPROM_ADDR_OFFSET	R/W	2	N/A	Sets the address offset of the current EEPROM page.
0xD4	EEPROM_PAGE_ERASE	W	1	N/A	Performs a page erase on a selected page (Page 3 to Page 15). Wait 35 ms for each page erase operation. The EEPROM must first be unlocked. A page erase of Page 0 and Page 1 is not allowed.
0xD5	EEPROM_PASSWORD	W	1	0xFF	Writes the password to this register to unlock the EEPROM, and/or changes the EEPROM password.
0xD6	TRIM_PASSWORD	W	1	0xFF	Writes the password to this register to unlock the trim registers for write access.
0xD7	CHIP_PASSWORD	W	2	0xFFFF	Writes the password to this register to unlock the chip password for register access.
0xD8	VIN_SCALE_MONITOR	R/W	2	0x0001	The scale factor for the input voltage reading (READ_VIN).
0xD9	IIN_SCALE_MONITOR	R/W	2	0x0001	The scale factor for the input current reading (READ_IIN).
0xF1	EEPROM_INFO	Read block	Variable	N/A	Reads the first fault information.
0xFA	MFR_SPECIFIC_1	R/W	1	0x00	Stores the user customized information. This register also stores the CS2 high-side mode factory analog trim value.
0xFB	MFR_SPECIFIC_2	R/W	1	0x00	Stores the user customized information test. This register also stores the CS2 high-side mode digital offset trim value.

<sup>&</sup>lt;sup>1</sup> N/A = Not applicable.

## MANUFACTURER SPECIFIC EXTENDED COMMAND LIST

Table 12. Manufacturer Specific Extended Command List Overview

Address	Register Function
	ration Registers
0xFE00	IIN_OC_FAST_FAULT_RESPONSE
0xFE01	CS3_OC_FAULT_RESPONSE, extended VOUT_OV_FAULT_RESPONSE
0xFE02	VIN UV FAULT RESPONSE
0xFE03	FLAGIN_RESPONSE, SR_RC_FAULT_RESPONSE
0xFE05	Flag reenable delay, VDD_OV_RESPONSE
	itware Reset Setting Registers
0xFE06	Software reset GO command
0xFE07	Software reset settings
0xFE08	Synchronous rectifier (SR) soft start settings
0xFE09	Soft start setting of open-loop operation
	PGOOD Setting Registers
0xFE0B	Flag blanking during soft start
0xFE0C	Volt-second balance blanking and SR disable during soft start
0xFE0D	PGOOD mask settings
0xFE0E	PGOOD flag debounce
0xFE0F	Debounce time for asserting PGOOD
Switching Fre	equency and Synchronization Setting Registers
0xFE11	Synchronization delay time
0xFE12	Synchronization general settings
0xFE13	Dual-ended topology mode
<b>Current Sens</b>	e and Limit Setting Registers
0xFE14	CS1 gain trim
0xFE15	CS2 gain trim
0xFE16	CS2 digital offset trim
0xFE17	CS2 analog trim
0xFE19	CS2 light load threshold
0xFE1A	IIN_OC_FAST_FAULT_LIMIT and SR_RC_FAULT_LIMIT
0xFE1B	CS2 deep light load mode setting
0xFE1C	PWM outputs disable at deep light load mode
0xFE1D	Matched cycle-by-cycle current-limit settings
0xFE1E	Light load mode and deep light mode settings
0xFE1F	CS1 cycle-by-cycle current-limit settings
Voltage Sens	e and Limit Setting Registers
0xFE20	VS gain trim
0xFE25	Pre-bias start-up enable
0xFE26	VOUT_OV_FAULT flag debounce
0xFE28	VF gain trim
0xFE29	VIN_ON and VIN_OFF delay
Temperature	Sense and Protection Setting Registers
0xFE2A	RTD gain trim
0xFE2B	RTD offset trim (MSBs)
0xFE2C	RTD offset trim (LSBs)
0xFE2D	RTD current source settings
OXI LZD	

Address	Register Function
	sator and Modulation Setting Registers
0xFE30	Normal mode compensator low frequency gain settings
0xFE31	Normal mode compensator zero settings
0xFE32	Normal mode compensator pole settings
0xFE33	Normal mode compensator high frequency gain settings
0xFE34	Light load mode compensator low frequency gain settings
0xFE35	Light load mode compensator zero settings
0xFE36	Light load mode compensator pole settings
0xFE37	Light load mode compensator high frequency gain settings
0xFE38	CS1 threshold for volt-second balance
0xFE39	Nominal modulation value for pre-bias startup
0xFE3A	Constant current speed and SR driver delay
0xFE3B	PWM 180° phase shift settings
0xFE3C	Modulation limit
0xFE3D	Feedforward and soft start filter gain
PWM Outputs Ti	ming Registers
0xFE3E	OUTA rising edge timing
0xFE3F	OUTA falling edge timing
0xFE40	OUTA rising and falling edges timing (LSBs)
0xFE41	OUTB rising edge timing
0xFE42	OUTB falling edge timing
0xFE43	OUTB rising and falling edges timing (LSBs)
0xFE44	OUTC rising edge timing
0xFE45	OUTC falling edge timing
0xFE46	OUTC rising and falling edges timing (LSBs)
0xFE47	OUTD rising edge timing
0xFE48	OUTD falling edge timing
0xFE49	OUTD rising and falling edges timing (LSBs)
0xFE4A	SR1 rising edge timing
0xFE4B	SR1 falling edge timing
0xFE4C	SR1 rising and falling edges timing (LSBs)
0xFE4D	SR2 rising edge timing
0xFE4E	SR2 falling edge timing
0xFE4F	SR2 rising and falling edges timing (LSBs)
0xFE50	OUTA and OUTB modulation settings
0xFE51 0xFE52	OUTC and OUTD modulation settings SR1 and SR2 modulation settings
0xFE53	PWM output disable
	ance Control Registers
0xFE54	Volt-second balance control general settings
0xFE55	Volt-second balance control general settings  Volt-second balance control on OUTA and OUTB
0xFE56	Volt-second balance control on OUTC and OUTD
0xFE57	Volt-second balance control on SR1 and SR2
Duty Cycle Settin	
0xFE58	Duty cycle reading settings
0xFE59	Input voltage compensation multiplier
Adaptive Dead T	ime Compensation Registers
0xFE5A	Adaptive dead time compensation threshold
0xFE5B	OUTA dead time
0xFE5C	OUTB dead time
0xFE5D	OUTC dead time
0xFE5E	OUTD dead time
0xFE5F	SR1 dead time
0xFE60	SR2 dead time

Address	Register Function
Other Setting	Registers
0xFE61	GO commands
0xFE62	Customized register
0xFE63	Modulation reference MSBs setting for open-loop input voltage feedforward operation
0xFE64	Modulation reference LSBs setting for open-loop input voltage feedforward operation
0xFE65	Current value update rate setting
0xFE66	Adaptive dead time compensation configuration
0xFE67	Open-loop operation settings
0xFE68	Offset setting for SR1 and SR2
0xFE69	Pulse skipping mode threshold
0xFE6A	CS3_OC_FAULT_LIMIT
0xFE6B	Modulation threshold for OVP selection
0xFE6C	Modulation flag for OVP selection
0xFE6D	OUTA and OUTB adjustment reference during synchronization
0xFE6E	OUTC and OUTD adjustment reference during synchronization
0xFE6F	SR1 and SR2 adjustment reference during synchronization
Manufacture	r Specific Fault Flag Registers
0xFEA0	Flag Register 1
0xFEA1	Flag Register 2
0xFEA2	Flag Register 3
0xFEA3	Latched Flag Register 1
0xFEA4	Latched Flag Register 2
0xFEA5	Latched Flag Register 3
0xFEA6	First flag ID
Manufacture	r Specific Value Reading Registers
0xFEA7	CS1 value
0xFEA8	CS2 value
0xFEA9	CS3 value
0xFEAA	VS value
0xFEAB	RTD value
0xFEAC	VF value
0xFEAD	Duty cycle value
0xFEAE	Input power value
0xFEAF	Output power value

## PMBus COMMAND DESCRIPTIONS

## **BASIC PMBus COMMANDS**

## **OPERATION**

The OPERATION command is used to turn the unit on and off in conjunction with the input from the CTRL pin. It is also used to set the output voltage to the upper or lower voltage margin. The unit stays in the commanded operating mode until a subsequent OPERATION command instructs the device to change to another mode.

Table 13. Register 0x01—OPERATION

Bits	Bit Name/Function	R/W	Description					
[7:6]	Enable	R/W	These bits determine the response to the OPERATION command.					
			Bit 7	Bit 6	Description			
			0	0	Immediate off (no sequencing)			
			0	1	Soft off (power-down based on the programmed TOFF_DELAY command)			
			1	0	Unit on			
			1	1	Reserved			
[5:4]	Margin control	R/W	These	These bits set the voltage margin level.				
			Bit 5	Bit 4	Description			
			0	0	Off			
			0	1	Margin low			
			1	0	Margin high			
			1	1	Reserved			
[3:0]	Reserved	R	Reserved.					

## ON\_OFF\_CONFIG

The ON\_OFF\_CONFIG command configures the combination of CTRL pin input and serial bus commands needed to turn the unit on and off, including how the unit responds when power is applied.

Table 14. Register 0x02—ON\_OFF\_CONFIG

Bits	Bit Name/Function	R/W	Description
[7:5]	Reserved	R	Reserved.
4	Power-up control	R/W	Controls how the device responds to the OPERATION command.
			0 = the unit powers up whenever power is present.
			1 = the unit powers up only when commanded by the CTRL pin and the OPERATION command (as programmed in Register 0x02, Bits[3:0]).
3	Command enable	R/W	Controls how the device responds to the OPERATION command.
			0 = ignores the OPERATION command.
			1 = requires that the OPERATION command be set to the on state to enable the unit (in addition to the setting of Bit 2).
2	Pin enable	R/W	Controls how the device responds to the value on the CTRL pin.
			0 = ignores the CTRL pin.
			1 = requires the CTRL pin to be asserted to enable the unit (in addition to the setting of Bit 3).
1	CTRL pin polarity	R/W	Sets the polarity for the CTRL pin.
			0 = active low.
			1 = active high.
0	Power-down delay	R/W	Action to take at power-down.
	setting		0 = uses the TOFF_DELAY value (TOFF_FALL is not supported by the ADP1051) to stop the transfer of energy to the output.
			1 = turns off the output and stops energy transfer to the output as fast as possible.

## **CLEAR\_FAULTS**

The CLEAR\_FAULTS command is a send byte, no data. This command clears all PMBus fault bits in all PMBus status registers simultaneously.

## Table 15. Register 0x03—CLEAR\_FAULTS

Bits	Bit Name/Function	Type	Description
N/A	CLEAR_FAULTS	Send	Clears all bits in PMBus status registers (Register 0x78 to Register 0x7E) simultaneously.

#### WRITE PROTECT

The WRITE\_PROTECT command is used to control writing to the PMBus device. The intent of this command is to provide protection against accidental changes. This command is not intended to provide protection against deliberate or malicious changes to the configuration or operation of the device.

Table 16. Register 0x10—WRITE\_PROTECT

Bits	Bit Name/Function	R/W	Description
7	Write Protect 1	R/W	Disables writes to all commands except the WRITE_PROTECT command.
6	Write Protect 2	R/W	Disables writes to all commands except the WRITE_PROTECT and OPERATION commands.
5	Write Protect 3	R/W	Disables writes to all commands except the WRITE_PROTECT, OPERATION, ON_OFF_CONFIG, and VOUT_COMMAND commands.
[4:0]	Reserved	R	Reserved.

## RESTORE\_DEFAULT\_ALL

The RESTORE\_DEFAULT\_ALL command is a send byte, no data. This command downloads the factory default settings (including the basic PMBus commands, the manufacturer specific extended commands (starting with 0xFE), and other data such as the checksum, the EEPROM password, and the chip password) from the EEPROM (Page 0 of the main block) into the registers.

Table 17. Register 0x12—RESTORE\_DEFAULT\_ALL

Bits	Bit Name/Function	Type	Description
N/A	RESTORE_DEFAULT_ALL	Send	Restores the factory default settings from the EEPROM to the registers.

## STORE\_USER\_ALL

The STORE\_USER\_ALL command is a send byte, no data. This command copies the entire contents of the registers into the EEPROM (Page 1 of the main block) as the user settings. The settings are automatically restored on the power-up of VDD.

## Table 18. Register 0x15—STORE\_USER\_ALL

Bits	Bit Name/Function	Type	Description
N/A	STORE_USER_ALL	Send	Saves the user settings from the registers to the EEPROM.

## RESTORE\_USER\_ALL

The RESTORE\_USER\_ALL command is a send byte, no data. This command downloads the stored user settings including the basic PMBus commands, the manufacturer specific extended commands (starting with 0xFE), and other data (for example, the checksum, the EEPROM password, and the chip password) from the EEPROM (Page 1 of the main block) into the registers.

## Table 19. Register 0x16—RESTORE\_USER\_ALL

Bits	Bit Name/Function	Type	Description
N/A	RESTORE_USER_ALL	Send	Restores the user settings from the EEPROM to the registers.

#### **CAPABILITY**

This command summarizes the PMBus optional communication protocols supported by the ADP1051. The reading of this command should result in 0x20.

## Table 20. Register 0x19—CAPABILITY

Bits	Bit Name/Function	R/W	Description
[7]	Packet error	R	Checks the packet error capability of the device.
			0 = not supported.
[6:5]	Maximum bus speed	R	Checks the PMBus speed capability of the device.
			01 = maximum bus speed of 400 kHz.
4	SMBALERT	R	Checks support of the SMBALERT pin and the SMBus alert response protocol.
			0 = not supported.
[3:0]	Reserved	R	Reserved.

#### **VOUT MODE**

The VOUT\_MODE command sets the data format for output voltage related data. The data byte for the VOUT\_MODE command consists of a 3-bit mode and 5-bit exponent parameter. The 3-bit mode determines whether the device uses linear format or direct format for the output voltage related commands. The 5-bit parameter sets the exponent value for linear format.

Table 21. Register 0x20—VOUT\_MODE

Bits	Bit Name/Function	R/W	Description
[7:5]	Mode	R	Output voltage data format. The value is fixed at 000, which means that only linear format is supported.
[4:0]	Exponent	R	The N value for the output voltage related commands in linear format: $V = Y \times 2^N$ . The value is fixed at 10110 (twos complement, $-10$ decimal). The exponent for linear format values is $-10$ .

#### **VOUT COMMAND**

The VOUT\_COMMAND command sets the output voltage. The VOUT\_TRANSITION\_RATE command is used if this command is modified while the output is active and in a steady state condition. The maximum programmable output voltage is 64 V.

Table 22. Register 0x21-VOUT\_COMMAND

Bits	Bit Name/Function	R/W	Description
[15:0]	Mantissa	R/W	Sets the output voltage reference value, in volts.
			16-bit unsigned integer Y value for linear format: $V = Y \times 2^{N}$ .
			N is defined in the VOUT_MODE command.

## **VOUT\_TRIM**

The VOUT\_TRIM command applies a fixed offset voltage to the output voltage command value. It is typically set by the user to trim the output voltage at the time that the PMBus device is assembled into the system of the user. The trim range is -32 V to +32 V, and each LSB resolution is  $2^{-10} = 0.9765625$  mV.

Table 23. Register 0x22—VOUT\_TRIM

Bits	Bit Name/Function	R/W	Description
[15:0]	Mantissa	R/W	Sets the output voltage trim value.
			16-bit twos complement Y value for linear format: $V = Y \times 2^N$ .
			N is defined in the VOUT_MODE command.

## **VOUT\_CAL\_OFFSET**

The VOUT\_CAL\_OFFSET command is used to apply a fixed offset voltage to the output voltage command value. It is typically used by the PMBus device manufacturer to calibrate the device in the factory. The trim range is -32 V to +32 V and each LSB size is  $2^{-10} = 0.9765625 \text{ mV}$ .

Table 24. Register 0x23—VOUT\_CAL\_OFFSET

Bits	Bit Name/Function	R/W	Description
[15:0]	Mantissa	R/W	Sets the output voltage trim value.
			16-bit twos complement Y value for linear format: $V = Y \times 2^{N}$ .
			N is defined in the VOUT_MODE command.

## VOUT\_MAX

The VOUT\_MAX command sets an upper limit on the output voltage the unit can attain, regardless of any other commands or combinations. If an attempt is made to program the output voltage higher than the limit set by this command, the device responds as follows:

The commanded output voltage is set to the VOUT\_MAX value.

The NONE OF THE ABOVE bit is set in the STATUS\_BYTE command (Register 0x78[0]).

The VOUT bit is set in the STATUS\_WORD command (Register 0x79[15]).

The VOUT\_MAX warning bit is set in the STATUS\_VOUT command (Register 0x7A[3]).

#### Table 25. Register 0x24—VOUT\_MAX

Bits	Bit Name/Function	R/W	Description
[15:0]	Mantissa	R/W	Sets the output voltage upper limit.
			16-bit unsigned integer Y value for linear format: $V = Y \times 2^{N}$ .
			N is defined in the VOUT_MODE command.

#### **VOUT MARGIN HIGH**

The VOUT\_MARGIN\_HIGH command sets the target voltage to which the output changes when the OPERATION command is set to margin high. The VOUT\_TRANSITION\_RATE command is used if this command is modified while the output is active and in a steady-state condition.

Table 26. Register 0x25—VOUT\_MARGIN\_HIGH

Bits	Bit Name/Function	R/W	Description
[15:0]	Mantissa	R/W	Sets the margin high value for the output voltage, in volts.
			16-bit unsigned integer Y value for linear format: $V = Y \times 2^{N}$ .
			N is defined by the VOUT_MODE command.

#### **VOUT MARGIN LOW**

The VOUT\_MARGIN\_LOW command sets the target voltage, to which the output changes when the OPERATION command is set to margin low. The VOUT\_TRANSITION\_RATE command is used if this command is modified while the output is active and in a steady-state condition.

Table 27. Register 0x26—VOUT\_MARGIN\_LOW

Bits	Bit Name/Function	R/W	Description
[15:0]	Mantissa	R/W	Sets the margin low value for the output voltage, in volts.
			16-bit unsigned integer Y value for linear format $V = Y \times 2^{\mathbb{N}}$ .
			N is defined by the VOUT_MODE command.

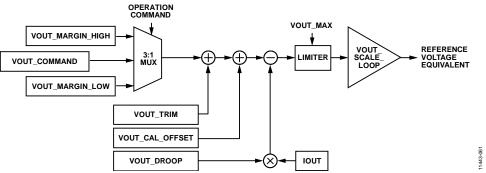


Figure 62. Conceptual View of the Output Voltage Related Commands

## **VOUT\_TRANSITION\_RATE**

When the part receives either a VOUT\_COMMAND command or an OPERATION command (margin high, margin low) that causes the output voltage to change, this command sets the rate, in  $mV/\mu s$ , at which the VS± pins change voltage. This commanded rate of change does not apply when the unit is turned on or off. The maximum positive value (0x7BFF) of the two data bytes indicates that the unit makes the transition as quickly as possible. Only the following limited options are supported by the ADP1051.

Table 28. Register 0x27—VOUT\_TRANSITION\_RATE (Rate-of-Change Options Supported by the ADP1051)

Rate of Change (mV/μs)	
0.0015625	
0.003125	
0.00625	
0.0125	
0.025	
0.050	
0.1	
0.2	
Infinite (default)	
	0.0015625 0.003125 0.00625 0.0125 0.025 0.050 0.1

Table 29. Register 0x27—VOUT\_TRANSITION\_RATE

Bits	Bit Name/Function	R/W	Description
[15:11]	Exponent	R/W	5-bit twos complement N value for linear format $X = Y \times 2^{N}$ .
[10:0]	Mantissa	R/W	11-bit twos complement Y value for linear format $X = Y \times 2^{\mathbb{N}}$ .

## VOUT\_DROOP

The VOUT\_DROOP command sets the rate, in mV/A ( $m\Omega$ ), at which the output voltage decreases (or increases) with increasing (or decreasing) output current for use with the adaptive voltage positioning requirements and passive current sharing schemes. The range of VOUT\_DROOP in the ADP1051 is 0x0000 to 0x00FF (0  $m\Omega$  to 255  $m\Omega$ ). Values not within this range are invalid. An invalid value results in a CML error.

Table 30. Register 0x28—VOUT\_DROOP


Bits	Bit Name/Function	R/W	Description
[15:11]	Exponent	R	5-bit twos complement N value for linear format $X = Y \times 2^N$ . N is fixed at 0.
[10:8]	Mantissa high bits	R	Mantissa high bits, Y[10:8], value fixed at 0.
[7:0]	Mantissa low bits	R/W	Mantissa low bits, Y[7:0], value for linear format $X = Y \times 2^{N}$ .

## VOUT\_SCALE\_LOOP

The VOUT\_SCALE\_LOOP command is equal to the feedback resistor ratio. The nominal output voltage is set by a resistor divider and the internal 1 V reference voltage. For example, if the nominal output voltage is 12 V, the VOUT\_SCALE\_LOOP value = 1 V/12 V = 0.08333 and the VOUT\_SCALE\_LOOP can be set as  $0 \times 15 = 0.08333$ .

Table 31. Register 0x29—VOUT\_SCALE\_LOOP

Bits	Bit Name/Function	R/W	Description
[15:11]	Exponent	R/W	5-bit twos complement N value for linear format $K_R = Y \times 2^N$ .
			N should be in the range of $-12$ to 0 decimal.
[10:0]	Mantissa	R/W	11-bit twos complement Y value for linear format $K_R = Y \times 2^N$ .

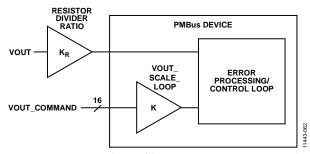

 $\textit{Figure 63. Conceptual View of the VOUT\_SCALE\_LOOP\ Command}$ 

## **VOUT SCALE MONITOR**

This command is typically the same as the VOUT\_SCALE\_LOOP command. It is used for reading the output voltage with the READ\_VOUT command (Register 0x8B).

Table 32. Register 0x2A—VOUT\_SCALE\_MONITOR

Bits	Bit Name/Function	R/W	Description
[15:11]	Exponent	R/W	5-bit twos complement N value for linear format $K_R = Y \times 2^N$ .
			N should be in the range of -12 to 0 decimal.
[10:0]	Mantissa	R/W	11-bit twos complement Y value for linear format $K_R = Y \times 2^N$ .

## FREQUENCY\_SWITCH

The FREQUENCY\_SWITCH command, which sets the switching frequency in kHz, is in linear format. Only the following limited switching frequency options are supported by the ADP1051. In the ADP1051, because the switching frequency is calculated from the switching period, the switching period value that is used is an accurate measure, whereas the switching frequency may not be. For example, for the first switching frequency option of 49 kHz (see Table 33), the actual switching frequency is calculated by  $1/(20.48 \, \mu s) = 48.828125 \, kHz$ , which is simplified (rounded) to 49 kHz.

To avoid an incorrect switching frequency setting, the GO commands in Register 0xFE61[2:1] must be used to latch this setting and the PWM setting.

Table 33. Register 0x33—FREQUENCY\_SWITCH (Options Supported by the ADP1051)

Register Setting	Switching Frequency (kHz)	Accurate Switching Period (μs)
000000000110001 (0x0031)	49	20.48
000000000111000 (0x0038)	56	17.92
000000000111100 (0x003C)	60	16.64
000000001000001 (0x0041)	65	15.36
000000001000111 (0x0047)	71	14.08
000000001001110 (0x004E)	78	12.80
000000001010111 (0x0057)	87	11.52
1111100011000011 (0xF8C3)	97.5	10.24
000000001101000 (0x0068)	104	9.60
1111100011011111 (0xF8DF)	111.5	8.96
000000001111000 (0x0078)	120	8.32
000000010000010 (0x0082)	130	7.68
000000010001000 (0x0088)	136	7.36
000000010001110 (0x008E)	142	7.04
000000010010101 (0x0095)	149	6.72
1111100100111001 (0xF939)	156.5	6.40
1111100101001001 (0xF949)	164.5	6.08
1111100101011011 (0xF95B)	173.5	5.76
000000010111000 (0x00B8)	184	5.44
1111100110000111 (0xF987)	195.5	5.12
1111100110010011 (0xF993)	201.5	4.96
1111100110100001 (0xF9A1)	208.5	4.80
1111100110101111 (0xF9AF)	215.5	4.64
000000011011111 (0xDF)	223	4.48
1111100111001111 (0xF9CF)	231.5	4.32
1111100111100001 (0xF9E1)	240.5	4.16
000000011111010 (0x00FA)	250	4.00
1111101000001001 (0xFA09)	260.5	3.84
1111101000011111 (0xFA1F)	271.5	3.68
000000100011100 (0x011C)	284	3.52
1111101001010011 (0xFA53)	297.5	3.36
1111101001110001 (0xFA71)	312.5	3.20
1111101010000001 (0xFA81)	320.5	3.12
000000101001001 (0x0149)	329	3.04
000000101010010 (0x0152)	338	2.96
000000101011011 (0x15B)	347	2.88
0000000101100101 (0x0165)	357	2.80
1111101011011111 (0xFADF)	367.5	2.72
0000000101111011 (0x017B)	379	2.64
1111101100001101 (0xFB0D)	390.5	2.56
0000000110001101 (0x018D)	397	2.52
000000110010011 (0x0193)	403	2.48
000000110011010 (0x019A)	410	2.44

Register Setting	Switching Frequency (kHz)	Accurate Switching Period (μs)
1111101101000001 (0xFB41)	416.5	2.40
1111101101001111 (0xFB4F)	423.5	2.36
000000110101111 (0x1AF)	431	2.32
1111101101101101 (0xFB6D)	438.5	2.28
11111011011111101 (0xFB7D)	446.5	2.24
1111101110001101 (0xFB8D)	454.5	2.20
0000000111001111 (0x01CF)	463	2.16
000000111011000 (0x01D8)	472	2.12
000000111100001 (0x01E1)	481	2.08
000000111101010 (0x1EA)	490	2.04
000000111110100 (0x1F4)	500	2.00
000000111111110 (0x01FE)	510	1.96
0000001000001000 (0x0208)	520	1.92
0000001000010011 (0x0213)	531	1.88
0000001000011111 (0x0x21F)	543	1.84
000001000101100 (0x022C)	556	1.80
000001000111000 (0x0238)	568	1.76
000001001000101 (0x0245)	581	1.72
0000001001010011 (0x0253)	595	1.68
0000001001100010 (0x0262)	610	1.64
000001001110001 (0x0271)	625	1.60

## Table 34. Register 0x33—FREQUENCY\_SWITCH

Bits	Bit Name/Function	R/W	Description
[15:11]	Exponent	R/W	5-bit twos complement N value for linear format $X = Y \times 2^{N}$ .
[10:0]	Mantissa	R/W	11-bit twos complement Y value for linear format $X = Y \times 2^{N}$ .

## VIN ON

The VIN\_ON command sets the value of the input voltage (in volts) at which the unit starts power conversion.

## Table 35. Register 0x35—VIN\_ON

Bit	Bit Name/Function	R/W	Description
[15:11]	Exponent	R/W	5-bit twos complement N value for linear format $X = Y \times 2^{N}$ .
			N should be in the range of –12 to 0 decimal.
[10:0]	Mantissa	R/W	11-bit twos complement Y value for linear format $X = Y \times 2^N$ .

## VIN\_OFF

The VIN\_OFF command sets the value of the input voltage (in volts) at which the unit stops power conversion after operation has started.

## Table 36. Register 0x36—VIN\_OFF

Bit	Bit Name/Function	R/W	Description
[15:11]	Exponent	R/W	5-bit twos complement N value for linear format $X = Y \times 2^{N}$ .
			N should be in the range of –12 to 0 decimal.
[10:0]	Mantissa	R/W	11-bit twos complement Y value for linear format $X = Y \times 2^{N}$ .

## IOUT\_CAL\_GAIN

The IOUT\_CAL\_GAIN command sets the ratio of the voltage at the current sense element to the sensed current. For devices using a fixed current sense resistor, it is typically the same value as the conductance of the resistor. The units are milliohms ( $m\Omega$ ). Typically, this command is used with the READ\_IOUT command.

Table 37. Register 0x38—IOUT\_CAL\_GAIN

Bits	Bit Name/Function	R/W	Description
[15:11]	Exponent	R/W	5-bit twos complement N value for linear format $X = Y \times 2^{N}$ .
			N should be in the range of –12 to 0 decimal.
[10:0]	Mantissa	R/W	11-bit twos complement Y value for linear format $X = Y \times 2^N$ .

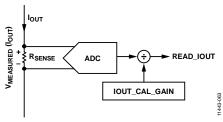


Figure 64. Conceptual View of the Output Current Related Commands

## VOUT\_OV\_FAULT\_LIMIT

 $The \ VOUT\_OV\_FAULT\_LIMIT \ command \ sets \ the \ threshold \ value \ for \ overvoltage \ protection \ of \ the \ output \ voltage.$ 

Table 38. Register 0x40—VOUT\_OV\_FAULT\_LIMIT

Bits	Bit Name/Function	R/W	Description
[15:0]	Mantissa	R/W	16-bit unsigned integer Y value for linear mode format $X = Y \times 2^{N}$ .
			N is defined by the VOUT_MODE command.
			Note that the available OV protection limit value must be in the range of 75% to 150% of the nominal output voltage.

## VOUT\_OV\_FAULT\_RESPONSE

Table 39. Register 0x41—VOUT\_OV\_FAULT\_RESPONSE

Bits	Bit Name/Function	R/W	Descrip	otion					
[7:6]	Response	R/W	00 = co	ntinues o <sub>l</sub>	peration w	vithout interruption.			
						or the debounce time (Delay Time 1) specified by Register 0xFE26[7:6]. If number of times specified by the retry setting of this command (Bits[5:3]).			
			10 = shuts down and responds according to the retry setting in Bits[5:3].						
			11 = the output is disabled while the fault is present. Operation resumes and the output is enabled when the fault condition no longer exists.						
[5:3]	Retry setting	R/W	000 = re	estart not	attempted	d. The output remains disabled until the fault is cleared.			
			001 to 110 = attempts to restart the number of times set by these bits. If the ADP1051 fails to restart in the allowed number of retries, the output is disabled and remains off until the fault is cleared. The time between the start of each attempt to restart is set by the Delay Time 2 value in Bits[2:0], along with the delay time unit specified for that particular fault.						
						ntinuously, without limitation, until it is commanded off (by the CTRL pin			
					N commar	nd, or both), $V_{DD}$ is removed, or another fault condition causes the unit to			
[0.0]	Dalaytina	R/W		shut down.  These bits set the delay time between the start of each attempt to restart.					
[2:0]	Delay time	FI/VV			<del>, '</del>				
			Bit 2	Bit 1	Bit 0	Delay Time 2 (ms)			
			0	0	0	252			
			0	0		588			
			0		0	924			
			1260						
				0	0	1596			
				0	1	1932			
			1		0	2268			
			<u> </u>	I	l I	2604			

## VOUT\_UV\_FAULT\_LIMIT

The VOUT\_UV\_FAULT\_LIMIT command sets the threshold value for undervoltage protection of the output voltage.

## Table 40. Register 0x44—VOUT\_UV\_FAULT\_LIMIT

Bits	Bit Name/Function	R/W	Bit Name/Function
[15:0]	Mantissa	R/W	16-bit unsigned integer Y value for linear format $X = Y \times 2^{N}$ .
			N is defined by the VOUT_MODE command.

## VOUT\_UV\_FAULT\_RESPONSE

## Table 41. Register 0x45—VOUT\_UV\_FAULT\_RESPONSE

Bits	Bit Name/Function	R/W	Descrip	tion					
[7:6]	Response	R/W	00 = con	tinues op	eration wit	hout interruption.	interruption.		
			01 = continues operation for the Delay Time 1 (Bits[2:0]). If the fault persists, retry the numl						
			times specified by the retry setting (Bits[5:3]).						
			10 = shu	ts down (	disables the	e output) and responds	s according to the retry setting in Bits[5:3].		
						hile the fault is present onger exists.	t. Operation resumes and the output is enabled		
[5:3]	Retry setting	R/W	000 = re	start not a	ttempted.	The output remains dis	sabled until the fault is cleared.		
			the allow between with the 111 = att or the O	001 to 110 = attempts to restart the number of times set by these bits. If the unit fails to restart in the allowed number of retries, it disables the output and remains off until the fault is cleared. The time between the start of each attempt to restart is set by the Delay Time 2 value in Bits[2:0], together with the delay time unit specified for that particular fault.  111 = attempts to restart continuously, without limitation, until it is commanded off (by the CTRL pin or the OPERATION command, or both), V <sub>DD</sub> is removed, or another fault condition causes the unit to shut down.					
[2:0]	Delay time	R/W			delay time ':6] and Bits		LT_RESPONSE Delay Time 1 and Delay Time 2 as		
			Bit 2	Bit 1	Bit 0	Delay Time 1 (ms)	Delay Time 2 (ms)		
			0	0	0	0	252		
			0	0	1	20	588		
			0	1	0	40	924		
			0	1	1	80	1260		
			1	0	0	160	1596		
			1	0	1	320	1932		
			1	1	0	640	2268		
			1	1	1	1280	2604		

## IOUT\_OC\_FAULT\_LIMIT

The IOUT\_OC\_FAULT\_LIMIT command sets the threshold value for overcurrent protection of the output voltage.

## Table 42. Register 0x46—IOUT\_OC\_FAULT\_LIMIT

Bit	Bit Name/Function	R/W	Description
[15:11]	Exponent	R/W	5-bit twos complement N value for linear format $X = Y \times 2^{N}$ .
			N should be in the range of –12 to 0 decimal.
[10:0]	Mantissa	R/W	11-bit twos complement Y value for linear format $X = Y \times 2^N$ .

## IOUT\_OC\_FAULT\_RESPONSE

## Table 43. Register 0x47—IOUT\_OC\_FAULT\_RESPONSE

Bit	Bit Name/Function	R/W	Descrip	tion					
[7:6]	Response	R/W	00 = operates in current-limit mode, maintaining the output current at the IOUT_OC_FAULT_LIMIT, regardless of the output voltage (known as the constant current).						
			for as lo voltage	01 = operates in current-limit mode, maintaining the output current at the IOUT_OC_FAULT_LIMIT for as long as the output voltage remains above the IOUT_OC_LV_FAULT_LIMIT. If the output voltage is pulled down to less than that value, the ADP1051 shuts down and responds according to the retry setting in Bits[5:3].					
			the outprespond	10 = continues operation in current-limit mode for the Delay Time 1 set by Bits[2:0], regardless of the output voltage. If the ADP1051 is still operating in current limit at the end of the delay time, it responds as programmed by the retry setting in Bits[5:3].					
							he retry setting in Bits[5:3].		
[5:3]	Retry setting	R/W				•	sabled until the fault is cleared.		
		001 to 110 = attempts to restart the number of times set by these restart (the fault condition is no longer present and the ADP1051 is and operating as programmed) in the allowed number of retries, it di until the fault is cleared. The time between the start of each attem Time 2 value in Bits[2:0], together with the delay time unit specific 111 = attempts to restart continuously, without limitation, until it is					the ADP1051 is delivering power to the output or of retries, it disables the output and remains off of each attempt to restart is set by the Delay the unit specified for that particular fault.		
			the unit to shut down.						
[2:0]	Delay time	R/W	These bits set the delay time.						
			Bit 2	Bit 1	Bit 0	Delay Time 1 (ms)	Delay Time 2 (ms)		
			0	0	0	0	252		
			0	0	1	20	588		
			0	1	0	40	924		
			0	1	1	80	1260		
			1	0	0	160	1596		
			1	0	1	320	1932		
			1	1	0	640	2268		
			1	1	1	1280	2604		

## IOUT\_OC\_LV\_FAULT\_LIMIT

The IOUT\_OC\_LV\_FAULT\_LIMIT command sets the voltage threshold in cases for which the response to an overcurrent condition is to operate in a constant current mode unless the output voltage is pulled below the specified limit value.

## Table 44. Register 0x48—IOUT\_OC\_LV\_FAULT\_LIMIT

Bits	Bit Name/Function	R/W	Description
[15:0]	Mantissa	R/W	16-bit unsigned integer Y value for linear format $X = Y \times 2^N$ . N is defined in the VOUT_MODE command.

## OT\_FAULT\_LIMIT

The OT\_FAULT\_LIMIT command sets the threshold value (in °C) for overtemperature protection. The range is 0°C to 156°C. If the setting value is out of range, the limit is 156 and the return value is 156.

Table 45. Register 0x4F—OT\_FAULT\_LIMIT

Bits	Bit Name/Function	R/W	Description
[15:11]	Exponent	R	5-bit twos complement N value for linear format $X = Y \times 2^N$ . N is fixed at 0.
[10:8]	Mantissa high bits	R	Mantissa high bits Y[10:8] value fixed at 0.
[7:0]	Mantissa low bits	R/W	Mantissa low bits Y[7:0] value for linear format $X = Y \times 2^N$ .

## OT\_FAULT\_RESPONSE

Table 46. Register 0x50—OT\_FAULT\_RESPONSE

Bits	Bit Name/Function	R/W	Descri	ption						
[7:6]	Response	R/W	00 = cc	ontinues op	eration wit	thout interruption.				
			01 = continues operation for the Delay Time 1 specified by Bits[2:0] and the delay time unit specified for that particular fault. If the fault condition is still present at the end of the delay time, the unit responds as programmed in the retry setting (Bits[5:3]).							
			10 = sh	nuts down (	disables th	e output) and respond	s according to the retry setting in Bits[5:3].			
						while the fault is presen longer exists.	t. Operation resumes and the output is enabled			
[5:3]	Retry setting	R/W	000 = 1	estart not	attempted.	The output remains dis	sabled until the fault is cleared.			
			001 to 110 = attempts to restart the number of times set by these bits. If the device fails to restart in the allowed number of retries, it disables the output and remains off until the fault is cleared. The time between the start of each attempt to restart is set by the Delay Time 2 value in Bits[2:0], together with the delay time unit specified for that particular fault.  111 = attempts to restart continuously, without limitation, until commanded off (by the CTRL pin or the OPERATION command, or both), VDD is removed, or another fault condition causes the unit to shut down.							
[2:0]	Delay time	R/W	These	bits set the	delay time	•				
			Bit 2	Bit 1	Bit 0	Delay Time 1 (sec)	Delay Time 2 (ms)			
			0	0	0	1	252			
			0	0	1	1	588			
			0	1	0	1	924			
			0	1	1	1	1260			
			1	0	0	1	1596			
			1	0	1	1	1932			
			1	1	0	1	2268			
-			1	1	1	1	2604			

## POWER\_GOOD\_ON

The POWER\_GOOD\_ON command sets the output voltage (in volts) at which the POWER\_GOOD signal is asserted. The POWER\_GOOD status bit (POWER\_GOOD) in the STATUS\_WORD command is always reflective of Vout with regard to the POWER\_GOOD\_ON and POWER\_GOOD\_OFF limits.

Table 47. Register 0x5E—POWER\_GOOD\_ON

Bits	Bit Name/Function	R/W	Description
[15:0]	Mantissa	R/W	Sets the output voltage for the POWER_GOOD_ON command.
			16-bit unsigned integer Y value for linear format $X = Y \times 2^{N}$ .
			N is defined by the VOUT_MODE command.

## POWER\_GOOD\_OFF

The POWER\_GOOD\_OFF command sets the output voltage (in volts) at which the POWER\_GOOD signal is negated. The POWER\_GOOD status bit (POWER\_GOOD) in the STATUS\_WORD command is always reflective of Vout with regard to the POWER\_GOOD\_ON and POWER\_GOOD\_OFF limits.

Table 48. Register 0x5F—POWER\_GOOD\_OFF

Bits	Bit Name/Function	R/W	Description
[15:0]	Mantissa	R/W	Sets the output voltage for the POWER_GOOD_OFF command.
			16-bit unsigned integer Y value for linear format $X = Y \times 2^{N}$ .
			N is defined by the VOUT_MODE command.

## TON\_DELAY

The TON\_DELAY command sets the turn-on delay time in milliseconds (ms). Only the following options are supported in the ADP1051.

Table 49. Register 0x60—TON\_DELAY (Turn-On Delay Options Supported in the ADP1051)

Register Setting	Turn-On Delay Time (ms)
0000000000000000 (0x0000)	0
000000000001010 (0x000A)	10
000000000011001 (0x0019)	25
000000000110010 (0x0032)	50
000000001001011 (0x004B)	75
000000001100100 (0x0064)	100
000000011111010 (0x00FA)	250
0000001111101000 (0x03E8)	1000

## Table 50. Register 0x60—TON\_DELAY

Bits	Bit Name/Function	R/W	Description
[15:11]	Exponent	R/W	5-bit twos complement N value for linear format $X = Y \times 2^{N}$ .
[10:0]	Mantissa	R/W	11-bit twos complement Y value for linear format $X = Y \times 2^{N}$ .

#### TON RISE

The TON\_RISE command sets the turn-on rise time in ms. Only the following values are supported in the ADP1051.

## Table 51. Register 0x61—TON\_RISE (Turn-On Rise Time Options Supported in the ADP1051)

Register Setting	Turn-On Rise Time (ms)
110000000001101 (0xC00D)	0.05
110100000001101 (0xD00D)	0.2
1111000000000111 (0xF007)	1.75
1111100000010101 (0xF815)	10.5
000000000010101 (0x0015)	21
1111000010100001 (0xF0A1)	40.25
000000000111100 (0x003C)	60
000000001100100 (0x0064)	100

#### Table 52. Register 0x61—TON\_RISE

Bits	Bit Name/Function	R/W	Description
[15:11]	Exponent	R/W	5-bit twos complement N value for linear format $X = Y \times 2^{N}$ .
[10:0]	Mantissa	R/W	11-bit twos complement Y value for linear format $X = Y \times 2^{N}$ .

## TOFF\_DELAY

The TOFF\_DELAY command sets the turn-off delay time in milliseconds (ms). Only the values listed in Table 53 are supported in the ADP1051.

Table 53. Register 0x64—TOFF\_DELAY (Turn-Off Delay Options Supported in the ADP1051)

Register Setting	Turn-Off Delay Time (ms)
0000000000000000 (0x0000)	0
000000000110010 (0x0032)	50
000000011111010 (0x00FA)	250
0000001111101000 (0x03E8)	1000

## Table 54. Register 0x64—TOFF\_DELAY

Bits	Bit Name/Function	R/W	Description
[15:11]	Exponent	R/W	5-bit twos complement N value for linear format $X = Y \times 2^{N}$ .
[10:0]	Mantissa	R/W	11-bit twos complement Y value for linear format $X = Y \times 2^{N}$ .

## STATUS\_BYTE

## Table 55. Register 0x78—STATUS\_BYTE

Bits	Bit Name/Function	R/W	Description
7	Reserved	R	Reserved.
6	POWER_OFF	R	This bit is asserted if the unit is not providing power to the output, regardless of the reason, including simply not being enabled.
5	VOUT_OV_FAULT	R	An output overvoltage fault has occurred.
4	IOUT_OC_FAULT	R	An output overcurrent fault has occurred.
3	VIN_UV_FAULT	R	An input undervoltage fault has occurred.
2	TEMPERATURE	R	A temperature fault or warning has occurred.
1	CML	R	A communications, memory, or logic fault has occurred.
0	NONE OF THE ABOVE	R	A fault or warning not listed in Bits[7:1] has occurred.

## STATUS\_WORD

## Table 56. Register 0x79—STATUS\_WORD

Bits	Bit Name/Function	R/W	Description
15	VOUT	R	Any bit asserted in STATUS_VOUT asserts this bit.
14	IOUT	R	Any bit asserted in STATUS_IOUT asserts this bit.
13	INPUT	R	Any bit asserted in STATUS_INPUT asserts this bit.
12	Reserved	R	Reserved.
11	POWER_GOOD	R	POWER_GOOD is a negation of POWER_GOOD, which means that the output power is not good. This bit is set when the sensed Vout is less than the limit programmed in the POWER_GOOD_OFF command. This bit is cleared when the sensed Vout voltage is greater than the limit that is programmed in the POWER_GOOD_ON command. This flag also triggers the PGOOD flag in Register 0xFEA0[6].
[10:7]	Reserved	R	Reserved.
6	POWER_OFF	R	This bit is asserted if the unit is not providing power to the output, regardless of the reason, including not being enabled.
5	VOUT_OV_FAULT	R	An output overvoltage fault has occurred.
4	IOUT_OC_FAULT	R	An output overcurrent fault has occurred.
3	VIN_UV_FAULT	R	An input undervoltage fault has occurred.
2	TEMPERATURE	R	An overtemperature fault or warning has occurred.
1	CML	R	A communications, memory, or logic fault has occurred.
0	NONE OF THE ABOVE	R	A fault or warning not listed in Bits[7:1] has occurred.

## STATUS\_VOUT

## Table 57. Register 0x7A—STATUS\_VOUT

Bits	Bit Name/Function	R/W	Description
7	VOUT_OV_FAULT	R	An output overvoltage fault has occurred.
[6:5]	Reserved	R	Reserved.
4	VOUT_UV_FAULT	R	An output undervoltage fault has occurred.
3	VOUT_MAX warning		An attempt was made to set the output voltage to a value greater than allowed by the VOUT_MAX command.
[2:0]	Reserved	R	Reserved.

## STATUS\_IOUT

## Table 58. Register 0x7B—STATUS\_IOUT

Bits	Bit Name/Function	R/W	Description
7	IOUT_OC_FAULT	R	An output overcurrent fault has occurred.
[6:0]	Reserved	R	Reserved.

## STATUS\_INPUT

## Table 59. Register 0x7C—STATUS\_INPUT

Bits	Bit Name/Function	R/W	Description
[7:5]	Reserved	R	Reserved.
4	VIN_UV_FAULT	R	An input undervoltage fault has occurred.
3	VIN_LOW	R	The unit is off due to insufficient input voltage.
2	IIN_OC_FAST_FAULT	R	An input overcurrent fast fault has occurred.
[1:0]	Reserved	R	Reserved.

## STATUS\_TEMPERATURE

## Table 60. Register 0x7D—STATUS\_TEMPERATURE

Bits	Bit Name/Function	R/W	Description
7	OT_FAULT	R	An overtemperature fault has occurred.
6	OT_WARNING	R	An overtemperature warning has occurred.
[5:0]	Reserved	R	Reserved.

## STATUS\_CML

## Table 61. Register 0x7E—STATUS\_CML

	U		
Bits	Bit Name/Function	R/W	Description
7	CMD_ERR	R	An invalid or unsupported command is received.
6	DATA_ERR	R	Invalid or unsupported data is received.
[5:2]	Reserved	R	Reserved.
1	COMM_ERR	R	Other communication fault is detected.
0	Reserved	R	Reserved.

## READ\_VIN

The READ\_VIN command returns the input voltage value (V) in linear format.

## Table 62. Register 0x88—READ\_VIN

Bits	Bit Name/Function	R/W	Description
[15:11]	Exponent	R	5-bit twos complement N value for linear format $X = Y \times 2^{N}$ .
[10:0]	Mantissa	R	11-bit twos complement Y value for linear format $X = Y \times 2^{N}$ .

## READ\_IIN

The READ\_IIN command returns the input current value (A) in linear format.

## Table 63. Register 0x89—READ\_IIN

Bits	Bit Name/Function	R/W	Description
[15:11]	Exponent	R	5-bit twos complement N value for linear format $X = Y \times 2^{N}$ .
[10:0]	Mantissa	R	11-bit twos complement Y value for linear format $X = Y \times 2^N$ .

#### **READ VOUT**

The READ\_VOUT command returns the output voltage value (V) in linear format.

## Table 64. Register 0x8B—READ\_VOUT

Bits	Bit Name/Function	R/W	Description
[15:0]	Mantissa	R	16-bit unsigned integer Y value for linear format $X = Y \times 2^{N}$ .
			N is defined in the VOUT_MODE command.

## **READ\_IOUT**

The READ\_IOUT command returns the output current value (A) in linear format.

## Table 65. Register 0x8C—READ\_IOUT

Bits	Bit Name/Function	R/W	Description
[15:11]	Exponent	R	5-bit twos complement N value for linear format $X = Y \times 2^{N}$ .
[10:0]	Mantissa	R	11-bit twos complement Y value for linear format $X = Y \times 2^{N}$ .

#### READ\_TEMPERATURE

The READ\_TEMPERATURE command returns the temperature value (in °C) in linear format.

## Table 66. Register 0x8D—READ\_TEMPERATURE

Bits	Bit Name/Function	R/W	Description
[15:11]	Exponent	R	5-bit N value for linear format $X = Y \times 2^N$ .
			5-bit twos complement fixed at 00000.
[10:0]	Mantissa	R	11-bit twos complement Y value for linear format $X = Y \times 2^{\mathbb{N}}$ .

## READ\_DUTY\_CYCLE

The READ\_DUTY\_CYCLE command returns the duty cycle of the PWM output value in linear format.

#### Table 67. Register 0x94—READ\_DUTY\_CYCLE

Bits	Bit Name/Function	R/W	Description
[15:11]	Exponent	R	5-bit N value for linear format $X = Y \times 2^N$ .
			5-bit twos complement fixed at 10110 (–10 decimal).
[10:0]	Mantissa	R	11-bit twos complement Y value for linear format $X = Y \times 2^{\mathbb{N}}$ .

#### **READ\_FREQUENCY**

The READ\_FREQUENCY command returns the switching frequency value in linear format.

## Table 68. Register 0x95—READ\_FREQUENCY

Bits	Bit Name/Function	R/W	Description
[15:11]	Exponent	R	5-bit twos complement N value for linear format $X = Y \times 2^{N}$ .
[10:0]	Mantissa	R	11-bit twos complement Y value for linear format $X = Y \times 2^{N}$ .

## READ\_PMBUS\_REVISION

The READ\_PMBUS\_REVISION command returns the PMBus version information. The ADP1051 supports PMBus Revision 1.2. Reading of this command results in a value of 0x22.

## Table 69. Register 0x98—READ\_PMBUS\_REVISION

Bits	Bit Name/Function	R/W	Description
[7:4]	Part1 revision	R	Compliant to PMBus specifications, part 1: 0010 = Revision 1.2.
[3:0]	Part2 revision	R	Compliant to PMBus specifications, part 2: 0010 = Revision 1.2.

## MFR\_ID

## Table 70. Register 0x99—MFR\_ID

Bits	Bit Name/Function	R/W	Description
[7:0]	MFR_ID	R/W	Reads/writes the ID information of the manufacturer, which can be saved in the EEPROM.

## MFR\_MODEL

## Table 71. Register 0x9A—MFR\_MODEL

Bit	Bit Name/Function	R/W	Description
[7:0]	MFR_MODEL	R/W	Reads/writes the model information of the manufacturer, which can be saved in the EEPROM.

## MFR\_REVISION

## Table 72. Register 0x9B—MFR\_REVISION

Bit	Bit Name/Function	R/W	Description
[7:0]	MFR_REVISION	R/W	Reads/writes the revision information of the manufacturer, which can be saved in the EEPROM.

## IC\_DEVICE\_ID

## Table 73. Register 0xAD—IC\_DEVICE\_ID

Bit	Bit Name/Function	R/W	Description
[15:0]	IC_DEVICE_ID	R	Reads the IC device ID (default value = 0x4151).

## IC\_DEVICE\_REV

## Table 74. Register 0xAE—IC\_DEVICE\_REV

Bits	Bit Name/Function	R/W	Description
[7:0]	IC_DEVICE_REV	R	Reads the IC revision information. The value is 0x20 in the current silicon.

## EEPROM\_DATA\_00

## Table 75. Register 0xB0—EEPROM\_DATA\_00

Bits	Bit Name/Function	R/W	Description
[7:0]	EEPROM_DATA_00	R block	Block read data from Page 0 of the EEPROM main block. The EEPROM must first be unlocked.

## EEPROM\_DATA\_01

## Table 76. Register 0xB1—EEPROM\_DATA\_01

Bits	Bit Name/Function	R/W	Description
[7:0]	EEPROM_DATA_01	R block	Block read data from Page 1 of the EEPROM main block. The EEPROM must first be unlocked.

## EEPROM\_DATA\_02

## Table 77. Register 0xB2—EEPROM\_DATA\_02

Bits	Bit Name/Function	R/W	Description
[7:0]	EEPROM_DATA_02	R/W block	Block read/write data of Page 2 of the EEPROM main block. The EEPROM must first be unlocked. This page is not recommended for other use.

# EEPROM\_DATA\_03

## Table 78. Register 0xB3—EEPROM\_DATA\_03

Bits	Bit Name/Function	R/W	Description
[7:0]	EEPROM_DATA_03	R/W block	Block read/write data of Page 3 of the EEPROM main block. The EEPROM must first be unlocked. This page is reserved for storing power board parameter data for GUI use.

## EEPROM\_DATA\_04

# Table 79. Register 0xB4—EEPROM\_DATA\_04

Bits	Bit Name/Function	R/W	Description
[7:0]	EEPROM_DATA_04	R/W block	Block read/write data of Page 4 of the EEPROM main block. The EEPROM must first be unlocked.

## EEPROM\_DATA\_05

## Table 80. Register 0xB5—EEPROM\_DATA\_05

Bits	Bit Name/Function	R/W	Description
[7:0]	EEPROM_DATA_05	R/W block	Block read/write data of Page 5 of the EEPROM main block. The EEPROM must first be unlocked.

## EEPROM\_DATA\_06

## Table 81. Register 0xB6—EEPROM\_DATA\_06

Bits	Bit Name/Function	R/W	Description
[7:0]	EEPROM_DATA_06	R/W block	Block read/write data of Page 6 of the EEPROM main block. The EEPROM must first be unlocked.

## EEPROM\_DATA\_07

## Table 82. Register 0xB7—EEPROM\_DATA\_07

Bits	Bit Name/Function	R/W	Description
[7:0]	EEPROM_DATA_07	R/W block	Block read/write data of Page 7 of the EEPROM main block. The EEPROM must first be unlocked.

#### EEPROM\_DATA\_08

## Table 83. Register 0xB8—EEPROM\_DATA\_08

Bits	Bit Name/Function	R/W	Description
[7:0]	EEPROM_DATA_08	R/W block	Block read/write data of Page 8 of the EEPROM main block. The EEPROM must first be unlocked.

#### EEPROM\_DATA\_09

## Table 84. Register 0xB9—EEPROM\_DATA\_09

Bits	Bit Name/Function	R/W	Description
[7:0]	EEPROM_DATA_09	R/W block	Block read/write data of Page 9 of the EEPROM main block. The EEPROM must first be unlocked.

#### EEPROM\_DATA\_10

## Table 85. Register 0xBA—EEPROM\_DATA\_10

Bits	Bit Name/Function	R/W	Description
[7:0]	EEPROM_DATA_10	R/W block	Block read/write data of Page 10 of the EEPROM main block. The EEPROM must first be unlocked.

## EEPROM\_DATA\_11

## Table 86. Register 0xBB—EEPROM\_DATA\_11

Bits	Bit Name/Function	R/W	Description
[7:0]	EEPROM_DATA_11	R/W block	Block read/write data of Page 11 of the EEPROM main block. The EEPROM must first be unlocked.

## EEPROM\_DATA\_12

#### Table 87. Register 0xBC—EEPROM\_DATA\_12

			_
Bits	Bit Name/Function	R/W	Description
[7:0]	EEPROM_DATA_12	R/W block	Block read/write data of Page 12 of the EEPROM main block. The EEPROM must first be unlocked.

## EEPROM\_DATA\_13

## Table 88. Register 0xBD—EEPROM\_DATA\_13

Bits	Bit Name/Function	R/W	Description
[7:0]	EEPROM_DATA_13	R/W block	Block read/write data of Page 13 of the EEPROM main block. The EEPROM must first be unlocked.

## EEPROM\_DATA\_14

## Table 89. Register 0xBE—EEPROM\_DATA\_14

Bits	Bit Name/Function	R/W	Description
[7:0]	EEPROM_DATA_14	R/W block	Block read/write data of Page 14 of the EEPROM main block. The EEPROM must first be unlocked.

## EEPROM\_DATA\_15

#### Table 90. Register 0xBF—EEPROM\_DATA\_15

Bits	Bit Name/Function	R/W	Description
[7:0]	EEPROM_DATA_15	R/W block	Block read/write data of Page 15 of the EEPROM main block. The EEPROM must first be unlocked.

# EEPROM\_CRC\_CHKSUM

## Table 91. Register 0xD1—EEPROM\_CRC\_CHKSUM

Bits	Bit Name/Function	R/W	Description
[7:0]	CRC checksum	R	Returns the CRC checksum value from the EEPROM download operation.

## EEPROM\_NUM\_RD\_BYTES

# Table 92. Register 0xD2—EEPROM\_NUM\_RD\_BYTES

Bits	Bit Name/Function	R/W	Description
[7:0]	Number of read bytes	R/W	These bits set the number of read bytes that are returned when the EEPROM_DATA_xx
	returned		commands are used.

## EEPROM\_ADDR\_OFFSET

#### Table 93. Register 0xD3—EEPROM ADDR OFFSET

В	its	Bit Name/Function	R/W	Description
[1	5:0]	Address offset	R/W	These bits set the address offset of the current EEPROM page.

## EEPROM\_PAGE\_ERASE

## Table 94. Register 0xD4—EEPROM\_PAGE\_ERASE

Bits	Bit Name/Function	R/W	Description
[7:0]	EEPROM page erase	W	Perform a page erase on the selected EEPROM page (Page 3 to Page 15). Wait 35 ms after each page erase operation. The EEPROM must first be unlocked.
			Page 0 and Page 1 are reserved for storing the default settings and user settings, respectively. The user cannot perform a page erase of Page 0 or Page 1.
			Page 2 is reserved for internal use; do not erase the contents of Page 2.
			Page 3 is reserved for storing the board parameters for GUI use; erase Page 3 before storing the board parameters.
			The following list shows the register setting used to access each page:
			0x03 = Page 3.
			0x04 = Page 4.
			0x05 = Page 5.
			0x06 = Page 6.
			0x07 = Page 7.
			0x08 = Page 8.
			0x09 = Page 9.
			0x0A = Page 10.
			0x0B = Page 11.
			0x0C = Page 12.
			0x0D = Page 13.
			0x0E = Page 14.
			0x0F = Page 15.

## EEPROM\_PASSWORD

## Table 95. Register 0xD5—EEPROM\_PASSWORD

Bits	Bit Name/Function	R/W	Description
[7:0]	EEPROM password	W	Writes the password using this command to unlock the EEPROM for read/write access. Writes the EEPROM password two consecutive times to unlock the EEPROM. Writes any other value to exit. The factory default password is 0xFF.

## TRIM\_PASSWORD

## Table 96. Register 0xD6—TRIM\_PASSWORD

Bits	Bit Name/Function	R/W	Description
[7:0]	Trim password	W	Writes the password using this command to unlock the trim registers for write access. Writes the trim password two consecutive times to unlock the registers. Writes any other value to exit. The trim password is the same as the EEPROM password. The factory default password is 0xFF.

#### CHIP\_PASSWORD

## Table 97. Register 0xD7—CHIP\_PASSWORD

Bits	Bit Name/Function	R/W	Description
[15:0]	Chip password	W	Writes the correct chip password two consecutive times to unlock the chip registers for read/write access. Writes any other value to exit. The factory default password is 0xFFFF. This register cannot be read. Any read action on this register returns 0.

## VIN\_SCALE\_MONITOR

The VIN\_SCALE\_MONITOR command is the scale factor between the  $V_{\rm IN}$  ADC value and the real input voltage. It is typically used with the READ\_VIN command. The value must be in the range of 0 to 1 decimal.

## Table 98. Register 0xD8—VIN\_SCALE\_MONITOR

Bits	Bit Name/Function	R/W	Description
[15:11]	Exponent	R/W	5-bit twos complement N value for linear format $X = Y \times 2^{N}$ .
			N should be in the range of –12 to 0 decimal.
[10:0]	Mantissa	R/W	11-bit twos complement Y value for linear format $X = Y \times 2^{N}$ .

#### IIN\_SCALE\_MONITOR

The IIN\_SCALE\_MONITOR command is the scale factor between the  $I_{IN}$  ADC value and the real input current. It is typically used with the READ\_IIN command. The value must be in the range of 0 to 1 decimal.

#### Table 99. Register 0xD9—IIN\_SCALE\_MONITOR

Bits	Bit Name/Function	R/W	Description
[15:11]	Exponent	R/W	5-bit twos complement N value for linear mode format $X = Y \times 2^{N}$ .
			N should be in the range of –12 to 0 decimal.
[10:0]	Mantissa	R/W	11-bit twos complement Y value for linear mode format $X = Y \times 2^{N}$ .

#### **EEPROM INFO**

Register 0xF1 is a read/write block. The EEPROM\_INFO command reads the first flag data from the EEPROM.

## Table 100. Register 0xF1—EEPROM\_INFO

Bits	Bit Name/Function	R/W	Description	
[7:0]	EEPROM_INFO	R block	Block read data of the EEPROM information block.	

#### MFR SPECIFIC 1

## Table 101. Register 0xFA-MFR\_SPECIFIC\_1

Bits	Bit Name/Function	R/W	Description
[7:0]	Customized register	R/W	These bits are available to the user to store customized information.
			This register also stores the CS2 high-side mode factory analog trim value. Copy this value to Register 0xFE17 to restore the CS2 high-side mode factory trim value.

#### MFR\_SPECIFIC\_2

## Table 102. Register 0xFB—MFR\_SPECIFIC\_2

Bits	Bit Name/Function	R/W	Description
[7:0]	Customized register	R/W	These bits are available to the user to store customized information.
			This register also stores the CS2 high-side mode factory digital offset trim value. Copy this value to Register 0xFE16 to restore the CS2 high-side mode factory trim value.

# MANUFACTURER SPECIFIC EXTENDED COMMANDS DESCRIPTIONS FLAG CONFIGURATION REGISTERS

Register 0xFE00 to Register 0xFE03 are used to set the fault flag response and the resolution after the flag is cleared. Register 0xFE05[5:4] sets the VDD\_OV flag response. Register 0xFE05[7:6] sets the global flag reenable delay time.

Table 103. Register 0xFE00 to Register 0xFE05—Flag Response Registers

Register	Bits	Flag	Additional Settings
0xFE00	[7:4]	Reserved	Reserved
0xFE00	[3:0]	IIN_OC_FAST_FAULT_RESPONSE	Register 0xFE08, Register 0xFE0E, Register 0xFE1A, Register 0xFE1F, Register 0xFEA0, Register 0xFEA3
0xFE01	[7:4]	Extended VOUT_OV_FAULT_RESPONSE	Register 0x40, Register 0x41, Register 0xFE26, Register 0xFE6B, Register 0xFE6C
0xFE01	[3:0]	CS3_OC_FAULT_RESPONSE	Register 0xFE6A, Register 0xFEA0, Register 0xFEA3
0xFE02	[7:4]	VIN_UV_FAULT_RESPONSE	Register 0x35, Register 0x36, Register 0xFE29, Register 0xFEA1, Register 0xFEA4
0xFE02	[3:0]	Reserved	Reserved
0xFE03	[7:4]	SR_RC_FAULT_RESPONSE	Register 0xFE1A, Register 0xFEA1, Register 0xFEA4
0xFE03	[3:0]	FLAGIN_RESPONSE	Register 0xFE12, Register 0xFEA1, Register 0xFEA4
0xFE05	[5:4]	VDD_OV_RESPONSE	Register 0xFE05, Register 0xFEA0, Register 0xFEA3
0xFE05	[3:0]	Reserved	Reserved

Table 104. Register 0xFE00 to Register 0xFE02—Flag Response Register Bit Descriptions

Bits	Bit Name/Function	R/W	Descrip	tion	
[7:6]	Fault response	R/W	These bi	ts specify the	action when the flag is set.
			Bit 7	Bit 6	Flag Action
			0	0	Continues operation without interruption.
			0	1	Disables SR1 and SR2.
			1	0	Disables all PWM outputs.
			1	1	Reserved.
[5:4]	Action after flag	R/W	These bi	ts specify the	action when the flag is cleared.
	is cleared		Bit 5	Bit 4	Action After Flag Clearing
			0	0	After the reenable delay time, the PWM outputs are reenabled with a soft start.
			0	1	The PWM outputs are reenabled immediately without a soft start.
			1	0	A PSON signal, through Register 0x01, Register 0x02, and/or the CTRL pin, is needed to reenable the PWM outputs.
			1	1	Reserved.
[3:2]	Fault response	R/W	These bi	ts specify the	action when the flag is set.
			Bit 3	Bit 2	Flag Action
			0	0	Continues operation without interruption.
			0	1	Disables SR1 and SR2.
			1	0	Disables all PWM outputs.
			1	1	Reserved.
[1:0]	Action after flag	R/W	These bi	ts specify the	action when the flag is cleared.
	is cleared		Bit 1	Bit 0	Action After Flag Clearing
			0	0	After the reenable delay time, the PWM outputs are reenabled with a soft start.
			0	1	The PWM outputs are reenabled immediately without a soft start.
			1	0	A PSON signal, through Register 0x01, Register 0x02, and/or the CTRL pin, is needed to reenable the PWM outputs.
			1	1	Reserved.

Table 105. Register 0xFE03—Flag Response Register Bit Descriptions

Bits	Bit Name/Function	R/W	Descri	Description				
[7:6]	Fault response	R/W	These	oits spec	ify the action when the flag is set.			
			Bit 7	Bit 6	Fault Response			
			0 Continues operation without interruption.					
			0	1	Disables SR1 and SR2.			
			1	0	Disables all PWM outputs.			
			1	1	The rising edges of SR1 and SR2 move to $t_{\mbox{\scriptsize Rx}}$ See the SR Reverse Current Protection section			
[5:4]	Action after the fault	R/W	These					
	flag is cleared		Bit 5	Bit 4	Bits[7:6] = 01 or 10	Bits [7:6] = 11		
			0	0	After the flag reenable delay time, the PWM outputs are reenabled with a soft start.	SR1 and SR2 follow the soft recovery process.		
			0	1	The PWM outputs are reenabled immediately without a soft start.	SR1 and SR2 immediately recover to normal condition.		
			1	0	A PSON signal is needed to reenable the PWM outputs.	Reserved.		
			1	1	Reserved.	Reserved.		
[3:2]	Fault response	R/W	These	oits spec	ify the action when the flag is set.	•		
			Bit 3	Bit 2	Fault Response			
			0	0	Continues operation without interruption.	ion without interruption.		
			0	1	Disable SR1 and SR2.			
			1	0	Disable all PWM outputs.			
			1	1	Reserved.			
[1:0]	Action after the fault	R/W	These	oits spec	ify the action when the flag is cleared.			
	flag is cleared		Bit 1	Bit 0 Action After Fault Flag Clears				
			0	0 After the flag reenable delay time, the PWM outputs are reenabled with a soft star		outputs are reenabled with a soft start.		
			0 1 The PWM outputs are reenabled immediately without a soft start.		ly without a soft start.			
			1	0	A PSON signal, programmed in Register 0x0 needed to reenable the PWM outputs.	1, Register 0x02, and/or the CTRL pin, is		
			1	1	Reserved.			

# $Table~106.~Register~0xFE05-Flag~Reenable~Delay, VDD\_OV\_RESPONSE$

Bits	Bit Name/Function	R/W	Descri	ption				
[7:6]	Flag reenable delay	R/W	These bits specify the global delay from the time when a manufacturer specific flag is cleared to the soft start.					
			Bit 7 Bit 6 Typical Delay Time (sec)					
			0	0	250 m			
			0	1	500 m			
			1	0	1			
			1	1	2			
5	VDD_OV flag ignore	R/W	This bit enables or disables the VDD_OV flag.					
			$0 = VDD_OV$ flag is set when there is a $V_{DD}$ overvoltage condition. When there is a $V_{DD}$ overvoltage condition, the flag is set and the part shuts down. When the $V_{DD}$ overvoltage condition ends, the flag is cleared and the part downloads the EEPROM contents before restarting with a soft start process. $1 = VDD_OV$ flag is always cleared. When there is a $V_{DD}$ overvoltage condition, the flag is always cleared and the part continues to operate without interruption.					
4	VDD_OV flag	R/W	This bi	t sets the	e debounce time for the VDD_OV flag.			
	debounce		$0 = 500 \mu s$ debounce time.					
		$1 = 2 \mu s$ debounce time.						
[3:0]	Reserved	R/W	Reserv	ed.				

## **SOFT START AND SOFTWARE RESET REGISTERS**

Table 107. Register 0xFE06—Software Reset GO Command

Bits	Bit Name/Function	R/W	Description	
[7:1]	Reserved	R/W	Reserved.	
0	Software reset GO	W	This bit allows the user to perform a software reset of the ADP1051. Setting this bit resets the part with a restart delay period from the time the ADP1051 is turned off to the time ADP1051 restarts. The restart delay is set using Register 0xFE07[1:0].	

## Table 108. Register 0xFE07—Software Reset Settings

Bits	Bit Name/Function	R/W	Description	n					
[7:3]	Reserved	R/W	Reserved.	Reserved.					
2	Additional flag reenable delay	R/W	This bit specifies whether an additional TON_DELAY value is added to the reenable delay after a manufacturer specific flag is cleared and before the ADP1051 begins a soft start.  0 = no additional delay is added to the reenable delay.  1 = additional delay is added to the reenable delay. The delay time is specified in the TON_DELAY command (Register 0x60).						
[1:0]	Restart delay	R/W	These bits specify the delay from the time when a PSON signal is set to the time when the soft start begins.						
			Bit 1	Bit 0	Restart Delay (sec)				
			0	0	0 m				
			0	1	500 m				
			1	0	1				
			1	1	2				

# Table 109. Register 0xFE08—Synchronous Rectifier (SR) Soft Start Settings

Bits	Bit Name/Function	R/W	Description	Description				
7	Reserved	R/W	Reserved.	Reserved.				
6	CS1 cycle-by-cycle current limit to disable SR2	R/W		Setting this bit enables the CS1 cycle-by-cycle current limit to disable the SR2 output for the remainder of the switching cycle when cycle-by-cycle current limiting occurs.				
5	CS1 cycle-by-cycle current limit to disable SR1	R/W		Setting this bit enables the CS1 cycle-by-cycle current limit to disable the SR1 output for the remainder of the switching cycle when cycle-by-cycle current limiting occurs.				
4	SR soft start setting	R/W	0 = the syr	0 = the synchronous rectifiers perform a soft start only the first time that they are enabled.				
			1 = the synchronous rectifiers perform a soft start every time that they are enabled.					
[3:2]	SR soft start speed	R/W	When an SR PWM output is configured to turn on with soft start (using Bits [1:0]), the rising edge of the output moves to the left in steps of 40 ns. These bits specify the number of switching cycles that are required to move the SR PWM output in a step of 40 ns.					
			Bit 3	Bit 2	SR Soft Start Timing			
			0	0	The SR PWM outputs change 40 ns in one switching cycle.			
			0	1	The SR PWM outputs change 40 ns in four switching cycles.			
			1	0	The SR PWM outputs change 40 ns in 16 switching cycles.			
			1	1	The SR PWM outputs change 40 ns in 64 switching cycles.			
1	SR2 soft start	R/W	Setting this bit enables soft start for SR2.					
0	SR1 soft start	R/W	Setting thi	s bit enables	soft start for SR1.			

Table 110. Register 0xFE09—Soft Start Setting of Open-Loop Operation

Bits	Bit Name/Function	R/W	Descrip	otion			
7	Open-loop operation soft start enable	R/W	Setting	Setting this bit enables the soft start of open-loop operation.			
6	OUTA, OUTB, OUTC, and OUTD edges	R/W		When this bit is set, the falling edges of OUTA, OUTB, OUTC, and OUTD are always after the rising edges in one cycle during the soft start of open-loop operation.			
5	SR1 and SR2 edges	R/W	R/W This bit is valid only when Bit 7 of this register is set to 1.				
			0 = the a soft st		les of SR1 and SR2 always occur after the falling edges in one cycle during		
				1 = the falling edges of SR1 and SR2 always occur after the rising edges in one cy a soft start.			
[4:3]	Soft start speed of open-loop operation and open-loop feedforward operation	R/W	R/W When the ADP1051 is configured for open-loop operation, the falling edge of the output moves to the right in steps of 40 ns. When the ADP1051 is configured for a loop feedforward operation, the modulation edge of the PWM output moves from original position in steps of 40 ns. These bits specify how many switching cycles a required to move the PWM outputs in 40 ns.				
			Bit 4	Bit 3	Open-Loop Soft Start Timing		
			0	0	The PWM outputs change 40 ns in one switching cycle		
			0	1	The PWM outputs change 40 ns in four switching cycles		
			1	0	The PWM outputs change 40 ns in 16 switching cycles		
			1	1	The PWM outputs change 40 ns in 64 switching cycles		
2			this bit en	nables global variation during the soft start of open-loop operation.			
			$1 = \text{all outputs use the time variation calculated by OUTB } (t_{F2} - t_{R2}).$				
[1:0]	Reserved	R/W	Reserve	ed.			

# **BLANKING AND PGOOD SETTING REGISTERS**

Table 111. Register 0xFE0B—Flag Blanking During Soft Start

Bits	Bit Name/Function	R/W	Description
7	Blank SR_RC_FAULT flag	R/W	0 = blank this flag during soft start.
			1 = do not blank this flag during soft start.
6	Blank FLAGIN flag	R/W	0 = blank this flag during soft start.
			1 = do not blank this flag during soft start.
5	Blank LIGHT_LOAD flag and	R/W	0 = blank this flag during soft start.
	DEEP_LIGHT_LOAD flag		1 = do not blank this flag during soft start.
4	Blank VIN_UV_FAULT flag	R/W	0 = blank this flag during soft start.
			1 = do not blank this flag during soft start.
3	Blank IIN_OC_FAST_FAULT	R/W	0 = blank this flag during soft start.
	flag		1 = do not blank this flag during soft start.
2	Blank IOUT_OC_FAULT flag	R/W	0 = blank this flag during soft start.
			1 = do not blank this flag during soft start.
1	Blank CS3_OC_FAULT flag	R/W	0 = blank this flag during soft start.
			1 = do not blank this flag during soft start.
0	Blank VOUT_OV_FAULT flag	R/W	0 = blank this flag during soft start.
			1 = do not blank this flag during soft start.

Table 112. Register 0xFE0C—Volt-Second Balance Blanking and SR Disable During Soft Start

Bits	Bit Name/Function	R/W	Description
[7:5]	Reserved	R/W	Reserved.
4	VIN_UV_FAULT reenable blank	R/W	0 = VIN_UV_FAULT flag is not blanked during the flag reenable delay. This is the recommended setting if the input voltage signal can be sensed by the ADP1051 before the PSU starts to operate.
			1 = VIN_UV_FAULT flag is blanked during the flag reenable delay.
3	First flag ID update	R/W	This bit specifies whether the first flag ID is saved in the EEPROM. If it is set, the first flag ID is saved in the EEPROM. During the $V_{DD}$ power reset, the first flag ID is downloaded from the EEPROM to Register 0xFEA6.
			0 = the first flag ID is not saved in the EEPROM.
			1 = the first flag ID is saved in the EEPROM.
2	Flag shutdown timing	R/W	Specifies when the PWM outputs are shut down after a manufacturer specific flag is triggered.
			0 = the PWM outputs are shut down at the end of the switching cycle.
			1 = the PWM outputs are shut down immediately.
1	Volt-second balance blanking	R/W	0 = the volt-second balance control is not blanked during soft start.
			1 = the volt-second balance control is blanked during soft start.
0	SR disable	R/W	0 = SR1 and SR2 are not disabled during soft start.
			1 = SR1 and SR2 are disabled during soft start.

# Table 113. Register 0xFE0D—PGOOD Mask Settings

Bits	Bit Name/Function	R/W	Description
7	VIN_UV_FAULT flag	R/W	1 = the VIN_UV_FAULT flag is ignored by PGOOD.
6	IIN_OC_FAST_FAULT flag	R/W	1 = the IIN_OC_FAST_FAULT flag is ignored by PGOOD.
5	IOUT_OC_FAULT flag	R/W	1 = the IOUT_OC_FAULT flag is ignored by PGOOD.
4	VOUT_OV_FAULT flag	R/W	1 = the VOUT_OV_FAULT flag is ignored by PGOOD.
3	VOUT_UV_FAULT flag	R/W	1 = the VOUT_UV_FAULT flag is ignored by PGOOD.
2	OT_FAULT flag	R/W	1 = the OT_FAULT flag is ignored by PGOOD.
1	OT_WARNING flag	R/W	1 = the OT_WARNING flag is ignored by PGOOD.
0	SR_RC_FAULT flag	R/W	1 = the SR_RC_FAULT flag is ignored by PGOOD.

# Table 114. Register 0xFE0E—PGOOD Flag Debounce

Bits	Bit Name/Function	R/W	Description		
7	CS1 cycle-by-cycle current limit to disable OUTD	R/W	Setting this bit enables the CS1 cycle-by-cycle current limit to disable the OUTD output for the remainder of the switching cycle when cycle-by-cycle current limiting occurs.		
6	CS1 cycle-by-cycle current limit to disable OUTC	R/W	Setting this bit enables the CS1 cycle-by-cycle current limit to disable the OUTC output for the remainder of the switching cycle when cycle-by-cycle current limiting occurs.		
5	CS1 cycle-by-cycle current limit to disable OUTB	R/W			the CS1 cycle-by-cycle current limit to disable the OUTB output for the ching cycle when cycle-by-cycle current limiting occurs.
4	CS1 cycle-by-cycle current limit to disable OUTA	R/W			s the CS1 cycle-by-cycle current limit to disable the OUTA output for the ching cycle when cycle-by-cycle current limiting occurs.
[3:2]	PGOOD flag clearing debounce				PGOOD flag clearing debounce, which is the time from when the PGOOD net to the time when the PGOOD flag is cleared.
			Bit 3	Bit 2	PGOOD Flag Setting Debounce (ms)
			0	0	0
			0	1	200
			1	0	320
			1	1	600
[1:0]	PGOOD flag setting debounce	R/W		•	PGOOD flag setting debounce, which is the time from when the PGOOD et to the time when the PGOOD flag is set.
			Bit 1	Bit 0	PGOOD Flag Clearing Debounce (ms)
			0	0	0
			0	1	200
			1	0	320
			1	1	600

Table 115. Register 0xFE0F—Debounce Time for Asserting PGOOD

Bits	Bit Name/Function	R/W	Debounce Time (ms)
7	VIN_UV_FAULT to assert PGOOD	R/W	0 = 0
			1 = 1.3
6	IIN_OC_FAST_FAULT to assert PGOOD	R/W	0 = 0
			1 = 1.3
5	IOUT_OC_FAULT to assert PGOOD	R/W	0 = 0
			1 = 1.3
4	VOUT_OV_FAULT to assert PGOOD	R/W	0 = 0
			1 = 1.3
3	VOUT_UV_FAULT to assert PGOOD	R/W	0 = 0
			1 = 1.3
2	OT_FAULT to assert PGOOD	R/W	0 = 0
			1 = 1.3
1	OT_WARNING to assert PGOOD	R/W	0 = 0
			1 = 1.3
0	SR_RC_FAULT to assert PGOOD	R/W	0 = 0
			1 = 1.3

# **SWITCHING FREQUENCY AND SYNCHRONIZATION REGISTERS**

When synchronization is enabled, the ADP1051 takes the SYNI signal and adds the tsync\_delay, together with a 760 ns propagation delay, to generate the internal synchronization reference clock as shown in Figure 65. The ADP1051 uses the reference clock to generate its own clock.




Figure 65. Synchronization Timing

Table 116. Register 0xFE11—Synchronization Delay Time

Bits	Bit Name/Function	R/W	Description
[7:0]	t <sub>SYNC_DELAY</sub>	R/W	Sets the additional delay of the synchronization reference clock to the rising edge of the SYNI pin signal. Each LSB size is 40 ns.
			Note that this delay time cannot exceed one switching period. If the PWM 180° phase shift is enabled, this delay time cannot exceed one-half of one switching period.

Table 117. Register 0xFE12—Synchronization General Settings

Bits	Bit Name/Function	R/W	Description
7	Reserved	R/W	Reserved.
6	Phase capture range for synchronization	R/W	Sets the phase capture range. The ADP1051 detects the phase shift between the external and internal clocks when synchronization function is enabled. When the phase shift falls within the range, synchronization starts.
			$0 = \text{phase capture range is } \pm 3.125\% \ (\pm 11.25^{\circ}).$
			$1 = \text{phase capture range is } \pm 6.25\% \text{ (} \pm 22.5^{\circ}\text{)}$ . This is the recommended setting.
5	OUTD used as SYNO	R/W	0 = OUTD is used as the PWM output.
			1 = OUTD is used as SYNO output.
4	OUTC used as SYNO	R/W	0 = OUTC is used as PWM output.
			1 = OUTC is used as SYNO output.
3	Enable synchronization	R/W	Setting this bit enables frequency synchronization as a slave device. The ADP1051 synchronizes with the external clock through the SYNI/FLGI pin. Bit 0 = 0 if synchronization is enabled.
2	FLGI polarity	R/W	Sets the polarity for the SYNI/FLGI pin when the pin is programmed as FLGI.
			0 = a high logic level on the FLGI pin sets the FLAGIN flag; a low logic level clears the FLAGIN flag.
			1 = a low logic level on the FLGI pin sets the FLAGIN flag; a high logic level sets the FLAGIN flag.

Bits	Bit Name/Function	R/W	Description
1	FLAGIN flag	R/W	0 = 0 µs debounce time for the FLAGIN flag.
	debounce time		$1 = 100 \mu s$ debounce time for the FLAGIN flag.
0	SYNI/FLGI pin function selection	R/W	Configures the SYNI/FLGI pin as a flag input or a synchronization input. When SYNI is not enabled, this bit must be set to 1.  0 = the SYNI/FLGI pin is used as the synchronization input (SYNI).
			1 = the SYNI/FLGI pin is used as the flag input (FLGI).

# Table 118. Register 0xFE13—Dual-Ended Topology Mode

Bits	Bit Name/Function	R/W	Description
7	Reserved	R/W	Reserved.
6	Dual-ended topology enable	R/W	Setting this bit to 1 means that dual-ended topologies are used. It affects the modulation high limit. The modulation limit in each half cycle is one-half of the modulation limit that is programmed in Register 0xFE3C.
			0 = operates in single-ended topologies, such as buck, forward, and flyback. 1 = operates in dual-ended topologies, such as full bridge, half bridge, and push pull.
[5:0]	Reserved	R/W	Reserved.

## **CURRENT SENSE AND LIMIT SETTING REGISTERS**

## Table 119. Register 0xFE14—CS1 Gain Trim

Bits	Bit Name/Function	R/W	Description
7	Gain polarity	R/W	Setting this bit to 1 means that negative gain is introduced.
			0 = positive gain is introduced.
			1 = negative gain is introduced.
[6:0]	CS1 gain trim	R/W	This value calibrates the CS1 current sense gain. Apply 1 V dc at the CS1 pin. This register is trimmed until the CS1 value reads 2560 decimal (0xA00).

## Table 120. Register 0xFE15—CS2 Gain Trim

Bits	Bit Name/Function	R/W	Description
7	Gain polarity	R/W	Setting this bit to 1 means that negative gain is introduced.
			0 = positive gain is introduced.
			1 = negative gain is introduced
[6:0]	CS2 gain trim	R/W	This value calibrates the CS2 current sense gain.

# Table 121. Register 0xFE16—CS2 Digital Offset Trim

Bits	Bit Name/Function	R/W	Description
[7:0]	CS2 digital offset	R/W	This register contains CS2 digital offset trim value. The value is used to calibrate the CS2 value.
	trim		The default value is the factory trim value of CS2 low-side current mode. Copy the Register 0xFB value to this register to restore the factory trim value of CS2 high-side current sense mode.

# Table 122. Register 0xFE17—CS2 Analog Trim

Bits	Bit Name/Function	R/W	Description	
7	Reserved	R/W	Reserved.	
6	Analog trim polarity	R/W	Setting this bit to 1 means that negative trim is introduced. Setting this bit to 0 means that positi trim is introduced.	
			The default value is the factory trim value of CS2 low-side current sense mode. Copy the Register 0xFA[6] value to this bit to restore the factory trim value of CS2 high-side current sense mode.	
[5:0]	CS2 analog trim	R/W	The value calibrates the CS2 analog trim.	
			The default value is the factory trim value of CS2 low-side current mode. Copy the Register 0xFA[5:0] value to these bits to restore the factory trim value of CS2 high-side current mode.	

Table 123. Register 0xFE19—CS2 Light Load Threshold

Bits	Bit Name/Function	R/W	Descrip	otion								
7	CS2 current sense	R/W	0 = CS2	current s	ense is coi	nfigured as	low-side curren	it sense mode.		_		
	mode		1 = CS2	current s	ense is coi	nfigured as	high-side curre	nt sense mode.				
[6:5]	CS3_OC_FAULT flag	R/W	These t	wo bits se	t the CS3_	OC_FAULT	flag debounce	time.		_		
	debounce		Bit 6									
			0	0	0							
			0	1	10							
			1	0	20							
			1	1	200							
4	CS2 light load mode enable	R/W	Setting this bit enables the light load mode function. When the CS2 current falls below the CS2 load mode threshold, the ADP1051 operates in light load mode.						ow the CS2 light			
[3:0]	CS2 light load	R/W							do valuo This va	lue determines		
[3.0]	threshold	11/ VV						steresis and the				
	times.ioid					0xFE1E[5:2]		310.03.3 0.10 1.10	areiagiiig spec			
								Light Load T	hreshold (mV)	)		
			Bit 3	Bit 2	Bit 1	Bit 0	328 μs	164 μs	82 μs	41 μs		
			0	0	0	0	0	0	0	0		
			0	0	0	1	0.9375	1.8750	3.7500	7.5000		
			0	0	1	0	1.8750	3.7500	7.5000	15.000		
			0	0	1	1	2.8125	5.6250	11.250	22.500		
			0	1	0	0	3.7500	7.5000	15.000	30.000		
			0	1	0	1	4.6875	9.3750	18.750	37.500		
			0	1	1	0	5.6250	11.250	22.500	45.000		
			0	1	1	1	6.5625	13.125	26.250	52.500		
			1	0	0	0	7.5000	15.000	30.000	60.000		
			1	0	0	1	8.4375	16.875	33.750	67.500		
			1	0	1	0	9.3750	18.750	37.500	75.000		
			1	0	1	1	10.313	20.625	41.250	82.500		
			1	1	0	0	11.250	22.500	45.000	90.000		
			1	1	0	1	12.188	24.375	48.750	97.500		
			1	1	1	0	13.125	26.250	52.500	105.00		
			1	1	1	1	14.063	28.125	56.250	112.50		

Table 124. Register 0xFE1A—IIN\_OC\_FAST\_FAULT\_LIMIT and SR\_RC\_FAULT\_LIMIT

Bits | Bit Name/Function | R/W | Description

Bits	Bit Name/Function	R/W	Descrip	otion		
7	Reserved	R/W	Reserve	ed.		
[6:4]	IIN_OC_FAST_ FAULT_LIMIT	R/W	outputs switchir There is in conse If the CS If the CS IIN_OC_ Note th convert	that are o ng cycle. The an internate cutive sw 61_OCP fla 51_OCP fl. FAST_FAU at there is er. There a	n at that ti ne PWM ou al counter, itching cy g is not tri ag is not t JLT_LIMIT s one cycle	rrent-limit comparator is set and the CS1_OCP flag is triggered, all PWM me can be programmed to be immediately disabled for the remainder of the utputs resume normal operation at the beginning of the next switching cycle. N, with an initial value of 0. N counts the CS1_OCP flag triggering number cles. If the CS1_OCP flag is triggered in one cycle, then $N_{CURRENT} = N_{PREVIOUS} + 2$ . ggered in one cycle and the previous $N > 0$ , then $N_{CURRENT} = N_{PREVIOUS} - 1$ . riggered and the previous $N = 0$ , then $N_{CURRENT} = 0$ . When N reaches the value, the IIN_OC_FAST_FAULT flag is set. e in single-ended topologies, such as buck converter and forward cles in double-ended topologies, such as full bridge converter, half bridge niverter.
			Bit 6	Bit 5	Bit 4	Limit Value
			0	0	0	2
			0	0	1	8
			0	1	0	16
			0	1	1	64
			1	0	0	128
			1	0	1	256
			1	1	0	512
			1	1	1	1024

Bits	Bit Name/Function	R/W	Descrip	otion							
3	SR_RC_FAULT flag	R/W	This bit sets the debounce time for the SR_RC_FAULT flag.								
	debounce time		0 = 40  ns.								
			1 = 200	1 = 200 ns.							
[2:0]	SR_RC_FAULT_LIMIT	R/W	SR_RC_	These bits program the reference voltage for CS2 reverse current comparator for generating the SR_RC_FAULT flag. The difference in voltage between the CS2+ and CS2- pins is compared with this limit. This comparator is an analog comparator.							
			Bit 2	Bit 1	Bit 0	Value (mV)					
			0	0	0	-3					
			0	0	1	-6					
			0	1	0	<b>-9</b>					
			0	1	1	-12					
			1	0	0	<b>-15</b>					
			1	0	1	-18					
			1	1	0	<b>–21</b>					
			1	1	1	-24					

Table 125. Register 0xFE1B—CS2 Deep Light Load Mode Setting

Bits	Bit Name/Function	R/W	Descrip	otion						
7	Reserved	R/W	Reserve	d.						
6	CS1 cycle-by-cycle	R/W	0 = the	CS1 cycle	-by-cycle	current-li	mit reference i	s 1.2 V.		
	current-limit ref		1 = the	CS1 cycle	-by-cycle	current-li	mit reference i	s 0.25 V.		
5	Reserved	R/W	Reserve	d.						
4	CS2 averaging speed for triggering the IOUT_OC_FAULT	R/W	0 = the 9-bit CS2 (output current) averaging speed is used for triggering the IOUT_OC_FAUL The basic VS voltage change rate for constant current control is 1.18 mV/ms. 1 = the 7-bit CS2 (output current) averaging speed is used for triggering the IOUT_OC_FAUC The basic VS voltage change rate for constant current control is 4.72 mV/ms.							
	flag					·				
[3:0]	CS2 deep light load mode threshold	R/W	determi	nes the po	oint at whi	ch the DEI	ep_light_loai	enter the deep lig O flag is set and so mmed in Registe	ome PWM output er 0xFE1E.	ts are disabled.
								Deep Light Lo	ad Threshold (r	nV)
			Bit 3	Bit 2	Bit 1	Bit 0	328 µs	164 μs	82 μs	41 μs
			0	0	0	0	0	0	0	0
			0	0	0	1	0.9375	1.8750	3.7500	7.5000
			0	0	1	0	1.8750	3.7500	7.5000	15.000
			0	0	1	1	2.8125	5.6250	11.250	22.500
			0	1	0	0	3.7500	7.5000	15.000	30.000
			0	1	0	1	4.6875	9.3750	18.750	37.500
			0	1	1	0	5.6250	11.250	22.500	45.000
			0	1	1	1	6.5625	13.125	26.250	52.500
			1	0	0	0	7.5000	15.000	30.000	60.000
			1	0	0	1	8.4375	16.875	33.750	67.500
			1	0	1	0	9.3750	18.750	37.500	75.000
			1	0	1	1	10.313	20.625	41.250	82.500
			1	1	0	0	11.250	22.500	45.000	90.000
			1	1	0	1	12.188	24.375	48.750	97.500
			1	1	1	0	13.125	26.250	52.500	105.00
			1	1	1	1	14.063	28.125	56.250	112.50

Bits	Bit Name/Function	R/W	Description
[7:6]	Reserved	R/W	Reserved.
5	SR2 disable	R/W	Setting this bit disables the SR2 output when operating in deep light load mode.
4	SR1 disable	R/W	Setting this bit disables the SR1 output when operating in deep light load mode.
3	OUTD disable	R/W	Setting this bit disables the OUTD output when operating in deep light load mode.
2	OUTC disable	R/W	Setting this bit disables the OUTC output when operating in deep light load mode.
1	OUTB disable	R/W	Setting this bit disables the OUTB output when operating in deep light load mode.
0	OUTA disable	R/W	Setting this bit disables the OUTA output when operating in deep light load mode.

# Table 127. Register 0xFE1D—Matched Cycle-by-Cycle Current-Limit Settings

Bits	Bit Name/Function	R/W	Descrip	tion				
7	Reserved	R/W	Reserve	d.				
6	Enable matched cycle- by-cycle current limit	R/W	Setting this bit enables the matched cycle-by-cycle current-limit function.					
[5:4]	Select PWM output	R/W	These b	the PWM pairs for matched cycle-by-cycle current limiting.				
	pairs for matched		Bit 5	PWM Pairs				
	cycle-by-cycle current limit		0	0	OUTB and OUTD			
			0	1	OUTA and OUTC			
			1	0	OUTC and OUTD			
			1	1	OUTA and OUTB			
3	OUTD rising edge blanking	R/W			whether the blanking time for the CS1 cycle-by-cycle current-limit comparator is rising edge of OUTD.			
			0 = no b	lanking a	t the OUTD rising edge.			
			1 = blan	king time	referenced to the OUTD rising edge.			
2	OUTC rising edge blanking	R/W			whether the blanking time for the CS1 cycle-by-cycle current-limit comparator is rising edge of OUTC.			
			0 = no b	lanking a	t the OUTC rising edge.			
			1 = blan	king time	referenced to the OUTC rising edge.			
1	OUTB rising edge blanking	R/W			whether the blanking time for the CS1 cycle-by-cycle current-limit comparator is rising edge of OUTB.			
			0 = no b	lanking a	t the OUTB rising edge.			
			1 = blan	king time	referenced to the OUTB rising edge.			
0	OUTA rising edge blanking	R/W			whether the blanking time for the CS1 cycle-by-cycle current-limit comparator is rising edge of OUTA.			
			0 = no b	lanking a	t the OUTA rising edge.			
			1 = blan	king time	referenced to the OUTA rising edge.			

# Table 128. Register 0xFE1E—Light Load Mode and Deep Light Load Mode Settings

Bits	Bit Name/Function	R/W	Descrip	tion						
[7:6]	CS2 averaging speed for drooping control	R/W	These bits set the CS2 (output current) averaging speed and resolution used for the drooping control. Faster speed corresponds to lower resolution and, therefore, lowers accuracy of the drooping line.							
			Bit 7	Bit 6	Speed (µs)	Resolution (Bits)				
			0	0	82	7				
			0	1	164	8				
			1	0	328	9				
			1	1	656	10				
[5:4]	Light load mode and deep light load mode averaging speed	R/W	deep lig	ht load m	5 5 1	and resolution used for the light load mode threshold and aster speed corresponds to lower resolution and, therefore,				
			Bit 5	Bit 4	Speed (µs)	Resolution (Bits)				
			0	0	41	6				
			0	1	82	7				
			1	0	164	8				
			1	1	328	9				

Rev. A | Page 86 of 108

Bits	Bit Name/Function	R/W	Descrip	tion					
[3:2]	Light load mode and deep light load mode hysteresis	R/W	thresho	lds. The si	ze of the I	If hysteresis applied to the light load mode and deep light load mode LSB is affected by different speed and resolution selected in Bits[5:4]. Issed with 8-bit resolution, the LSB size is $120 \text{ mV}/2^8 = 469 \mu\text{V}$ .			
			Bit 3	Bit 2	Hystere	esis (LSB)			
			0	0	3				
			0	1	8				
			1	0	12				
			1	1	16				
1	SR2 response to cycle- by-cycle limit	R/W	output.\ when th	This bit is applicable only when the SR2 output is programmed to be in complement with the output. When this bit is set and there is a cycle-by-cycle current limit, the SR2 rising edge is turne when the cycle-by-cycle current limit disables the OUTA. Its falling edge still follows the programmed value.					
0	SR1 response to cycle-	R/W	This bit is applicable only when the SR1 output is programmed to be in complement with the OUTB output. When this bit is set, and there is a cycle-by-cycle current limit, the SR1 rising edge is turned on when the cycle-by-cycle current limit disables the OUTB. Its falling edge still follows the programmed value.						
	by-cycle limit		when th	e cycle-b	y-cycle cu				
Table		-CS1 Cv	when th progran	ne cycle-b nmed valu	y-cycle cu ue.	rrent limit disables the OUTB. Its falling edge still follows the			
Table Bits	e 129. Register 0xFE1F—	,	when the progran	ne cycle-b nmed valu cle Curre	y-cycle cu ue.	rrent limit disables the OUTB. Its falling edge still follows the			
		-CS1 Cyd R/W R/W	when the program cle-by-Cy  Descrip	ne cycle-b nmed valu cle Curre tion this bit ca	y-cycle cu ue. ent-Limit	rrent limit disables the OUTB. Its falling edge still follows the  Settings			
Bits	Bit Name/Function  CS1 cycle-by-cycle current-limit	R/W	when the program  cle-by-Cy  Descrip  Setting always of these be output in	cle Currection this bit ca cleared.  its determs signored	y-cycle cu ue. ent-Limit uses the ( nine the le	rrent limit disables the OUTB. Its falling edge still follows the			
Bits 7	E 129. Register 0xFE1F—  Bit Name/Function  CS1 cycle-by-cycle current-limit comparator ignored  Leading edge	R/W	when the program  cle-by-Cy  Descrip  Setting always of these be output in	cle Currection this bit ca cleared.  its determs signored	y-cycle cu ue. ent-Limit uses the ( nine the le	Settings  CS1 OCP comparator output to be ignored. The CS1_OCP internal flag is eading edge blanking time. During this time, the CS1 OCP comparator is measured from the rising edges of OUTA, OUTB, OUTC, and OUTD			
Bits 7	E 129. Register 0xFE1F—  Bit Name/Function  CS1 cycle-by-cycle current-limit comparator ignored  Leading edge	R/W	when the program cle-by-Cy Descrip Setting always of These be output if (program)	cle Currection this bit cacleared.  its determines ignored mmable in	y-cycle cu ue.  ent-Limit  uses the (  nine the le  This time n Register	Settings  CS1 OCP comparator output to be ignored. The CS1_OCP internal flag is eading edge blanking time. During this time, the CS1 OCP comparator is measured from the rising edges of OUTA, OUTB, OUTC, and OUTD OXFE1D[3:0]).			
Bits 7	E 129. Register 0xFE1F—  Bit Name/Function  CS1 cycle-by-cycle current-limit comparator ignored  Leading edge	R/W	when the program  cle-by-Cy  Descript  Setting always of the set output if (program  Bit 6	cle Curre tion this bit ca cleared. its determ s ignored mmable in	y-cycle cu ue.  ent-Limit  uses the (  nine the le  This time Register  Bit 4	Settings  CS1 OCP comparator output to be ignored. The CS1_OCP internal flag is eading edge blanking time. During this time, the CS1 OCP comparator is measured from the rising edges of OUTA, OUTB, OUTC, and OUTD 0xFE1D[3:0]).  Leading Edge Blanking Time (ns)			
Bits 7	E 129. Register 0xFE1F—  Bit Name/Function  CS1 cycle-by-cycle current-limit comparator ignored  Leading edge	R/W	when the program of t	cle Currection this bit cacleared.  its determs ignored mmable in  Bit 5	y-cycle cu ue.  ent-Limit  uses the G  nine the le . This time n Register  Bit 4  0	Settings  CS1 OCP comparator output to be ignored. The CS1_OCP internal flag is eading edge blanking time. During this time, the CS1 OCP comparator is measured from the rising edges of OUTA, OUTB, OUTC, and OUTD 0xFE1D[3:0]).  Leading Edge Blanking Time (ns)  0			
Bits 7	E 129. Register 0xFE1F—  Bit Name/Function  CS1 cycle-by-cycle current-limit comparator ignored  Leading edge	R/W	when the program  cle-by-Cy  Descrip  Setting always of the set output is (program  Bit 6  0  0	cle Currection this bit cacleared.  its determs ignored mmable in  Bit 5	y-cycle cu y-cycle cu y-cycle cu y-cycle cu y-cycle cu uses the G inner the le . This time n Register Bit 4 0 1	Settings  CS1 OCP comparator output to be ignored. The CS1_OCP internal flag is eading edge blanking time. During this time, the CS1 OCP comparator is measured from the rising edges of OUTA, OUTB, OUTC, and OUTD OXFE1D[3:0]).  Leading Edge Blanking Time (ns)  0 40			

0

1

1

1

0

1

400

600 800

current-limit

debounce time

These bits set the CS1 cycle-by-cycle current-limit debounce time. This is the minimum time that the CS1 signal must be constantly above the CS1 cycle-by-cycle current-limit reference before the PWM outputs are shut down. When this happens, the selected PWM outputs can be disabled for the remainder of the switching cycle.

Bit 1	Bit 0	Debounce Time (ns)
0	0	0
0	1	40
1	0	80
1	1	120

## **VOLTAGE SENSE AND LIMIT SETTING REGISTERS**

Table 130. Register 0xFE20—V	VS	Gain	Trim
------------------------------	----	------	------

Bits	Bit Name/Function	R/W	Description
7	Trim polarity	R/W	0 = positive gain is introduced.
			1 = negative gain is introduced.
[6:0]	VS gain trim	R/W	These bits set the amount of gain trim that is applied to the VS ADC reading. This register trims the voltage reading in the READ_VOUT command after the VOUT_CAL_OFFSET trimming is completed. This register is trimmed until the READ_VOUT reading in the register exactly matches the output voltage measurement result.

## Table 131. Register 0xFE25—Pre-Bias Start-Up Enable

Bits	Bit Name/Function	R/W	Description
7	Pre-bias startup enable	R/W	Setting this bit enables the pre-bias start-up function. If it is enabled, the soft start ramp starts from the current output voltage. The initial PWM modulation value is generated based on the following: the Register 0xFE39 setting, the sensed $V_{\text{OUT}}$ value, and the sensed $V_{\text{IN}}$ value. To introduce the $V_{\text{IN}}$ value for initial modulation calculation, Register 0xFE6C[1] = 1, unless closed-loop input voltage feedforward operation mode is in use.
[6:0]	Reserved	R/W	Reserved.

# Table 132. Register 0xFE26—VOUT\_OV\_FAULT Flag Debounce

Bits	Bit Name/Function	R/W	Description				
[7:6]	VOUT_OV_FAULT	R/W	These bits set the VOUT_OV_FAULT flag debounce time.				
	flag debounce		Bit 7	Bit 6	Typical Debounce Time (μs)		
			0	0	0		
			0	1	1		
			1	0	2		
			1	1	8		
[5:0]	Reserved	R/W	Reserve	d			

# Table 133. Register 0xFE28—VF Gain Trim

Bits	Bit Name/Function	R/W	Description	
7	Trim polarity	R/W	0 = positive gain is introduced.	
			1 = negative gain is introduced.	
[6:0]	VF trim	R/W	These bits set the amount of gain trim that is applied to the VF ADC reading. This register trims the voltage at the VF pin for external resistor tolerances. When there is 1 V on the VF pin, this register is trimmed until the VF value register reads 1280 decimal (0x500).	

## Table 134. Register 0xFE29—VIN\_ON and VIN\_OFF Delay

			011 11111111111111111111111111111111111		· ··/		
Bits	Bit Name/Function	R/W	Description	Description			
[7:6]	Reserved	R/W	Reserved				
5	VIN_UV_FAULT enable	R/W	Setting this	bit enable	es the VIN_ON value and the VIN_OFF value used to generate the VIN_UV_FAULT flag.		
4	Power conversion	R/W	Sets the delay time from when the VIN_LOW flag is set to when the power conversion sto				
	stop delay		0 = 0  ms.				
			1 = 1 ms.				
[3:2]	Power conversion	R/W	Sets the delay time from the clearing of the VIN_LOW flag to the start of the power conversion.				
	start delay		Bit 3	Bit 2	Delay Time (ms)		
			0	0	0		
			0	1	10		
			1	0	40		
			1	1	80		
[1:0]	VIN_UV_FAULT flag	R/W	When Bit 5	is set, set	s the VIN_UV_FAULT flag debounce time.		
	debounce		Bit 1	Bit 0	Typical Debounce Time (ms)		
			0	0	0		
			0	1	2.5		
			1	0	10		
			1	1	100		

Rev. A | Page 88 of 108

## **TEMPERATURE SENSE AND PROTECTION SETTING REGISTERS**

## Table 135. Register 0xFE2A—RTD Gain Trim

Bits	Bit Name/Function	R/W	Description
7	Gain polarity	R/W	Setting this bit to 1 means that negative gain is introduced. Setting this bit to 0 means that positive gain is introduced.
[6:0]	RTD gain trim	R/W	This value calibrates the RTD sensing gain.

## Table 136. Register 0xFE2B—RTD Offset Trim (MSBs)

Bits	Bit Name/Function	R/W	Description
[7:3]	Reserved	R/W	Reserved.
2	RTD current source disable	R/W	Setting this bit to 1, plus the writing value 0x00 to register 0xFE2D, disables the RTD current source.
1	Trim polarity	R/W	Setting this bit to 1 means that negative offset is introduced. Setting this bit to 0 means that positive offset is introduced.
0	RTD offset trim, MSB	R/W	This bit, together with Register 0xFE2C as the LSBs, sets the amount of offset trim that is applied to the RTD ADC reading.

# Table 137. Register 0xFE2C—RTD Offset Trim (LSBs)

Bits	Bit Name/Function	R/W	Description
[7:0]	RTD offset trim, LSBs	R/W	These eight bits, together with Bit 0 in Register 0xFE2B as the MSB, set the amount of offset trim that is applied to the RTD ADC reading.

## Table 138. Register 0xFE2D—RTD Current Source Settings

					0
Bits	Bit Name/Function	R/W	Description		
[7:6]	RTD current setting	R/W	These bits set the size of the current source on the RTD pin.		
			Bit 7	Bit 6	Current Source (µA)
			0	0	10
			0	1	20
			1	0	30
			1	1	40
[5:0]	RTD current trim	R/W			used to trim the current source on the RTD pin. Each LSB corresponds to 160 nA, he RTD current setting selected in Bits[7:6].

## Table 139. Register 0xFE2F—OT Hysteresis Settings

Bits	Bit Name/Function	R/W	Descrip	Description		
[7:3]	Reserved	R/W	Reserve	Reserved.		
2	OT_WARNING flag	R/W	This bit sets the OT_WARNING flag debounce time.			
	debounce		0 = sets	the flag a	ctions debounce time to 100 ms.	
			1 = sets	the flag a	ctions debounce time to 0 ms.	
[1:0]	OT hysteresis	R/W	These bits set the OT hysteresis. Due to the negative temperature coefficient of the NTC thermistor or analog temperature sensor, the OT_FAULT flag clearing voltage threshold is programmed with a voltage greater than the OT_FAULT flag setting voltage threshold.			
			Bit 1	Bit 0	OT Hysteresis	
			0	0	OT hysteresis = 12.5 mV (4 LSBs)	
			0	1	OT hysteresis = 25 mV (8 LSBs)	
			1	0	OT hysteresis = 37.5 mV (12 LSBs)	
			1	1	OT hysteresis = 50 mV (16 LSBs)	

#### **DIGITAL COMPENSATOR AND MODULATION SETTING REGISTERS**

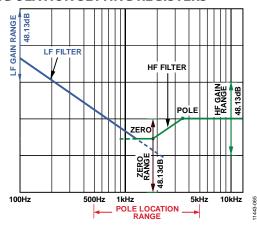


Figure 66. Digital Compensator Programmability

## Table 140. Register 0xFE30—Normal Mode Compensator Low Frequency Gain Settings

			1 1 7
Bits	Bit Name/Function	R/W	Description
[7:0]	Normal mode low	R/W	This register determines the low frequency gain of the digital compensator in normal mode. It is
	frequency gain		programmable over a 48.13 dB range. See Figure 66.

## Table 141. Register 0xFE31—Normal Mode Compensator Zero Settings

Bits	Bit Name/Function	R/W	Description
[7:0]	Normal mode	R/W	This register determines the position of the zero of the digital compensator in normal mode.
	zero settings		See Figure 66.

## Table 142. Register 0xFE32—Normal Mode Compensator Pole Settings

Bits	Bit Name/Function	R/W	Description
[7:0]	Normal mode	R/W	This register determines the position of the pole of the digital compensator in normal mode.
	pole settings		See Figure 66.

#### Table 143. Register 0xFE33—Normal Mode Compensator High Frequency Gain Settings

Bits	Bit Name/Function	R/W	Description		
[7:0]	Normal mode high	R/W	This register determines the high frequency gain of the digital compensator in normal mode. It is		
	frequency gain		programmable over a 48.13 dB range. See Figure 66.		

#### Table 144. Register 0xFE34—Light Load Mode Compensator Low Frequency Gain Settings

Bits	Bit Name/Function	R/W	Description		
[7:0]	Light load mode low	R/W	This register determines the low frequency gain of the digital compensator in light load mode and		
	frequency gain		deep light load mode. It is programmable over a 48.13 dB range. See Figure 66.		

## Table 145. Register 0xFE35—Light Load Mode Compensator Zero Settings

Bits	Bit Name/Function	R/W	Description			
[7:0]	Light load mode	R/W	This register determines the position of the zero of the digital compensator in light load mode and			
	zero setting		deep light load mode. See Figure 66.			

## Table 146. Register 0xFE36—Light Load Mode Compensator Pole Settings

Bits	Bit Name/Function	R/W	Description
[7:0]	Light load mode	R/W	This register determines the position of the pole of the digital compensator in light load mode and
	pole setting		deep light load mode. See Figure 66.

## Table 147. Register 0xFE37—Light Load Mode Compensator High Frequency Gain Settings

Bits	Bit Name/Function	R/W	Description
[7:0]	Light load mode	R/W	This register determines the high frequency gain of the digital compensator in light load mode and
	high frequency gain		deep light load mode. It is programmable over a 48.13 dB range. See Figure 66.

Bits	Bit Name/Function	R/W	Description
[7:0]	CS1 threshold for volt-second balance	R/W	This register sets the CS1 threshold to enable volt-second balance control. The volt-second balance control function is activated only if the CS1 value is greater than this threshold value. Each LSB is 6.25 mV.

# Table 149. Register 0xFE39—Nominal Modulation Value for Pre-Bias Startup

Bits	Bit Name/Function	R/W	Description				
[7:0]	Nominal modulation value for pre-bias start-up function	R/W	These bits set the nominal modulation value when the input voltage and the output voltage are in nominal conditions. It is used to calculate the initial modulation value, based on the sensed $V_{\text{OUT}}$ value and the sensed $V_{\text{IN}}$ value, for the pre-bias startup. If Register 0xFE6C[1] is cleared, the input voltage is always regarded as the nominal input condition unless closed-loop feedforward operation is in use.				
			Switching Frequency Range (kHz) Resolution Corresponding to LSB (ns)				
			49 to 87 80				
			97.5 to 184 40				
			195.5 to 379 20				
			390.5 to 625	10			

## Table 150. Register 0xFE3A—Constant Current Speed and SR Driver Delay

1 4010	Too. Register our Estr	00110	instant Carrent opera and on Differ Delay				
Bits	Bit Name/Function	R/W	Descrip	Description			
[7:6] VS voltage change rate during constant current mode		R/W	These bits set the VS voltage change rate when operating in constant current mode. The basic change rate for a 9-bit CS2 averaging speed is 1.18 mV/ms. The basic change rate for a 7-bit CS2 averaging speed is 4.72 mV/ms. These two bits set the change rate of the output voltage when operating in constant current mode.  For example, in a 12 V output system, if Register 0xFE1B[4] = 1 and Register 0xFE3A[7:6] = 11, the output voltage change rate is  4.72 mV/ms × 8 × 12 = 453 mV/ms				
			Bit 7	Bit 6	Change Rate (mV/ms)		
			0	0	1		
			0	1	2		
		1	0	4			
			1	1	8		
[5:0]	SR gate drive delay	R/W	These b	its set the	SR gate drive delay in steps of 5 ns. The maximum delay is 315 ns.		

## Table 151. Register 0xFE3B—PWM 180° Phase Shift Settings

			8
Bits	Bit Name/Function	R/W	Description
7	Volt-second balance leading edge blanking	R/W	Setting this bit means that CS1 is blanked for volt-second balance calculations at the rising edge of those PWMs selected for volt-second balance. The blanking time is the same as for the CS1 cycle-by-cycle current-limit setting.
6	Volt-second balance 50% blanking of each phase	R/W	Setting this bit limits the sampling period for the current on CS1 to less than 50% of a half cycle.
5	SR2 180° phase shift	R/W	Setting this bit adds a 180° phase shift for the timing of the SR2 edges.
4	SR1 180° phase shift	R/W	Setting this bit adds a 180° phase shift for the timing of the SR1 edges.
3	OUTD 180° phase shift	R/W	Setting this bit adds a 180° phase shift for the timing of the OUTD edges.
2	OUTC 180° phase shift	R/W	Setting this bit adds a 180° phase shift for the timing of the OUTC edges.
1	OUTB 180° phase shift	R/W	Setting this bit adds a 180° phase shift for the timing of the OUTB edges.
0	OUTA 180° phase shift	R/W	Setting this bit adds a 180° phase shift for the timing of the OUTA edges.

Figure 67 and Register 0xFE3C describe the modulation limit settings.

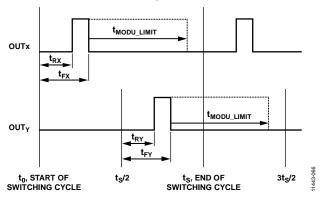


Figure 67. Setting Modulation Limits

Table 152. Register 0xFE3C—Modulation Limit

Bits	Bit Name/Function	R/W	Description		
[7:0]	Modulation limit	R/W	This register sets the modulation limit, tMODU_LIMIT (maximum duty cycle). The modulation limit is the maximum time variation for the modulated edges from the default timing (see Figure 67). The step size of an LSB depends on the switching frequency.  Switching Frequency Range (kHz) LSB Step Size (ns)		
			49 to 87	80	
			97.5 to 184	40	
			195.5 to 379	20	
			390.5 to 625	10	

Table 153. Register 0xFE3D—Feedforward and Soft Start Filter Gain

Bits	Bit Name/Function	R/W	Descrip	otion		
7	Soft start enable of open-loop input voltage feedforward	R/W	Setting this bit enables the soft start procedure of the open-loop input voltage feedforward operation.			
	operation		Bit 6 sh	ould be	set if this function is used.	
6	Open-loop input voltage	R/W	0 = ope	n-loop ii	nput voltage feedforward operation is disabled.	
	feedforward operation enable		1 = ope	n-loop ii	nput voltage feedforward operation is enabled.	
5	High frequency ADC debounce	R/W	This bit	sets the	debounce time for detecting the settling of the VS high frequency ADC.	
	time		Bit 4 m	ust be se	t to 1 to enable this function.	
			0 = 5  m	s debou	nce time.	
	1 = 10 ms d				unce time.	
4	High frequency ADC debounce	R/W	Setting this bit enables a debounce time for detecting the settling of the VS high frequency			
	enable		ADC at the end of a soft start. The debounce time is set using Bit 5.			
3	Feedforward ADC selection	R/W	Always set this bit to select the 11-bit VF ADC (factory default setting).			
2	Feedforward enable	R/W	This bit enables or disables feedforward control during closed-loop operation.			
			0 = closed-loop input voltage feedforward control is disabled.			
			1 = closed-loop input voltage feedforward control is enabled.			
[1:0]	Soft start filter gain	R/W	These bits set the soft start gain of the soft start filter.			
			Bit 1 Bit 0 Soft Start Filter Gain			
			0	0	1	
			0	1	2	
			1	0	4	
			1	1	8	

## **PWM OUTPUTS TIMING REGISTERS**

Figure 68 and Register 0xFE3E to Register 0xFE53 describe the implementation and programming of the six PWM signals that are generated by the ADP1051.

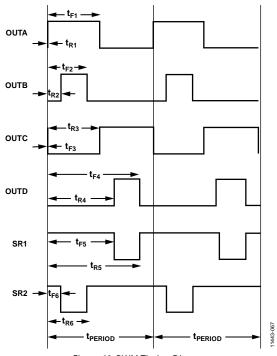


Figure 68. PWM Timing Diagram

Table~154.~Register~0xFE3E/41/44/47/4A/4D-OUTA/OUTB/OUTC/OUTD/SR1/SR2~Rising~Edge~Timing~Additional to the control of the co

Bits	Bit Name/Function	R/W	Description
[7:0]	Rising edge timing, t <sub>Rx</sub> , MSBs	R/W	This register contains the eight MSBs of the 12-bit t <sub>Rx</sub> time. This value is always used with the top four bits of Register 0xFE40, Register 0xFE43, Register 0xFE46, Register 0xFE49, Register 0xFE4C, and Register 0xFE4F, which contain the four LSBs of the t <sub>Rx</sub> time.  t <sub>Rx</sub> represents t <sub>R1</sub> , t <sub>R2</sub> , t <sub>R3</sub> , t <sub>R4</sub> , t <sub>R5</sub> , and t <sub>R6</sub> . Each LSB corresponds to 5 ns resolution.

Table 155. Register 0xFE3F/42/45/48/4B/4E—OUTA/OUTB/OUTC/OUTD/SR1/SR2 Falling Edge Timing

	U		
Bits	Bit Name/Function	R/W	Description
[7:0]	Falling edge timing, t <sub>Fx</sub> , MSBs	R/W	This register contains the eight MSBs of the 12-bit $t_{\rm Fx}$ time. This value is always used with the bottom four bits of Register 0xFE40, Register 0xFE43, Register 0xFE46, and Register 0xFE49, as well as Register 0xFE4C and Register 0xFE4F, which contain the four LSBs of the $t_{\rm Fx}$ time. $t_{\rm Fx}$ represents $t_{\rm F1}$ , $t_{\rm F2}$ , $t_{\rm F3}$ , $t_{\rm F4}$ , $t_{\rm F5}$ , and $t_{\rm F6}$ . Each LSB corresponds to 5 ns resolution.

## Table 156. Register 0xFE40/43/46/49/4C/4F—OUTA/OUTB/OUTC/OUTD/SR1/SR2 Rising and Falling Edge Timing (LSBs)

Bits	Bit Name/Function	R/W	Description
[7:4]	Rising edge timing, t <sub>Rx</sub> , LSBs	R/W	These bits contain the four LSBs of the 12-bit t <sub>Rx</sub> time. This value is always used with the eight bits of Register 0xFE3E, Register 0xFE41, Register 0xFE44, and Register 0xFE47, as well as Register 0xFE4A and Register0xFE4D, which contain the eight MSBs of the t <sub>Rx</sub> time.  t <sub>Rx</sub> represents t <sub>R1</sub> , t <sub>R2</sub> , t <sub>R3</sub> , t <sub>R4</sub> , t <sub>R5</sub> , and t <sub>R6</sub> . Each LSB corresponds to 5 ns resolution.
[3:0]	Falling edge timing, t <sub>Fx</sub> , LSBs	R/W	These bits contain the four LSBs of the 12-bit $t_{\rm Fx}$ time. This value is always used with the eight bits of Register 0xFE3F, Register 0xFE42, Register 0xFE45, and Register 0xFE48, as well as Register 0xFE4B and Register 0xFE4E, which contain the eight MSBs of the $t_{\rm Fx}$ time. $t_{\rm Fx}$ represents $t_{\rm F1}$ , $t_{\rm F2}$ , $t_{\rm F3}$ , $t_{\rm F4}$ , $t_{\rm F5}$ , and $t_{\rm F6}$ . Each LSB corresponds to 5 ns resolution.

Bits	Bit Name/Function	R/W	Description
7	OUTB t <sub>R2</sub> modulation enable	R/W	$0 = \text{no PWM modulation of the } t_{R2} \text{ edge.}$
			$1 = PWM$ modulation acts on the $t_{R2}$ edge.
6	OUTB t <sub>R2</sub> modulation sign	R/W	$0 = positive sign.$ Increase of PWM modulation moves $t_{R2}$ to the right.
			$1 = \text{negative sign. Increase of PWM modulation moves } t_{R2}$ to the left.
5	OUTB t <sub>F2</sub> modulation enable	R/W	$0 = \text{no PWM modulation of the } t_{F2}$ edge.
			1 = PWM modulation acts on the t <sub>F2</sub> edge.
4	OUTB t <sub>F2</sub> modulation sign	R/W	$0 = positive sign.$ Increase of PWM modulation moves $t_{F2}$ to the right.
			$1 = \text{negative sign. Increase of PWM modulation moves } t_{F2}$ to the left.
3	OUTA t <sub>R1</sub> modulation enable	R/W	$0 = \text{no PWM modulation of the } t_{R1}$ edge.
			1 = PWM modulation acts on the t <sub>R1</sub> edge.
2	OUTA t <sub>R1</sub> modulation sign	R/W	$0 = positive sign.$ Increase of PWM modulation moves $t_{R1}$ to the right.
			$1 = \text{negative sign. Increase of PWM modulation moves } t_{R1}$ to the left.
1	OUTA t <sub>F1</sub> modulation enable	R/W	$0 = \text{no PWM modulation of the } t_{F1}$ edge.
			1 = PWM modulation acts on the t <sub>F1</sub> edge.
0	OUTA t <sub>F1</sub> modulation sign	R/W	$0 = positive sign.$ Increase of PWM modulation moves $t_{F1}$ to the right.
			$1 = \text{negative sign. Increase of PWM modulation moves } t_{F1}$ to the left.

# Table 158. Register 0xFE51—OUTC and OUTD Modulation Settings

Bits	Bit Name/Function	R/W	Description
7	OUTD t <sub>R4</sub> modulation enable	R/W	$0 = \text{no PWM modulation of the } t_{R4} \text{ edge.}$
			$1 = PWM$ modulation acts on the $t_{R4}$ edge.
6	OUTD t <sub>R4</sub> modulation sign	R/W	$0 = positive sign.$ Increase of PWM modulation moves $t_{R4}$ to the right.
			$1 = $ negative sign. Increase of PWM modulation moves $t_{R4}$ to the left.
5	OUTD t <sub>F4</sub> modulation enable	R/W	$0 = \text{no PWM modulation of the } t_{F4} \text{ edge.}$
			$1 = PWM$ modulation acts on the $t_{F4}$ edge.
4	OUTD t <sub>F4</sub> modulation sign	R/W	$0 = positive sign.$ Increase of PWM modulation moves $t_{F4}$ to the right.
			$1 = $ negative sign. Increase of PWM modulation moves $t_{F4}$ to the left.
3	OUTC t <sub>R3</sub> modulation enable	R/W	$0 = \text{no PWM modulation of the } t_{R3} \text{ edge.}$
			$1 = PWM \text{ modulation acts on the } t_{R3} \text{ edge.}$
2	OUTC t <sub>R3</sub> modulation sign	R/W	$0 = positive sign.$ Increase of PWM modulation moves $t_{R3}$ to the right.
			$1 = \text{negative sign. Increase of PWM modulation moves } t_{R3}$ to the left.
1	OUTC t <sub>F3</sub> modulation enable	R/W	$0 = \text{no PWM modulation of the } t_{F3} \text{ edge.}$
			$1 = PWM$ modulation acts on the $t_{F3}$ edge.
0	OUTC t <sub>F3</sub> modulation sign	R/W	$0 = positive sign.$ Increase of PWM modulation moves $t_{F3}$ to the right.
			$1 = $ negative sign. Increase of PWM modulation moves $t_{F3}$ to the left.

# Table 159. Register 0xFE52—SR1 and SR2 Modulation Settings

Bits	Bit Name/Function	R/W	Description	
7	SR2 t <sub>R6</sub> modulation enable	R/W	$0 = \text{no PWM modulation of the } t_{R6} \text{ edge.}$	
			$1 = PWM \mod \text{ulation acts on the } t_{R6} = \text{edge}.$	
6	SR2 t <sub>R6</sub> modulation sign	R/W	$0 = positive sign.$ Increase of PWM modulation moves $t_{R6}$ to the right.	
			$1 = \text{negative sign. Increase of PWM modulation moves } t_{R6}$ to the left.	
5	SR2 t <sub>F6</sub> modulation enable	R/W	$0 = \text{no PWM modulation of the } t_{F6} \text{ edge.}$	
			1 = PWM modulation acts on the t <sub>F6</sub> edge.	
4	SR2 t <sub>F6</sub> modulation sign	R/W	$0 = positive sign.$ Increase of PWM modulation moves $t_{F6}$ to the right.	
			$1 = $ negative sign. Increase of PWM modulation moves $t_{F6}$ to the left.	
3	SR1 t <sub>R5</sub> modulation enable	R/W	$0 = \text{no PWM modulation of the } t_{RS} \text{ edge.}$	
			$1 = PWM$ modulation acts on the $t_{RS}$ edge.	
2	SR1 t <sub>R5</sub> modulation sign	R/W	$0 = positive sign.$ Increase of PWM modulation moves $t_{RS}$ to the right.	
			$1 = \text{negative sign. Increase of PWM modulation moves } t_{RS}$ to the left.	
1	SR1 t <sub>F5</sub> modulation enable	R/W	$0 = \text{no PWM modulation of the } t_{F5} \text{ edge.}$	
			$1 = PWM$ modulation acts on the $t_{F5}$ edge.	
0	SR1 t <sub>F5</sub> modulation sign	R/W	$0 = positive sign.$ Increase of PWM modulation moves $t_{FS}$ to the right.	
			$1 = \text{negative sign. Increase of PWM modulation moves } t_{FS}$ to the left.	

Table 160. Register 0xFE53—PWM Output Disable

Bits	Bit Name/Function	R/W	Description
[7:6]	Reserved	R/W	Reserved.
5	SR2 disable	R/W	Setting this bit disables the SR2 output.
4	SR1 disable	R/W	Setting this bit disables the SR1 output.
3	OUTD disable	R/W	Setting this bit disables the OUTD output.
2	OUTC disable	R/W	Setting this bit disables the OUTC output.
1	OUTB disable	R/W	Setting this bit disables the OUTB output.
0	OUTA disable	R/W	Setting this bit disables the OUTA output.

## **VOLT-SECOND BALANCE CONTROL REGISTERS**

Table 161. Register 0xFE54—Volt-Second Balance Control General Settings

Bits	Bit Name/Function	R/W	Descrip	otion	
7	Volt-second balance enable control	R/W	Setting	this bit e	nables volt-second balance control.
6	Volt-second balance control source selection, OUTD	R/W			he OUTD rising edge is selected as the start of the integration period balance control.
5	Volt-second balance control source selection, OUTC	R/W			OUTC rising edge is selected as the start of the integration period for ance control.
4	Volt-second balance control source selection, OUTB	R/W			OUTB rising edge is selected as the start of the integration period for ance control.
3	Volt-second balance control source selection, OUTA	R/W			OUTA rising edge is selected as the start of the integration period for ance control.
2	Volt-second balance control limit	R/W	This bit 0 = ±16 1 = ±80	0 ns.	maximum amount of modulation from the volt-second control circuit.
[1:0]	Volt-second balance control gain	R/W	a factor volt-sec	of 64. Wond bala	e gain of the volt-second balance control. The gain can be changed by hen these bits are set to 00, it takes approximately 700 ms to achieve ance. When these bits are set to 11, it takes approximately 10 ms to ond balance.
			Bit 1	Bit 0	Volt-Second Balance Loop Gain
			0	0	1
			0	1	4
			1	0	16
			1	1	64

Table 162. Register 0xFE55—Volt-Second Balance Control on OUTA and OUTB

Bits	Bit Name/Function	R/W	Description
7	t <sub>R2</sub> balance setting	R/W	Setting this bit enables modulation from balancing control on the OUTB rising edge, $t_{R2}$ .
6	t <sub>R2</sub> balance direction	R/W	$0 = positive sign.$ Increase of balancing control modulation moves $t_{R2}$ right.
			$1 = \text{negative sign. Increase of balancing control modulation moves } t_{R2}$ left.
5	t <sub>F2</sub> balance setting	R/W	Setting this bit enables modulation from balancing control on the OUTB falling edge,
			t <sub>F2</sub> .
4	t <sub>F2</sub> balance direction	R/W	$0 = positive sign.$ Increase of balancing control modulation moves $t_{F2}$ right.
			$1 = $ negative sign. Increase of balancing control modulation moves $t_{F2}$ left.
3	t <sub>R1</sub> balance setting	R/W	Setting this bit enables modulation from balancing control on the OUTA rising edge,
			t <sub>R1</sub> .
2	t <sub>R1</sub> balance direction	R/W	$0 = positive sign.$ Increase of balancing control modulation moves $t_{R1}$ right.
			$1 = $ negative sign. Increase of balancing control modulation moves $t_{R1}$ left.
1	t <sub>F1</sub> balance setting	R/W	Setting this bit enables modulation from balancing control on the OUTA falling edge,
			t <sub>F1</sub> .
0	t <sub>F1</sub> balance direction	R/W	$0 = positive sign.$ Increase of balancing control modulation moves $t_{F1}$ right.
			$1 = \text{negative sign. Increase of balancing control modulation moves } t_{F1}$ left.

Table 163. Register 0xFE56—Volt-Second Balance Control on OUTC and OUTD

Bits	Bit Name/Function	R/W	Description
7	t <sub>R4</sub> balance setting	R/W	Setting this bit enables modulation from balancing control on the OUTD rising edge, $t_{\rm R4}$ .
6	t <sub>R4</sub> balance setting	R/W	$0 = positive sign.$ Increase of balancing control modulation moves $t_{R4}$ right.
			$1 = negative sign.$ Increase of balancing control modulation moves $t_{R4}$ left.
5	t <sub>F4</sub> balance setting	R/W	Setting this bit enables modulation from balancing control on the OUTD falling edge, t <sub>F4</sub> .
4	t <sub>F4</sub> balance direction	R/W	$0 = positive sign.$ Increase of balancing control modulation moves $t_{F4}$ right.
			$1 = negative sign.$ Increase of balancing control modulation moves $t_{F4}$ left.
3	t <sub>R3</sub> balance setting	R/W	Setting this bit enables modulation from balancing control on the OUTC rising edge, t <sub>R3</sub> .
2	t <sub>R3</sub> balance direction	R/W	$0 = positive sign.$ Increase of balancing control modulation moves $t_{R3}$ right.
			$1 = negative sign.$ Increase of balancing control modulation moves $t_{R3}$ left.
1	t <sub>F3</sub> balance setting	R/W	Setting this bit enables modulation from balancing control on the OUTC falling edge, t <sub>F3</sub> .
0	t <sub>F3</sub> balance direction	R/W	$0 = positive sign.$ Increase of balancing control modulation moves $t_{F3}$ right.
			$1 = negative sign.$ Increase of balancing control modulation moves $t_{F3}$ left.

## Table 164. Register 0xFE57—Volt-Second Balance Control on SR1 and SR2

Bits	Bit Name/Function	R/W	Description
7	t <sub>R6</sub> balance setting	R/W	Setting this bit enables modulation from balancing control on the SR2 rising edge, t <sub>R6</sub> .
6	t <sub>R6</sub> balance direction	R/W	$0 = positive sign.$ Increase of balancing control modulation moves $t_{R6}$ right.
			$1 = \text{negative sign. Increase of balancing control modulation moves } t_{R6}$ left.
5	t <sub>F6</sub> balance setting	R/W	Setting this bit enables modulation from balancing control on the SR2 falling edge, t <sub>F6</sub> .
4	t <sub>F6</sub> balance direction	R/W	$0 = positive sign.$ Increase of balancing control modulation moves $t_{F6}$ right.
			$1 = \text{negative sign. Increase of balancing control modulation moves } t_{F6}$ left.
3	t <sub>R5</sub> balance setting	R/W	Setting this bit enables modulation from balancing control on the SR1 rising edge, t <sub>R5</sub> .
2	t <sub>R5</sub> balance direction	R/W	0 = positive sign. Increase of balancing control modulation moves t <sub>RS</sub> right.
			$1 = \text{negative sign. Increase of balancing control modulation moves } t_{RS}$ left.
1	t <sub>F5</sub> balance setting	R/W	Setting this bit enables modulation from balancing control on the SR1 falling edge, t <sub>F5</sub> .
0	t <sub>F5</sub> balance direction	R/W	0 = positive sign. Increase of balancing control modulation moves t <sub>F5</sub> right.
			$1 = \text{negative sign. Increase of balancing control modulation moves } t_{FS}$ left.

# **DUTY CYCLE READING SETTING REGISTERS**

## Table 165. Register 0xFE58—Duty Cycle Reading Settings

Bits	Bit Name/Function	R/W	Description
[7:6]	Reserved	R/W	Reserved.
5	OUTD duty cycle reporting	R/W	1 = READ_DUTY_CYCLE reports OUTD duty cycle value.
4	OUTC duty cycle reporting	R/W	1 = READ_DUTY_CYCLE reports OUTC duty cycle value.
3	OUTB duty cycle reporting	R/W	1 = READ_DUTY_CYCLE reports OUTB duty cycle value.
2	OUTA duty cycle reporting	R/W	1 = READ_DUTY_CYCLE reports OUTA duty cycle value.
1	Duty cycle reporting for phase-shifted topology	R/W	Setting this bit enables duty cycle reporting for phase-shifted full bridge topology. The duty cycle value represents the overlapping of OUTA and OUTD in the phase-shifted full bridge topology.
0	Polarity setting for input voltage compensation	R/W	Setting this bit applies an offset on the input voltage reading, READ_VIN, based on the reading of the input current, READ_IIN. The compensation multipler is set in Register 0xFE59. It is used to compensate the voltage drop caused by the current conduction.  0 = positive polarity compensation.
			1 = negative polarity compensation.
			i = negative polarity compensation.

# Table 166. Register 0xFE59—Input Voltage Compensation Multiplier

Bits	Bit Name/Function	R/W	Description
[7:0]	Input voltage compensation multiplier	R/W	These bits specify the multiplier, N, for the input voltage compensation coefficient. The compensation equation is N × (Register 0xFEA7[15:4] value) $\div$ 2 <sup>11</sup> , and the result is added to
			Register 0xFEAC[15:5]. The compensation polarity is set by Register 0xFE58[0].

## **ADAPTIVE DEAD TIME COMPENSATION REGISTERS**

Table 167. Register 0xFE5A—Adaptive Dead Time Compensation Threshold

Bits	Bit Name/Function	R/W	Description
[7:0]	Adaptive dead time compensation threshold	R/W	This register sets the adaptive dead time compensation threshold. The 8-bit number is compared to the 8 MSBs of the CS1 value register (Register 0xFEA7). When the CS1 current falls below this threshold, the edges of the PWM signals are affected as a linear function of the CS1 current, as programmed in Register 0xFE5B to Register 0xFE60. When the register is programmed to 0x00, the adaptive dead time compensation function is disabled.

## Table 168. Register 0xFE5B—OUTA Dead Time

Bits	Bit Name/Function	R/W	Descript	Description						
7	t <sub>R1</sub> polarity	R/W	0 = posit	0 = positive polarity; 1 = negative polarity.						
[6:4]	t <sub>R1</sub> offset multiplier	R/W		e multiplies timing at 0		ize specified by Register $0xFE66[2:0]$ to determine the $t_{\mbox{\scriptsize R1}}$ offset from rrent.				
			Bit 6	Bit 5	Bit 4	Multiplier				
			0	0	0	0				
			0	0	1	1				
			0	1	0	2				
			0	1	1	3				
			1	0	0	4				
			1	0	1	5				
			1	1	0	6				
			1	1	1	7				
3	t <sub>F1</sub> polarity	R/W	0 = posit	ive polarity	; 1 = negati	ive polarity.				
[2:0]	t <sub>F1</sub> offset multiplier	R/W		e multiplies timing at 0		ize specified by Register $0xFE66[2:0]$ to determine the $t_{\text{F1}}$ offset from rrent.				
			Bit 2	Bit 1	Bit 0	Multiplier				
			0	0	0	0				
			0	0	1	1				
			0	1	0	2				
			0	1	1	3				
			1	0	0	4				
			1	0	1	5				
			1	1	0	6				
		1	1	1	1	7				

# Table 169. Register 0xFE5C—OUTB Dead Time

	10): Register our Ese									
Bits	Bit Name/Function	R/W	Descript	Description						
7	t <sub>R2</sub> polarity	R/W	0 = positi	0 = positive polarity; 1 = negative polarity.						
[6:4]	t <sub>R2</sub> offset multiplier			This value multiplies the step size specified by Register 0xFE66[2:0] to determine the t <sub>R2</sub> offset from nominal timing at 0 A input current .						
			Bit 6	Bit 5	Bit 4	Multiplier				
			0	0 0 0 0 0 1 1		0				
			0			1				
			0	1	0	2				
			0	1	1	3				
			1	0	0	4				
			1	0	1	5				
			1	6						
			1 1 7							
3	t <sub>F2</sub> polarity	R/W	0 = positi	ive polarity	; 1 = negati	ive polarity.				

Bits	Bit Name/Function	R/W	Description						
[2:0]	t <sub>F2</sub> offset multiplier	R/W	This value multiplies the step size specified by Register 0xFE66[2:0] to determine the t <sub>F2</sub> offset from nominal timing at 0 A input current.						
			Bit 2 Bit 1 Bit 0 Multiplier						
			0 0 0						
			0 0 1 1						
			0	1	0	2			
			0	1	1	3			
			1	0	0	4			
			1     0     1     5       1     1     0     6						
			1	1	1	7			

# Table 170. Register 0xFE5D—OUTC Dead Time

Bits	Bit Name/Function	R/W	Descript	ion						
7	t <sub>R3</sub> polarity	R/W	0 = posit	0 = positive polarity; 1 = negative polarity.						
[6:4]	t <sub>R3</sub> offset multiplier		This value multiplies the step size specified by Register 0xFE66[2:0] to determine the t <sub>R3</sub> offset from nominal timing at 0 A input current.							
			Bit 6	Bit 5	Bit 4	Multiplier				
			0	0	0	0				
			0	0	1	1				
			0	1	0	2				
			0	1	1	3				
			1	0	0	4				
			1	0	1	5				
			1	1	0	6				
			1	1	1	7				
3	t <sub>F3</sub> polarity	R/W	0 = posit	ive polarity	; 1 = negat	ive polarity.				
[2:0]	t <sub>F3</sub> offset multiplier	R/W		e multiplies timing at 0		ize specified by Register $0xFE66[2:0]$ to determine the $t_{\text{F3}}$ offset from rrent.				
			Bit 2	Bit 1	Bit 0	Multiplier				
			0	0	0	0				
			0	0	1	1				
			0	1	0	2				
			0	1	1	3				
			1	0	0	4				
			1	0	1	5				
			1	1	0	6				
			1	1	1	7				

# Table 171. Register 0xFE5E—OUTD Dead Time

Bits	Bit Name/Function	R/W	Descripti	Description						
7	t <sub>R4</sub> polarity	R/W	0 = positi	0 = positive polarity; 1 = negative polarity.						
[6:4]	t <sub>R4</sub> offset multiplier			This value multiplies the step size specified by Register 0xFE66[2:0] to determine the t <sub>R4</sub> offset from nominal timing at 0 A input current.						
			Bit 6	Bit 5	Bit 4	Multiplier				
			0 0 0							
			0 0 1 1							
			0	1	0	2				
			0	1	1	3				
			1	0	0	4				
			1	0	1	5				
			1 1 0 6							
			1	1 1 7						
3	t <sub>F4</sub> polarity	R/W	0 = positi	ve polarity;	; 1 = negati	ve polarity.				

Bits	Bit Name/Function	R/W	Description						
[2:0]	t <sub>F4</sub> offset multiplier	R/W	This value multiplies the step size specified by Register 0xFE66[2:0] to determine the t <sub>F4</sub> offset from nominal timing at 0 A input current.						
			Bit 2	Bit 1	Bit 0	Multiplier			
			0	0	0	0			
			0	0	1	1			
			0	1	0	2			
			0	1	1	3			
			1	0	0	4			
			1	0	1	5			
			1	1	0	6			
			1	1	1	7			

## Table 172. Register 0xFE5F—SR1 Dead Time

Bits	Bit Name/Function	R/W	Description	n						
7	t <sub>R5</sub> polarity	R/W	0 = positive	0 = positive polarity; 1 = negative polarity.						
[6:4]	t <sub>R5</sub> offset multiplier			This value multiplies the step size specified by Register 0xFE66[2:0] to determine the t <sub>R5</sub> offset from nominal timing at 0 A input current.						
			Bit 6	Bit 5	Bit 4	Multiplier				
			0	0	0	0				
			0	0	1	1				
			0	1	0	2				
			0	1	1	3				
			1	0	0	4				
			1	0	1	5				
			1	1	0	6				
			1	1	1	7				
3	t <sub>F5</sub> polarity	R/W	0 = positive	polarity; $1 = n$	egative polarit	y.				
[2:0]	t <sub>F5</sub> offset multiplier	R/W	This value multiplies the step size specified by Register 0xFE66[2:0]to determine the t <sub>F5</sub> offset from nominal timing at 0 A input current.							
			Bit 2	Bit 1	Bit 0	Multiplier				
			0	0	0	0				
			0	0	1	1				
			0	1	0	2				
			0	1	1	3				
			1	0	0	4				
			1	0	1	5				
			1	1	0	6				
			1	1	1	7				

# Table 173. Register 0xFE60—SR2 Dead Time

Bits	Bit Name/Function	R/W	Description							
7	t <sub>R6</sub> polarity	R/W	0 = positive	0 = positive polarity; 1 = negative polarity.						
[6:4]	t <sub>R6</sub> offset multiplier			This value multiplies the step size specified by Register 0xFE66[2:0] to determine the t <sub>R6</sub> offset from nominal timing at 0 A input current.						
			Bit 6 Bit 5 Bit 4 Multiplier							
			0	0	0	0				
			0	0	1	1				
			0	1	0	2				
			0	1	1	3				
			1	0	0	4				
			1	0	1	5				
			1 0 6							
			1 1 7							
3	t <sub>F6</sub> polarity	R/W	0 = positive	polarity; 1 = n	egative polarit	у.				

Bits	Bit Name/Function	R/W	Description							
[2:0]	t <sub>F6</sub> offset multiplier	R/W	This value multiplies the step size specified by Register 0xFE66[2:0] to determine the t <sub>F6</sub> offset from nominal timing at 0 A input current.							
			Bit 2	Bit 1	Bit 0	Multiplier				
			0	0	0	0				
			0	0	1	1				
			0	1	0	2				
			0	1	1	3				
			1	0	0	4				
			1	0	1	5				
			1	1	0	6				
			1	1	1	7				

## **OTHER REGISTER SETTINGS**

## Table 174. Register 0xFE61—GO Commands

Bits	Bit Name/Function	R/W	Description
[7:3]	Reserved	R/W	Reserved.
2	Frequency go	R/W	This bit synchronously latches the contents of Register 0x33 into the shadow registers used to calculate the switching frequency. Reading of this bit always returns 1.
1	PWM setting go	R/W	This bit synchronously latches the contents of Registers 0xFE3E to Register 0xFE53 into the shadow registers used to calculate the PWM edge timing. Reading this bit always returns 1.
0	Reserved	R/W	Reserved.

## Table 175. Register 0xFE62—Customized Register

Bits	Bit Name/Function	R/W	Description
[7:0]	Customized register	R/W	These bits are available to the user to store customized information.

## Table 176. Register 0xFE63—Modulation Reference MSBs Setting for Open-Loop Input Voltage Feedforward Operation

Bits	Bit Name/Function	R/W	Description	Description					
[7:0]	Modulation reference setting	R/W		register sets the eight MSBs of the modulation reference in open-loop feedforward operation mode. step size of an LSB depends on the switching frequency.					
	MSBs		Switching Frequency Range (kHz)	LSB Step Size (ns)					
			49 to 87	80					
			97.5 to 184	40					
			195.5 to 379	20					
			390.5 to 625	10					

## Table 177. Register 0xFE64—Modulation Reference LSBs Setting for Open-Loop Input Voltage Feedforward Operation

Bits	Bit Name/Function	R/W	Description				
[7:0]	Modulation reference setting	R/W	This register sets the eight LSBs of the modulation reference in open-loop feedforward operation mode. The step size of an LSB depends on the switching frequency.				
LSBs		Switching Frequency Range (kHz)	LSB Step Size (ps)				
			49 to 87	312.5			
		97.5 to 184	156.25				
			195.5 to 379	78.125			
			390.5 to 625	39.0625			

Table 179	Register 0xFE65-	Current Value	Undata Data	Satting
Table 1/8.	Register ux FE05-	-Curreni vaine	Obdate Kat	e Selling

	· ·			-	· · · · · · · · · · · · · · · · · · ·			
Bits	Bit Name/Function	R/W	Descrip	otion				
[7:2]	Reserved	R/W	Reserve	Reserved.				
[1:0]	Current value update rate	R/W		These bits specify the update rate for the current value of CS1 (READ_IIN command, Register 0x89) and CS2 (READ_IOUT command, Register 0x8C). By default, the current values are updated every 10 ms.				
			Bit 1	Bit 0	CS1, CS2 Value Update Rate (ms)			
			0	0	10 (defaut)			
			0	1	52			
			1	0	105			
			1	1	210			

# Table 179. Register 0xFE66—Adaptive Dead Time Compensation Configuration

Bits	Bit Name/Function	R/W	Descrip	otion				
[7:6]	Averaging period	R/W	These bits specify the averaging period for the CS1 current used to set the adaptive dead time. It is recommended that the averaging time be set to a value much greater than any transient condition.					
			Bit 7	Bit 6	Averagir	ng Period (ms)		
			0	0	2.5			
			0	1	1.2			
			1	0	0.6			
			1	1	0.3			
[5:3]	Update rate	R/W	The adaptive dead time compensation algorithm adjusts dead time in steps of 5 ns. These bits are used to program the number of PWM switching cycles between each steps. The number is calculated as $2^N + 1$ , where N is the 3-bit value specified by these bits. For example, if N = 6 (110 binary), each PWM edge is adjusted by 5 ns every $2^6 + 1 = 65$ switching cycles.					
[2:0]	Offset step size	R/W	These b	its specif	the progra	amming step size for Register 0xFE5B to Register 0xFE60, Bits[6:4] and Bits[2:0].		
			Bit 2	Bit 1	Bit 0	LSB Step Size (ns)		
			0	0	0	5		
			0	0	1	10		
			0	1	0	15		
			0	1	1	20		
			1	0	0	25		
			1	0	1	30		
			1	1	0	35		
			1	1	1	40		

# Table 180. Register 0xFE67—Open-Loop Operation Settings

Bits	Bit Name/Function	R/W	Description
7	Reserved	R	Reserved.
6	Pulse skipping mode enable	R/W	1 = enables the pulse skipping mode. If the ADP1051 requires a modulation value that is less than the threshold set by Register 0xFE69, pulse skipping is in use.
5	SR2 open-loop operation enable	R/W	This bit is set when SR2 is used in open-loop operation mode.
4	SR1 open-loop operation enable	R/W	This bit is set when SR1 is used in open-loop operation mode.
3	OUTD open-loop operation enable	R/W	This bit is set when OUTD is used in open-loop operation mode.
2	OUTC open-loop operation enable	R/W	This bit is set when OUTC is used in open-loop operation mode.
1	OUTB open-loop operation enable	R/W	This bit is set when OUTB is used in open-loop operation mode.
0	OUTA open-loop operation enable	R/W	This bit is set when OUTA is used in open-loop operation mode.

# Table 181. Register 0xFE68—Offset Setting for SR1 and SR2

Bits	Bit Name/Function	R/W	Description
[7:0]	The offset setting for SR1/SR2	R/W	If SR_RC_FAULT flag is triggered and Register $0xFE03[7:6] = 11$ , these bits set the offset value ( $t_{OFFSET}$ ) on the SR1 and SR2 rising edges. The rising edges are moved left from $t_{Rx} + t_{MODU\_LIMIT}$ by $t_{OFFSET}$ . Each step corresponds to 5 ns.

Table 182. Register 0xFE69—Pulse Skipping Mode Threshold
--

Bits	Bit Name/Function	R/W	Description
[7:0]	Pulse skipping mode	R/W	These bits set the modulation pulse width threshold for pulse skipping. Each LSB is 5 ns.
	threshold		

# Table 183. Register 0xFE6A—CS3\_OC\_FAULT\_LIMIT

Bits	Bit Name/Function	R/W	Description
[7:0]	CS3_OC_FAULT_LIMIT	R/W	The eight MSB value of the CS3 value register in Register 0xFEA9 is compared with this 8-bit
			number. If the 8 MSB value is greater, the CS3_OC_FAULT flag is set.

## Table 184. Register 0xFE6B—Modulation Threshold for OVP Selection

Bits	Bit Name/Function	R/W	Description			
[7:0]	Modulation threshold for conditional	R/W	This value sets modulation threshold for conditional OVP response. When the real-time modulation value is above this threshold, the LARGE_MODULATION flag in Register 0xFE6C[2] is set.			
	OVP responses		Switching Frequency Range (kHz)	Resolution Corresponding to LSB (ns)		
			49 to 87	80		
			97.5 to 184	40		
			195.5 to 379	20		
			390.5 to 625	10		

# Table 185. Register 0xFE6C—Modulation Flag for OVP Selection

Bits	Bit Name/Function	R/W	Description
[7:3]	Reserved	R/W	Reserved.
2	LARGE_MODULATION	R	This bit is set when the modulation value is above the threshold set in Register 0xFE6B.
1	V <sub>IN</sub> feedforward pre-bias startup	R/W	This bit is applicable only if the closed-loop feedforward operation is disabled (Register 0xFE3D[2] = 0). If the closed-loop feedforward operation is enabled, $V_{IN}$ is always included for the calculation of the initial PWM modulation value.
			1 = the initial PWM modulation value is calculated by the nominal modulation value (Register 0xFE39), the sensed $V_{IN}$ voltage, and the sensed $V_{OUT}$ voltage.
			$0 =$ the initial PWM modulation value is calculated by the nominal modulation value (Register 0xFE39) and the sensed $V_{OUT}$ voltage. The $V_{IN}$ voltage is ignored.
0	Conditional OVP	R/W	This bit sets the OVP actions when the VOUT_OV_FAULT flag is triggered.
	enable		0 = conditional OVP is disabled. The OVP action follows the PMBus VOUT_OV_FAULT_RESPONSE command (Register 0x41).
			1 = conditional OVP is enabled. If Bit 2 = 1, OVP action follows the PMBus VOUT_OV_FAULT_RESPONSE (Register 0x41). If Bit 2 = 0, OVP action follows the extended VOUT_OV_FAULT_RESPONSE action (Register 0xFE01[7:4]).

## Table 186. Register 0xFE6D—OUTA and OUTB Adjustment Reference During Synchronization

Bits	Bit Name/Function	R/W	Description
7	t <sub>R2</sub> adjustment reference	R/W	Setting this bit enables edge adjustment on the OUTB rising edge, t <sub>R2</sub>
6	t <sub>R2</sub> refers to t <sub>s</sub> or t <sub>s</sub> /2	R/W	0 = adjustment refers to ts/2.
			$1 = adjustment refers to t_s$ .
5	t <sub>F2</sub> adjustment reference	R/W	Setting this bit enables edge adjustment on the OUTB falling edge, t <sub>F2</sub> .
4	t <sub>F2</sub> refers to t <sub>S</sub> or t <sub>S</sub> /2	R/W	0 = adjustment refers to ts/2.
			1 = adjustment refers to t <sub>s</sub> .
3	t <sub>R1</sub> adjustment reference	R/W	Setting this bit enables edge adjustment on the OUTA rising edge, t <sub>R1</sub> .
2	t <sub>R1</sub> refers to t <sub>S</sub> or t <sub>S</sub> /2	R/W	0 = adjustment refers to ts/2.
			$1 = adjustment refers to t_s$ .
1	t <sub>F1</sub> adjustment reference	R/W	Setting this bit enables edge adjustment on the OUTA falling edge, t <sub>F1</sub> .
0	t <sub>F1</sub> refers to t <sub>S</sub> or t <sub>S</sub> /2	R/W	0 = adjustment refers to ts/2.
			1 = adjustment refers to t <sub>s</sub> .

Table 187. Register 0xFE6E—OUTC and OUTD Adjustment Reference During Synchronization

Bits	Bit Name/Function	R/W	Description	
7	t <sub>R4</sub> adjustment reference	R/W	Setting this bit enables edge adjustment on the OUTD rising edge, t <sub>R4</sub> .	
6	$t_{R4}$ refers to $t_S$ or $t_S/2$	R/W	$0 = adjustment refers to t_s/2.$	
			1 = adjustment refers to t <sub>s</sub> .	
5	t <sub>F4</sub> adjustment reference	R/W	Setting this bit enables edge adjustment on the OUTD falling edge, t <sub>F4</sub> .	
4	t <sub>F4</sub> refers to t <sub>5</sub> or t <sub>5</sub> /2	R/W	$0 = \text{adjustment refers to } t_s/2.$	
			1 = adjustment refers to ts.	
3	t <sub>R3</sub> adjustment reference	R/W	Setting this bit enables edge adjustment on the OUTC rising edge, $t_{R3}$ .	
2	t <sub>R3</sub> refers to t <sub>5</sub> or t <sub>5</sub> /2	R/W	$0 = adjustment refers to t_s/2.$	
			1 = adjustment refers to ts.	
1	t <sub>F3</sub> adjustment reference	R/W	Setting this bit enables edge adjustment on the OUTC falling edge, t <sub>F3</sub> .	
0	t <sub>F3</sub> refers to t <sub>5</sub> or t <sub>5</sub> /2	R/W	$0 = adjustment refers to t_s/2.$	
			1 = adjustment refers to t <sub>s</sub> .	

Table 188. Register 0xFE6F—SR1 and SR2 Adjustment Reference During Synchronization

Bits	Bit Name/Function	R/W	Description	
7	t <sub>R6</sub> adjustment reference	R/W	Setting this bit enables edge adjustment on the SR2 rising edge, $t_{R6}$ .	
6	t <sub>R6</sub> refers to t <sub>s</sub> or t <sub>s</sub> /2	o ts or ts/2 R/W $0 = \text{adjustment refers to ts/2}$ .		
			1 = adjustment refers to t <sub>s</sub> .	
5	t <sub>F6</sub> adjustment reference	R/W	Setting this bit enables edge adjustment on the SR2 falling edge, t <sub>F6</sub> .	
4	t <sub>F6</sub> refers to t <sub>S</sub> or t <sub>S</sub> /2	R/W	0 = adjustment refers to ts/2.	
			1 = adjustment refers to t <sub>s</sub> .	
3	t <sub>R5</sub> adjustment reference	R/W	Setting this bit enables edge adjustment on the SR1 rising edge, $t_{\mbox{\scriptsize RS}}$ .	
2	t <sub>R5</sub> refers to t <sub>5</sub> or t <sub>5</sub> /2	R/W	0 = adjustment refers to ts/2.	
			1 = adjustment refers to t <sub>s</sub> .	
1	t <sub>F5</sub> adjustment reference	R/W	Setting this bit enables edge adjustment on the SR1 falling edge, t <sub>Fs</sub> .	
0	t <sub>F5</sub> refers to t <sub>S</sub> or t <sub>S</sub> /2	R/W	0 = adjustment refers to ts/2.	
			1 = adjustment refers to t <sub>s</sub> .	

Register 0xFE70 to Register 0xFE9F—Reserved

# **MANUFACTURER SPECIFIC FAULT FLAG REGISTERS**

Table 189. Register 0xFEA0—Flag Register 1 and Register 0xFEA3—Latched Flag Register 1 (1 = Fault, 0 = Normal Operation)

Bits	Bit Name/Function	R/W	Description	Register	Action
7	CHIP_PASSWORD_UNLOCKED	R	Chip password is unlocked.		None
6	PGOOD	R	At least one of the following flags has been set:  VOUT_OV_FAULT, VOUT_UV_FAULT, IOUT_OC_FAULT, OT_FAULT, OT_WARNING, VIN_UV_FAULT, IIN_OC_ FAST_FAULT, SR_RC_FAULT, POWER_OFF, CRC_FAULT, SOFT_START_FILTER, or POWER_GOOD. Some of the flags are maskable according to Register 0xFE0D	0xFE0D and 0xFE0E	PG/ALT pin set low
5	IIN_OC_FAST_FAULT	R	An input overcurrent fast fault is triggered.	0xFE1F	Programmable
4	Reserved	R	eserved.		
3	CS3_OC_FAULT	R	A CS3 overcurrent fault is triggered.	0xFE6A	Programmable
2	Reserved	R	Reserved.		
1	Reserved	R	Reserved.		
0	VDD_OV	R	V <sub>DD</sub> is above the OVLO limit. The I <sup>2</sup> C/PMBus interface remains functional, but power conversion stops.	0xFE05	Programmable

Table 190. Register 0xFEA1—Flag Register 2 and Register 0xFEA4—Latched Flag Register 2 (1 = Fault, 0 = Normal Operation)

Bits	Bit Name/Function	R/W	Description	Register <sup>1</sup>	Action <sup>1</sup>
7	Reserved	R	Reserved.	N/A	N/A
6	Reserved	R	Reserved.	N/A	N/A
5	SR_RC_FAULT	R	CS2 reverse current drops below SR_RC_FAULT_LIMIT.	0xFE1A	Programmable
4	CONSTANT_CURRENT	R	Constant current mode is in use.	0xFE1A, 0xFE1B	Programmable
3	LIGHT_LOAD	R	Light load mode (CS2 current is below the light load threshold).	0xFE19	Programmable
2	VIN_UV_FAULT	R	V <sub>IN</sub> reading is below the VIN_OFF limit.	0xFE29	Programmable
1	SYNC_LOCKED	R	Cycle-by-cycle synchronization starts.  N/A		Programmable
0	FLAGIN	R	FLAGIN flag (SYNI/FLGI pin) is set.	0xFE12	Programmable

<sup>&</sup>lt;sup>1</sup> N/A means not applicable.

Table 191. Register 0xFEA2—Flag Register 3 and Register 0xFEA5—Latched Flag Register 3 (1 = Fault, 0 = Normal Operation)

Bits	Bit Name/Function	R/W	Description	Register <sup>1</sup>	Action <sup>1</sup>
7	CHIP_ID	R	In the ADP1051, this bit is 1.	N/A	N/A
6	PULSE_SKIPPIING	R	Pulse skipping mode is in use.	0xFE69	Programmable
5	ADAPTIVE_DEAD_TIME	R	Adaptive dead time compensation is in use.	0xFE66	Programmable
4	DEEP_LIGHT_LOAD	R	Deep light load mode (CS2 current is below the deep light load threshold).		Programmable
3	EEPROM_UNLOCKED	R	The EEPROM is unlocked.	N/A	None
2	CRC_FAULT	R	The EEPROM contents that were downloaded are incorrect.	N/A	Immediate shutdown
1	Modulation	R	Digital compensator output is at its minimum or maximum limit.	N/A	None
0	SOFT_START_FILTER	R	The soft start filter is in use.	N/A	None

<sup>&</sup>lt;sup>1</sup> N/A means not applicable.

Table 192. Register 0xFEA6—First Flag ID

Bits	Bit Name/Function	R/W	Descrip				
7:4]	Previous first flag ID	R		This previ			he flag that caused the previous shutdown of the powe irred before the shutdown caused by the fault identified
			Bit 3	Bit 2	Bit 1	Bit 0	First Flag
			0	0	0	0	No flag
			0	0	0	1	IIN_OC_FAST_FAULT
			0	0	1	0	IOUT_OC_FAULT
			0	0	1	1	CS3_OC_FAULT
			0	1	0	0	VOUT_OV_FAULT
			0	1	0	1	VOUT_UV_FAULT
			0	1	1	0	VIN_UV_FAULT
			0	1	1	1	FLAGIN
			1	0	0	0	SR_RC_FAULT
			1	0	0	1	OT_FAULT
			1	0	1	0	Reserved
			1	0	1	1	Reserved
			1	1	0	0	Reserved
			1	1	0	1	Reserved
			1	1	1	0	Reserved
			1	1	1	1	Reserved
[3:0]	Current first flag ID	R	These b	its return	the flag f	ault ID of t	he fault that caused the shutdown of the power supply.
			Bit 3	Bit 2	Bit 1	Bit 0	First Flag
			0	0	0	0	No flag
			0	0	0	1	IIN_OC_FAST_FAULT
			0	0	1	0	IOUT_OC_FAULT
			0	0	1	1	CS3_OC_FAULT
			0	1	0	0	VOUT_OV_FAULT
			0	1	0	1	VOUT_UV_FAULT
			0	1	1	0	VIN_UV_FAULT
			0	1	1	1	FLAGIN
			1	0	0	0	SR_RC_FAULT
			1	0	0	1	OT_FAULT
			1	0	1	0	Reserved
			1	0	1	1	Reserved
			1	1	0	0	Reserved
			1	1	0	1	Reserved
			1	1	1	0	Reserved
			1	1	1	1	Reserved

## **MANUFACTURER SPECIFIC VALUE READING REGISTERS**

## Table 193. Register 0xFEA7—CS1 Value

	· ·		
Bits	Bit Name/Function	R/W	Description
[15:4]	CS1 current value	R	This register contains 12-bit CS1 current information. The range of the CS1 input pin is from 0 V to 1.6 V. Each LSB corresponds to 390.625 $\mu$ V. At 0 V input, the value in this register is 0 decimal. The nominal voltage at this pin is 1 V. At 1 V input, the value in these bits is 0xA00 (2560 decimal). The reading is equivalent to the READ_IIN command.
[3:0]	Reserved	R	Reserved.

# Table 194. Register 0xFEA8—CS2 Value

Bits	Bit Name/Function	R/W	Description
[15:4]	CS2 voltage value	R	This register contains the 12-bit CS2 output current information. The range of the CS2 $\pm$ input pins is from 0 mV to 120 mV. Each LSB corresponds to 29.297 $\mu$ V. At 0 V input, the value in this register is 0. The reading is equivalent to the READ_IOUT command.
[3:0]	Reserved	R	Reserved.

## Table 195. Register 0xFEA9—CS3 Value

Bits	Bit Name/Function	Type	Description
[15:4]	CS3 voltage value	R	This register contains 12-bit CS3 current information calculated by using the CS1 reading and duty cycle information. Each LSB corresponds to $4\times$ the CS1 LSB in Register 0xFEA7, multiplied by the turn ratio of the main transformer, n (n = $N_{PRI}/N_{SEC}$ ).
[3:0]	Reserved	R	Reserved.

## Table 196. Register 0xFEAA—VS Value

Bits	Bit Name/Function	R/W	Description	
[15:4]	VS voltage value	R	This register contains the 12-bit VS $\pm$ output voltage information. The range of the VS $\pm$ input pins is from 0 V to 1.6 V. Each LSB corresponds to 390.625 $\mu$ V.	
			At 0 V input, the value in this register is 0. The nominal voltage at the VS+ and VS- pins is 1 V.	
			At 1 V input, the value in these bits of this register is 0xA00 (2560 decimal).	
			The reading is equivalent to the READ_VOUT command.	
[3:0]	Reserved	R	Reserved.	

## Table 197. Register 0xFEAB—RTD Value

Bits	Bit Name/Function	R/W	Description
[15:4]	RTD temperature value	emperature value R These bits contain the 12-bit RTD temperature information, as determined from the RTD p	
			The range of the RTD input pin is from 0 V to 1.6 V. Each LSB corresponds to 390.625 μV.
			At 0 V input, the value in this register is 0. The nominal voltage at the RTD pin is 1 V.
			At 1 V input, the value in these bits is 0xA00 (2560 decimal).
[3:0]	Reserved	R	Reserved.

# Table 198. Register 0xFEAC—VF Value

Bits	Bit Name/Function	R/W	Description
[15:5]	VF voltage value	R	This register contains the 11-bit VF voltage information. The range of the VF input pin is from 0 V to 1.6 V. Each LSB corresponds to 781.25 $\mu$ V.
		At 0 V input, the value in this register is 0. The nominal voltage at the VF pin is 1 V.	
			At 1 V input, the value in these bits is 0x500 (1280 decimal).
			The reading is equivalent to the READ_VIN command.
[4:0]	Reserved	R	Reserved.

# Table 199. Register 0xFEAD—Duty Cycle Value

Bits	Bit Name/Function	R/W	Description
[15:12]	Reserved	R	Reserved.
[11:0]	1:0] Duty cycle value R		This register contains the 12-bit duty cycle information. Each LSB corresponds to 0.0244% duty cycle. At 100% duty cycle, the value in these bits is 0xFFF (4095 decimal).

# Table 200. Register 0xFEAE—Input Power Value

Bits	Bit Name/Function	R/W	Description
[15:0]	Input power value	R	This register contains the 16-bit input power information. This value is the product of the input voltage value (VF) and input current value (CS1). The product of two 12-bit values is a 24-bit value, and the eight LSBs are discarded.

# Table 201. Register 0xFEAF—Output Power Value

Bits	Bit Name/Function	R/W	Description
[15:0]	Output power value	R	This register contains the 16-bit output power information. This value is the product of the output voltage value (VS) and the output current reading (CS2). The product of two 12-bit values is a 24-bit value, and the eight LSBs are discarded.

# **OUTLINE DIMENSIONS**

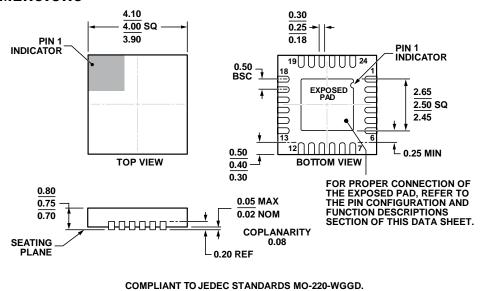


Figure 69. 24-Lead Lead Frame Chip Scale Package [LFCSP\_WQ] 4 mm × 4 mm Body, Very Very Thin Quad (CP-24-7) Dimensions shown in millimeters

#### **ORDERING GUIDE**

Model <sup>1</sup>	Temperature Range	Package Description	Package Option
ADP1051ACPZ-RL	−40°C to +125°C	24-Lead Lead Frame Chip Scale Package [LFCSP_WQ]	CP-24-7
ADP1051ACPZ-R7	−40°C to +125°C	24-Lead Lead Frame Chip Scale Package [LFCSP_WQ]	CP-24-7
ADP1051-240-EVALZ		240 W Evaluation Board for ADP1051 and ADP1050	
ADP1051DC1-EVALZ		ADP1051 Daughter Card	
ADP-I2C-USB-Z		USB to I <sup>2</sup> C Adapter	

<sup>&</sup>lt;sup>1</sup> Z = RoHS Compliant Part.

 $I^2C\ refers\ to\ a\ communications\ protocol\ originally\ developed\ by\ Philips\ Semiconductors\ (now\ NXP\ Semiconductors).$ 

